


MANUAL FOR
GREENHOUSE
ARROW 3.0

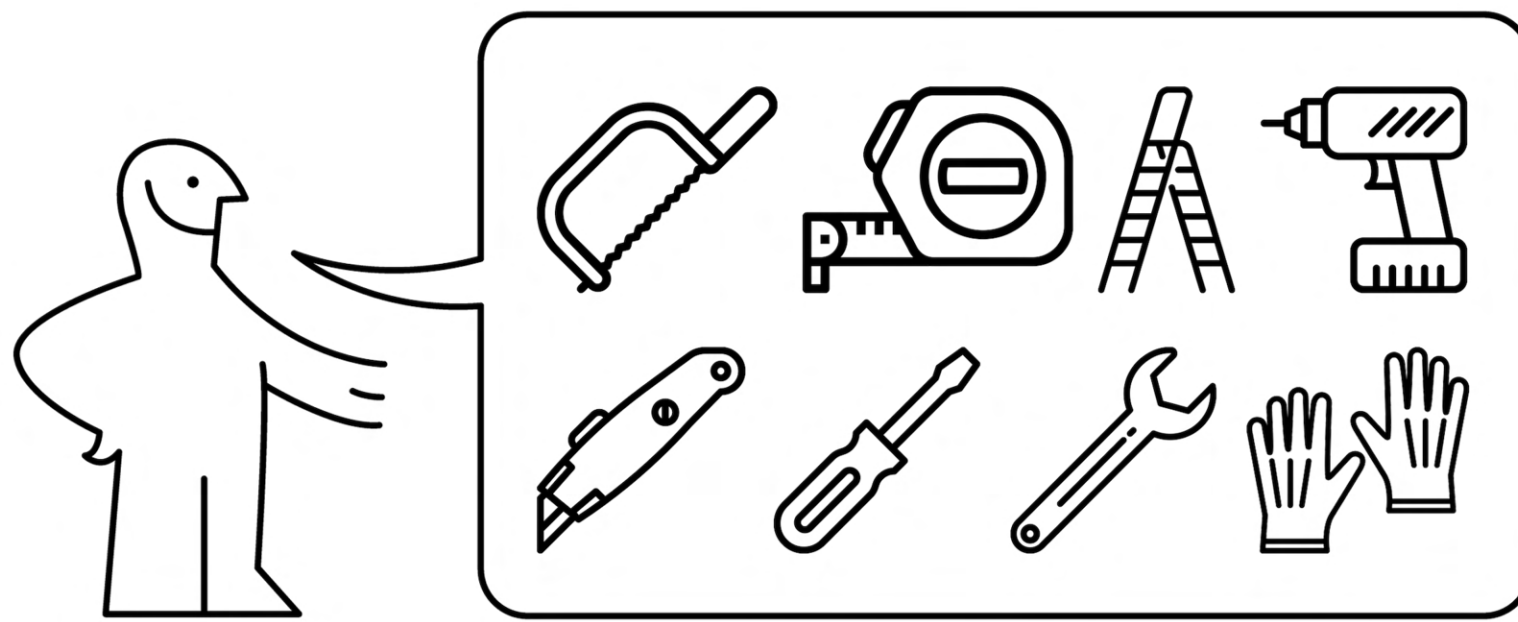



Meanings of the symbols



Repeat the step so many times




Part number




Assembly step number


Assembly example **0A**

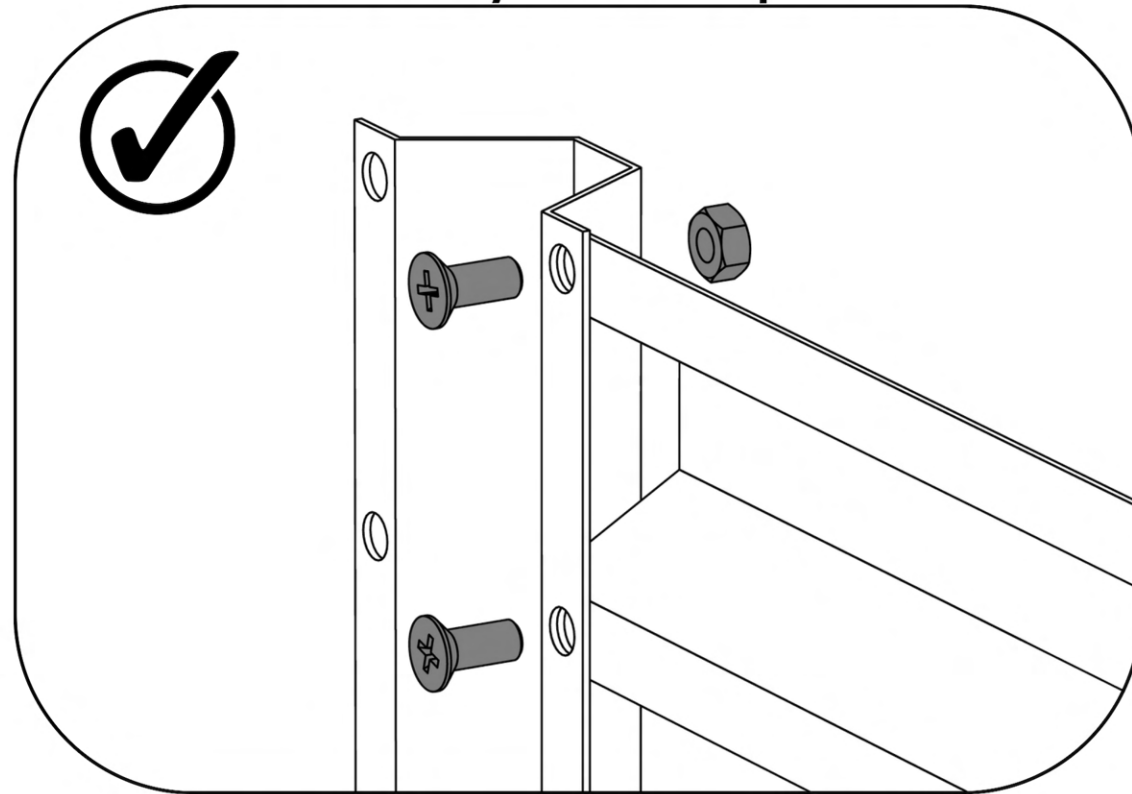


Assembly example **0B**

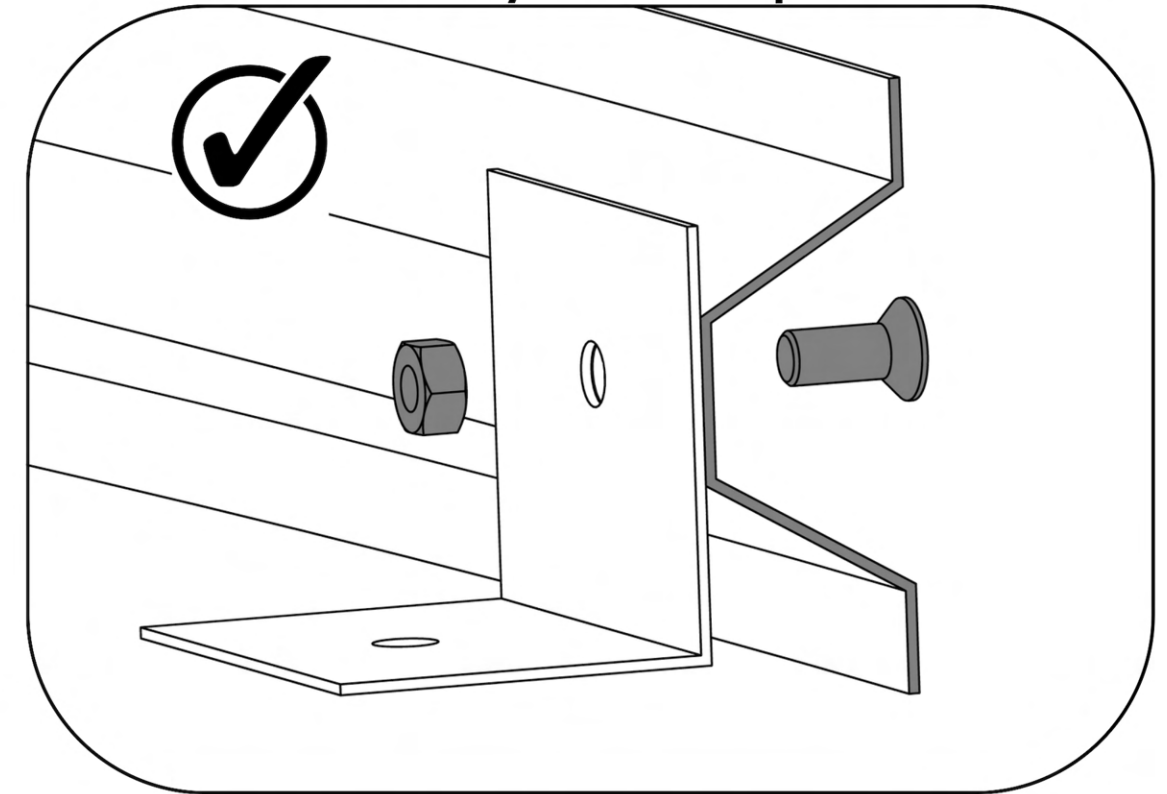


Assembly example **0C**

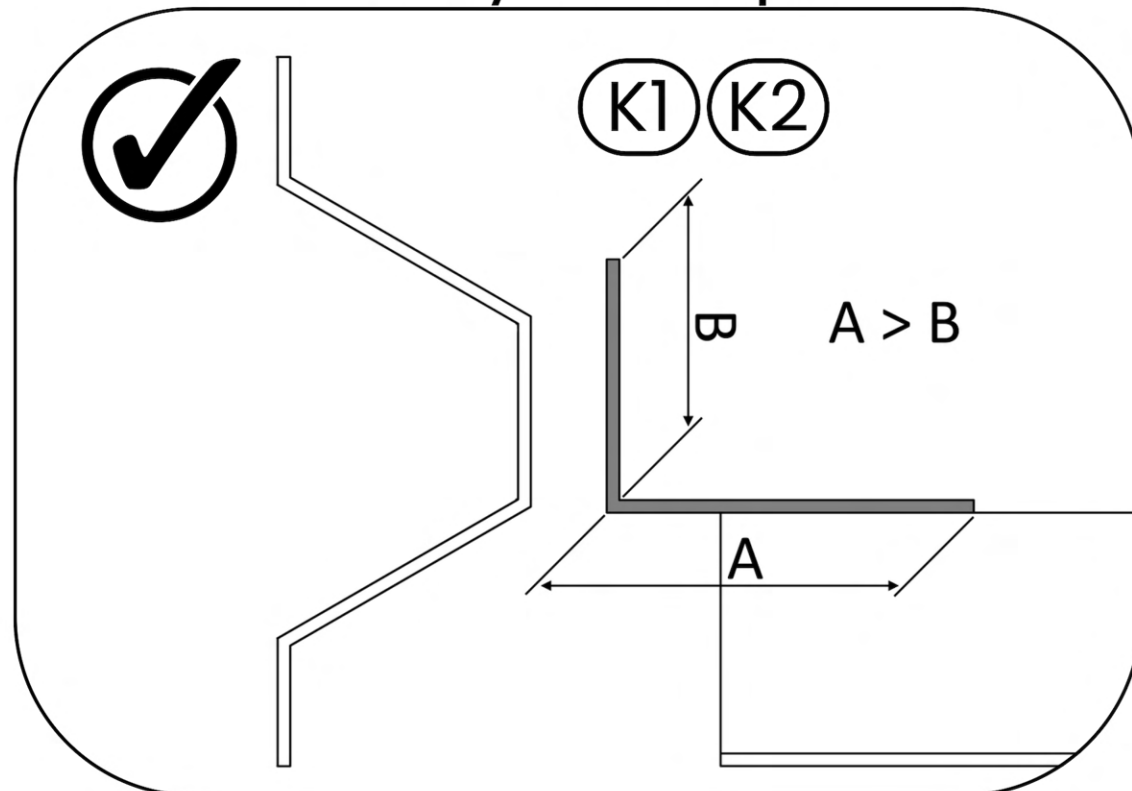


Assembly example **0D**

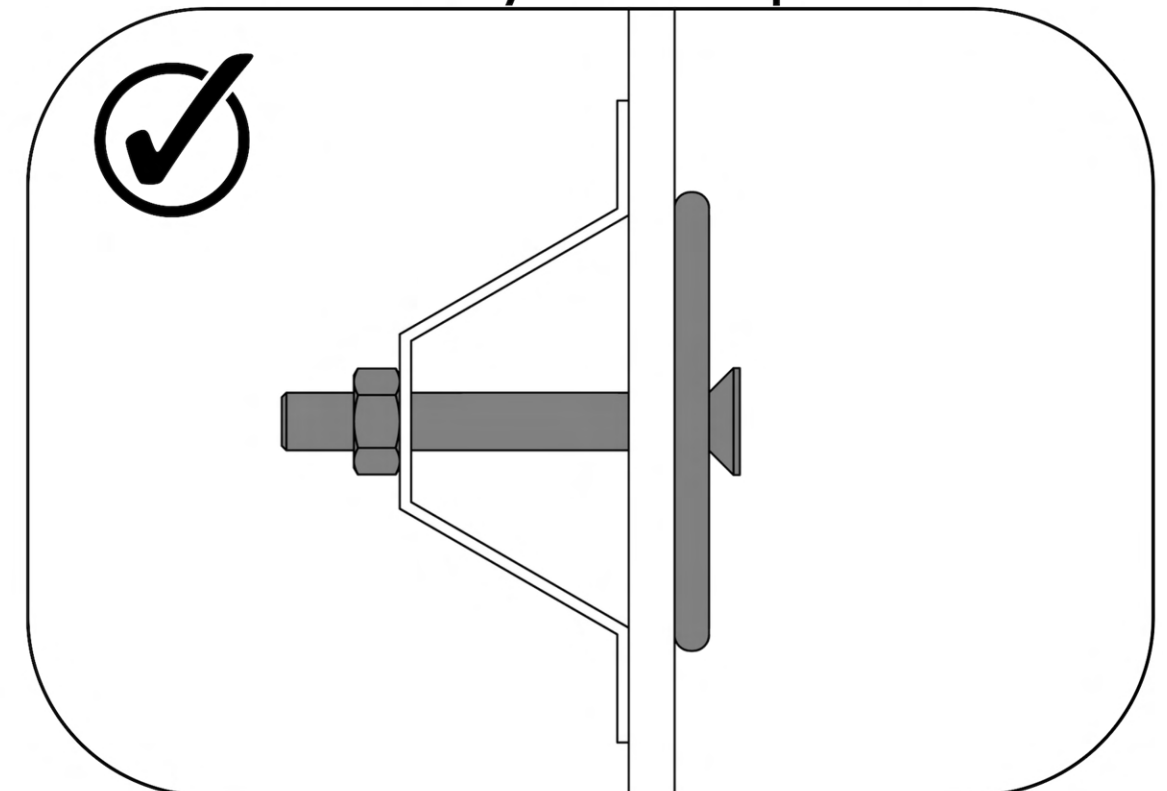


BOX 1/3 – 195 x 80 x 57 cm – 28 kg			BOX 2/3 – 177 x 24 x 6 cm – 27 kg		
Part No.	Length, cm	Qty.	Part No.	Length, cm	Qty.
No. 1	165	6	No. 5	92.5	4
No. 2	165	6	No. 6	74	4
No. 3	125.5	2	No. 7	106	4
No. 4	20	10	No. 8	193	4
PC7, V-shape metal strip	108	2	No. 8.1	36	4
PC8, Clamping for PC	105	4	No. 9	37.5	1
D5 (for handle)	122	1	No. 10	98.5	3
D4 (for hinges)	122	1	No. 11	95.5	16
Angle K1 with 4 holes	–	3	D3	88.5	8
Angle K2	–	12	D2 (for hinges)	58	2
Angle K3 for PC	–	12	D1 (for handle)	58	2
PC9, Metal strip (0.5 mm)	593.5	3	BOX 3/3 – 205 x 110 x 35 cm – 19 kg		
Double-sided adhesive tape	5 m	1	PC part No., W x L, cm	Qty.	
Hinge	–	6	PC1, 105 x 200	8	
Handle	–	3	PC2, 105 x 197	2	
Nut M5	–	312	PC3, 105 x 130	3	
Screw M5 x 12	–	222	PC4, 144 x 50	2	
Screw M5 x 40	–	92	PC5, 105 x 66	2	
Plastic washer Ø40	–	78			

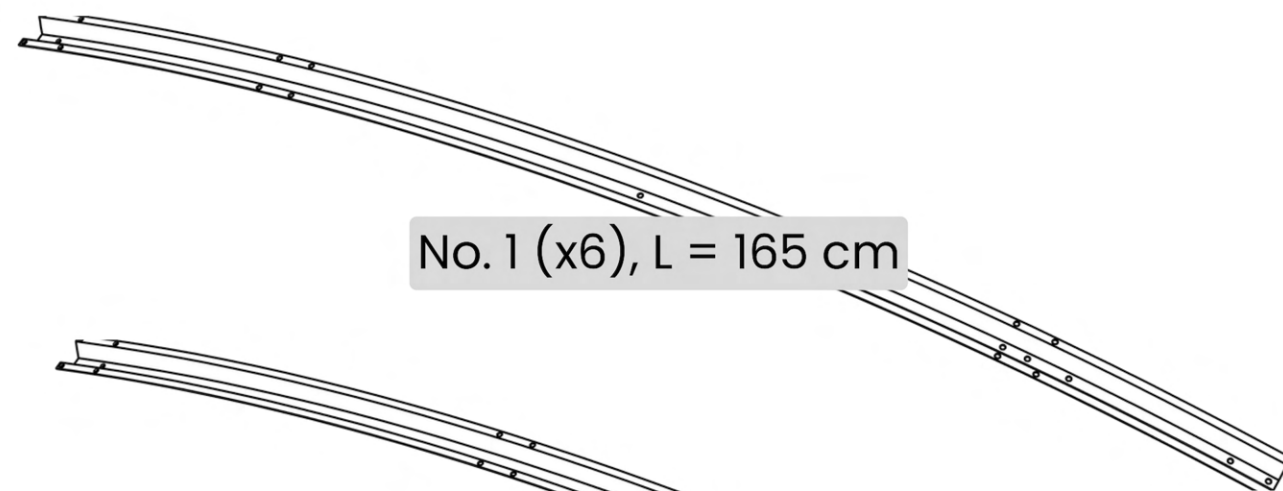


No. 1 (x6), L = 165 cm

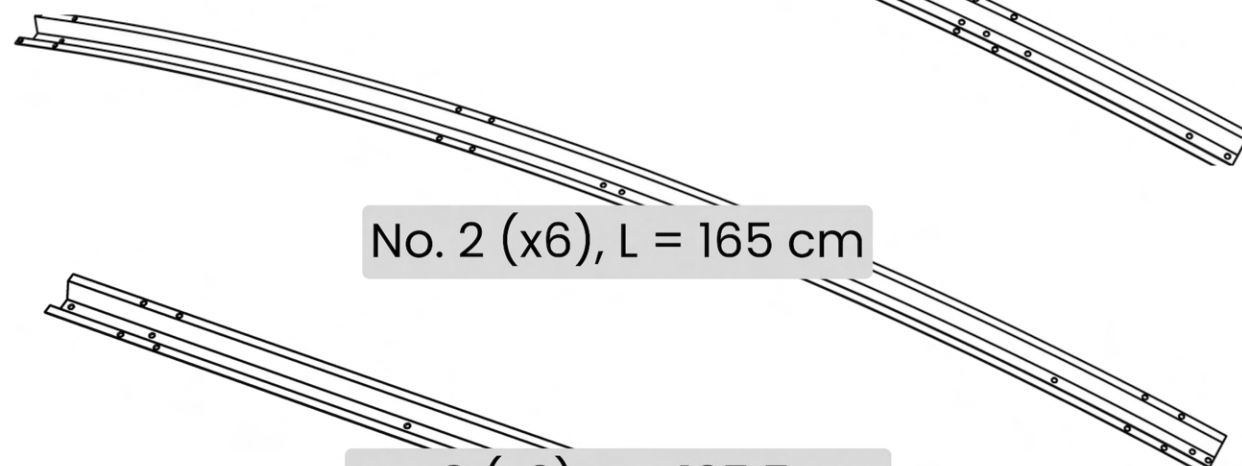


No. 2 (x6), L = 165 cm

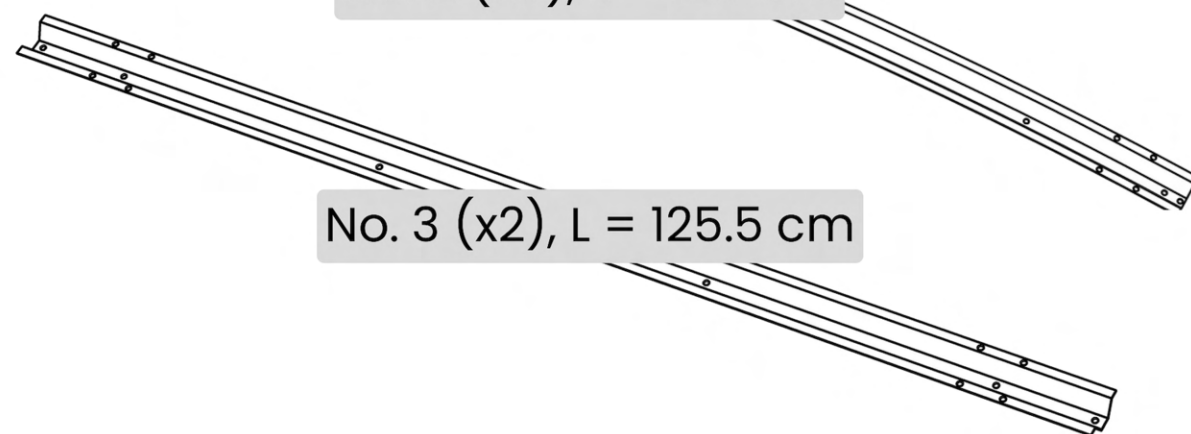


No. 3 (x2), L = 125.5 cm




No. 4 (x10), L = 20 cm

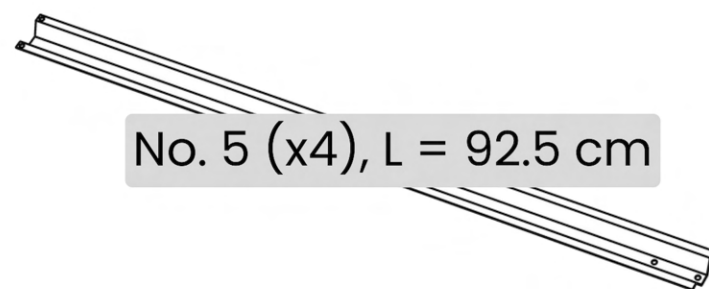


No. 5 (x4), L = 92.5 cm

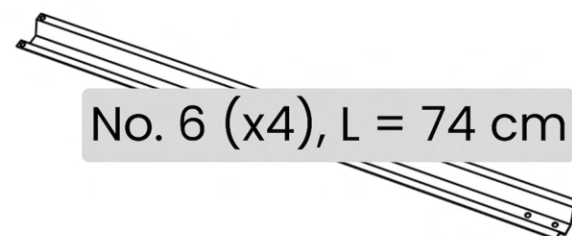


No. 6 (x4), L = 74 cm

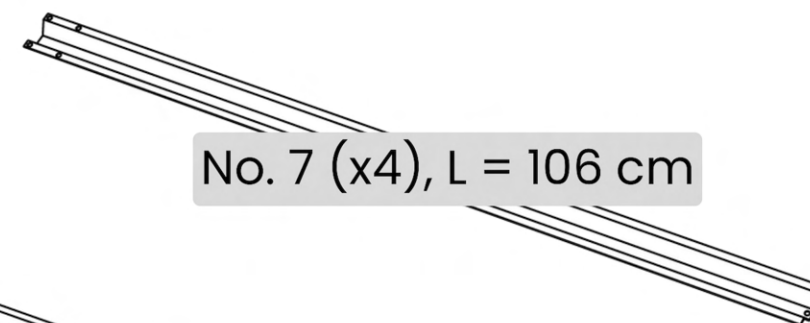


No. 7 (x4), L = 106 cm

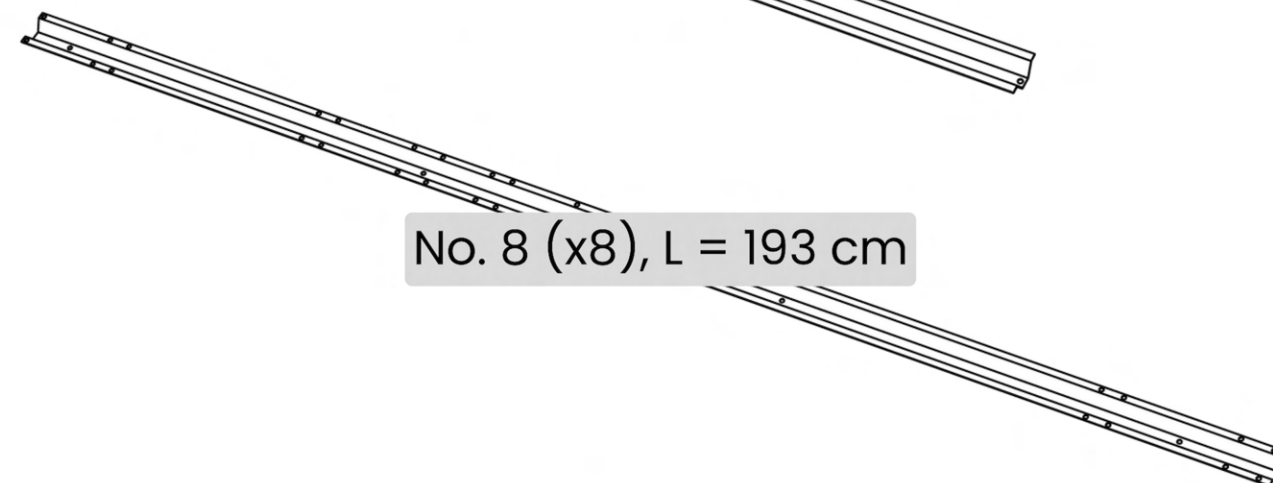


No. 8 (x8), L = 193 cm

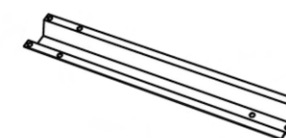


No. 8.1 (x4), L = 36 cm

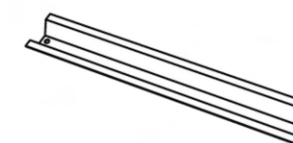



No. 9 (x1), L = 37.5 cm



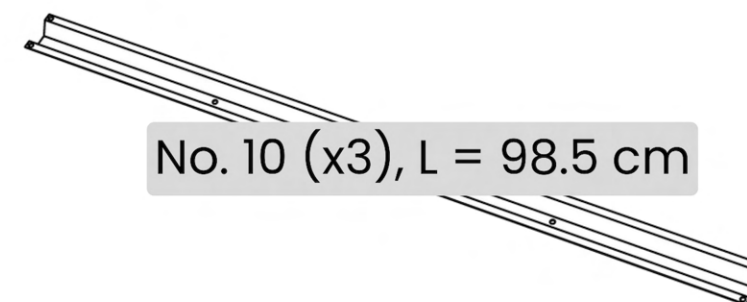


No. 10 (x3), L = 98.5 cm

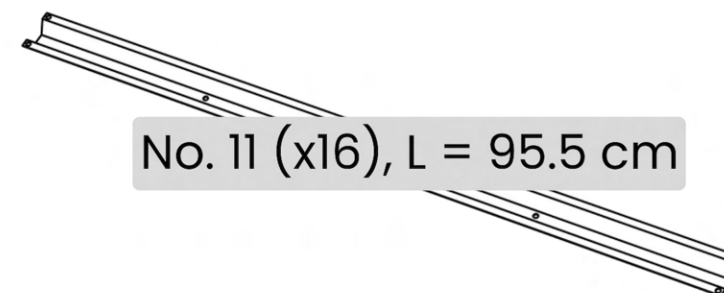


No. 11 (x16), L = 95.5 cm

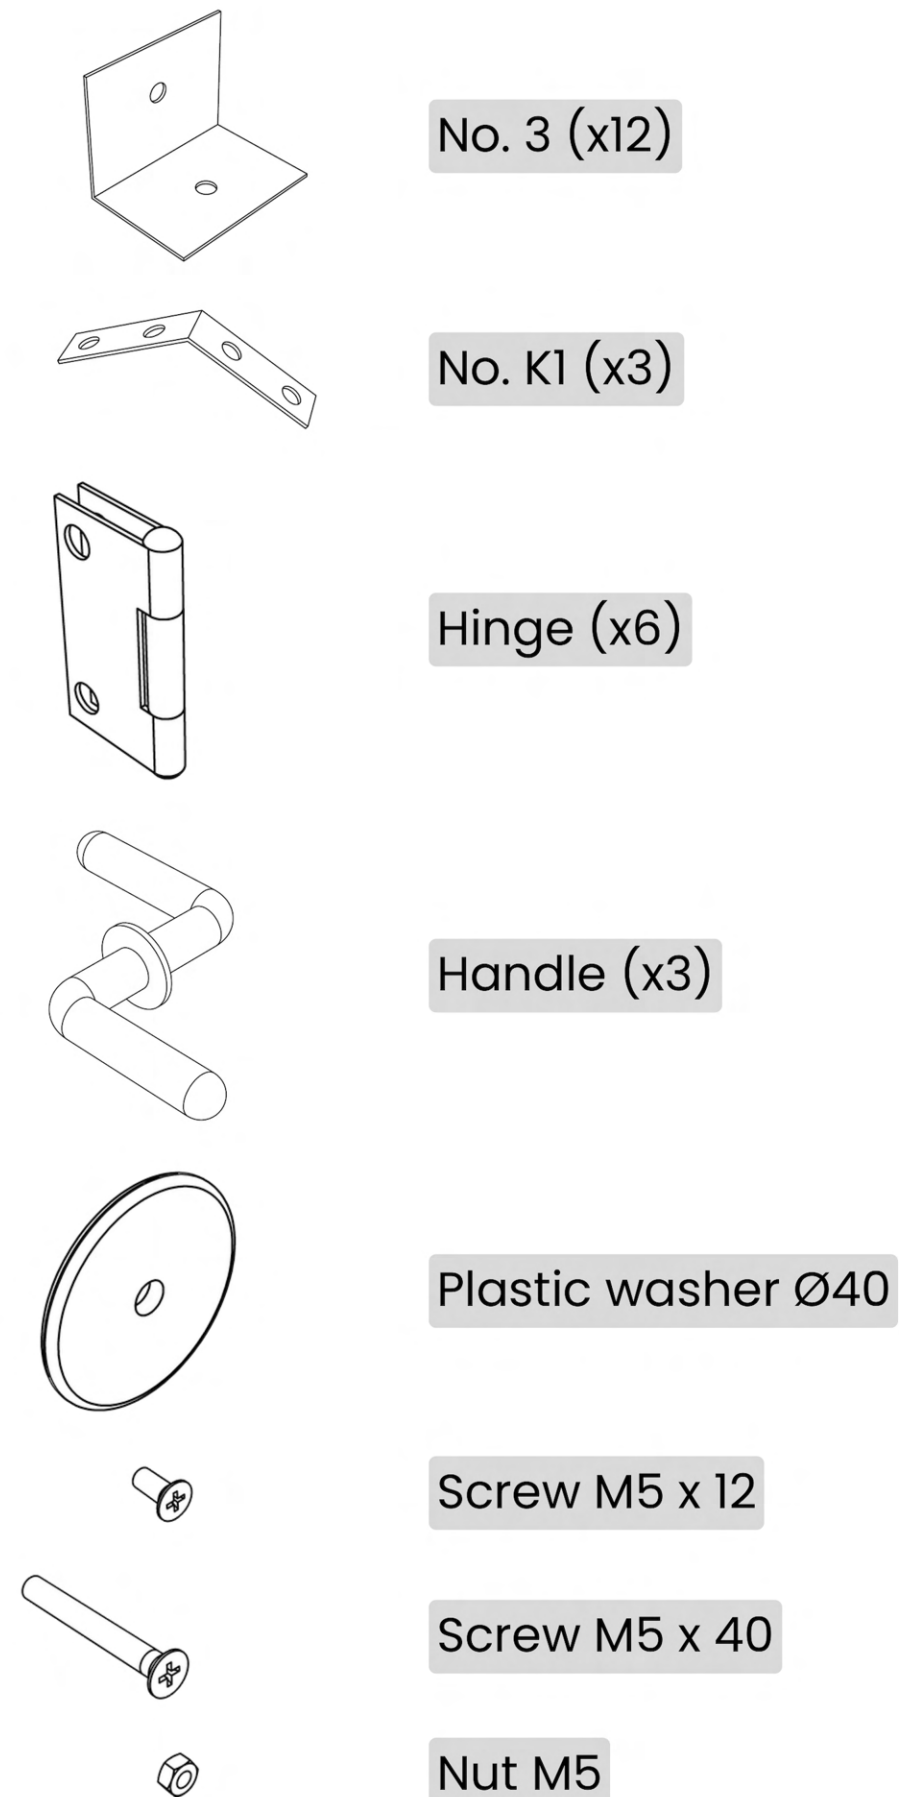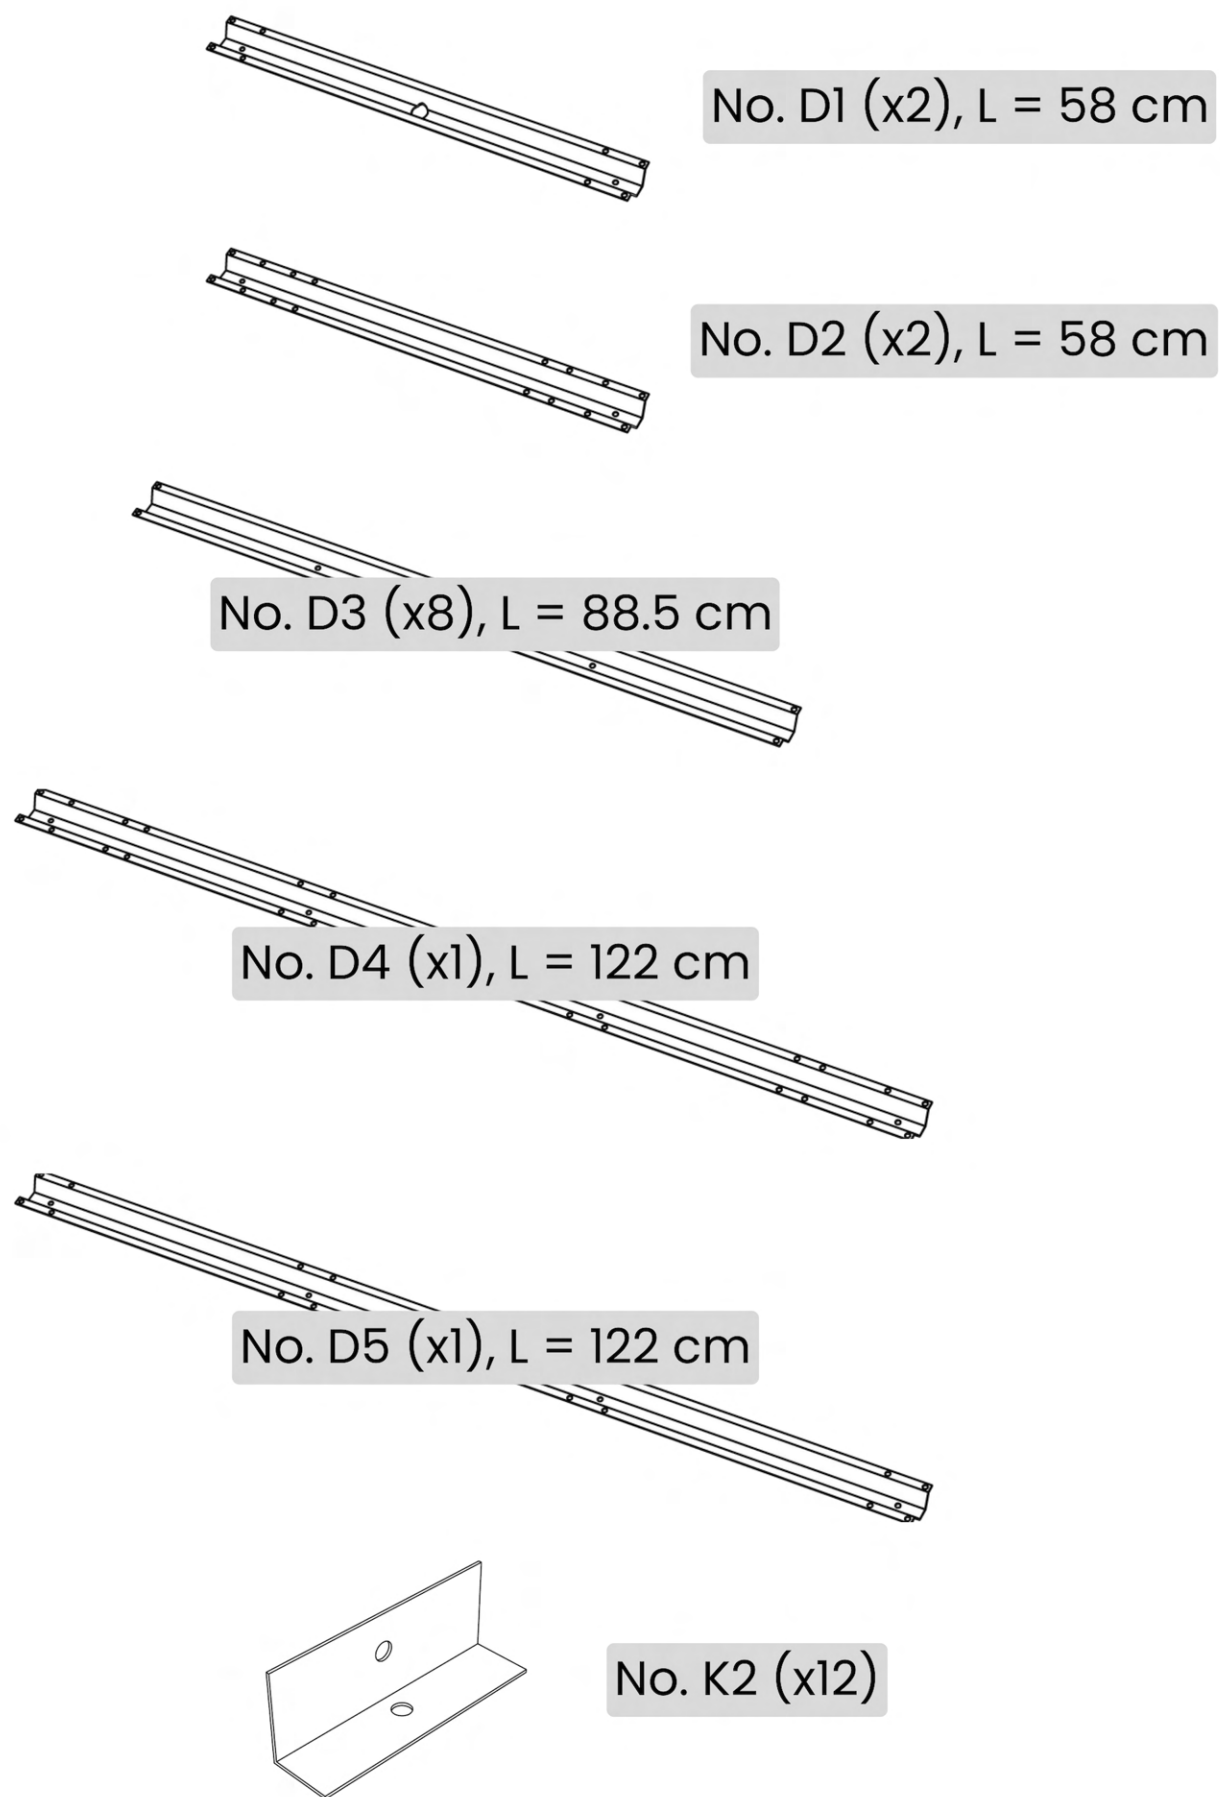

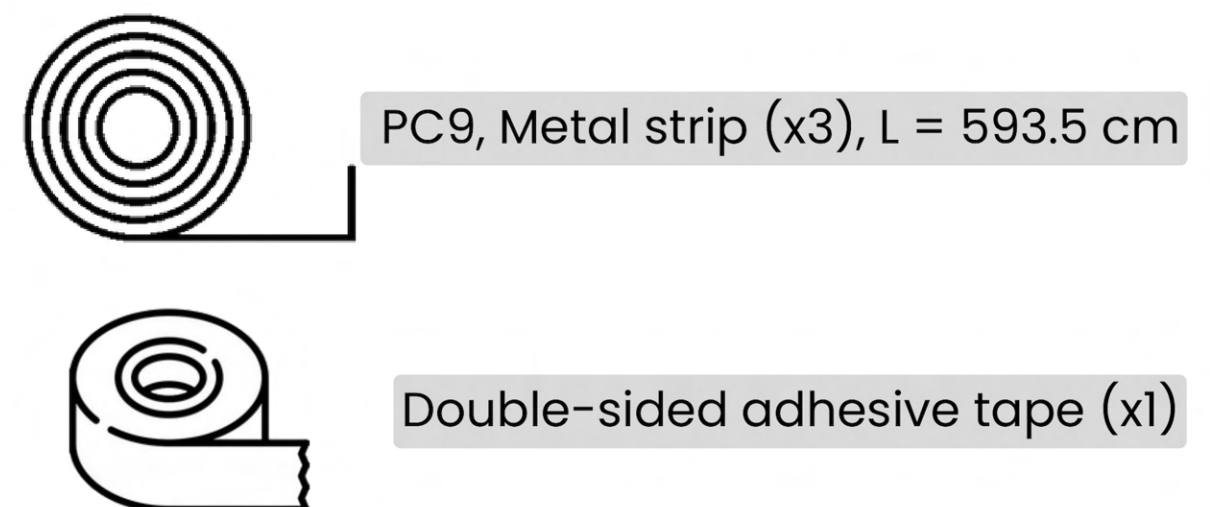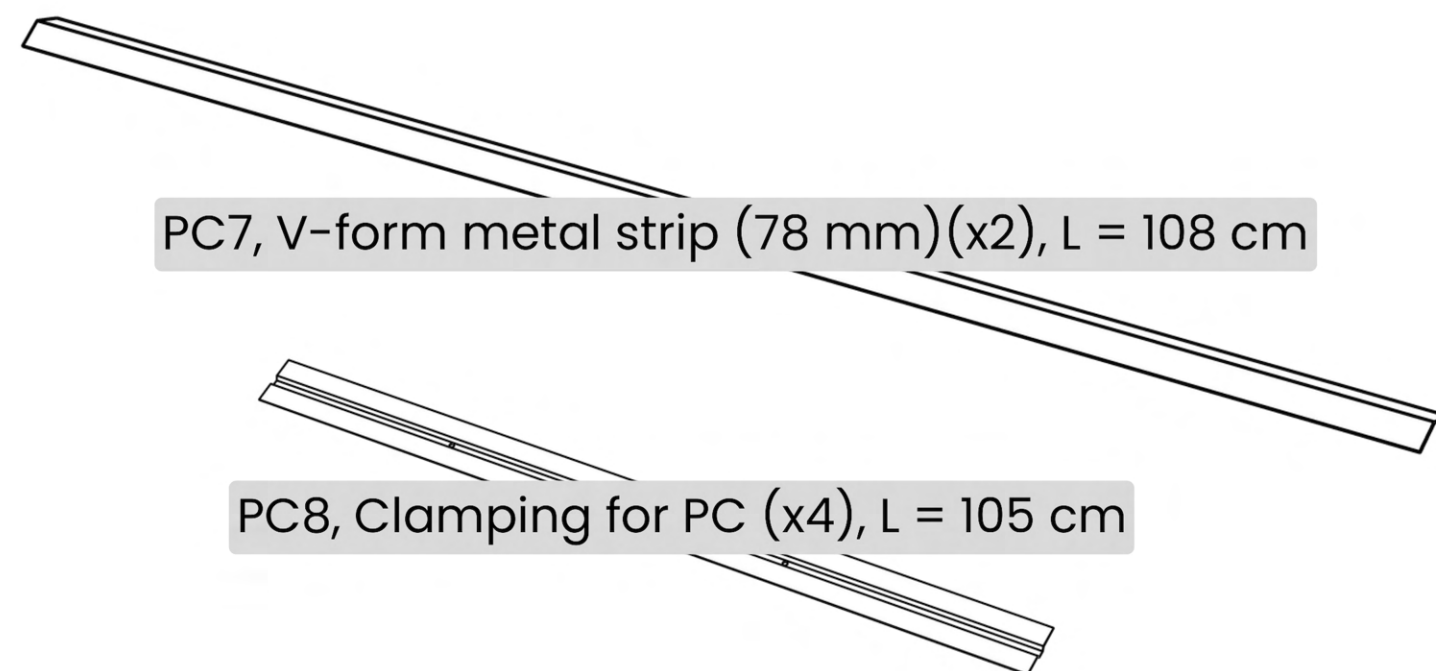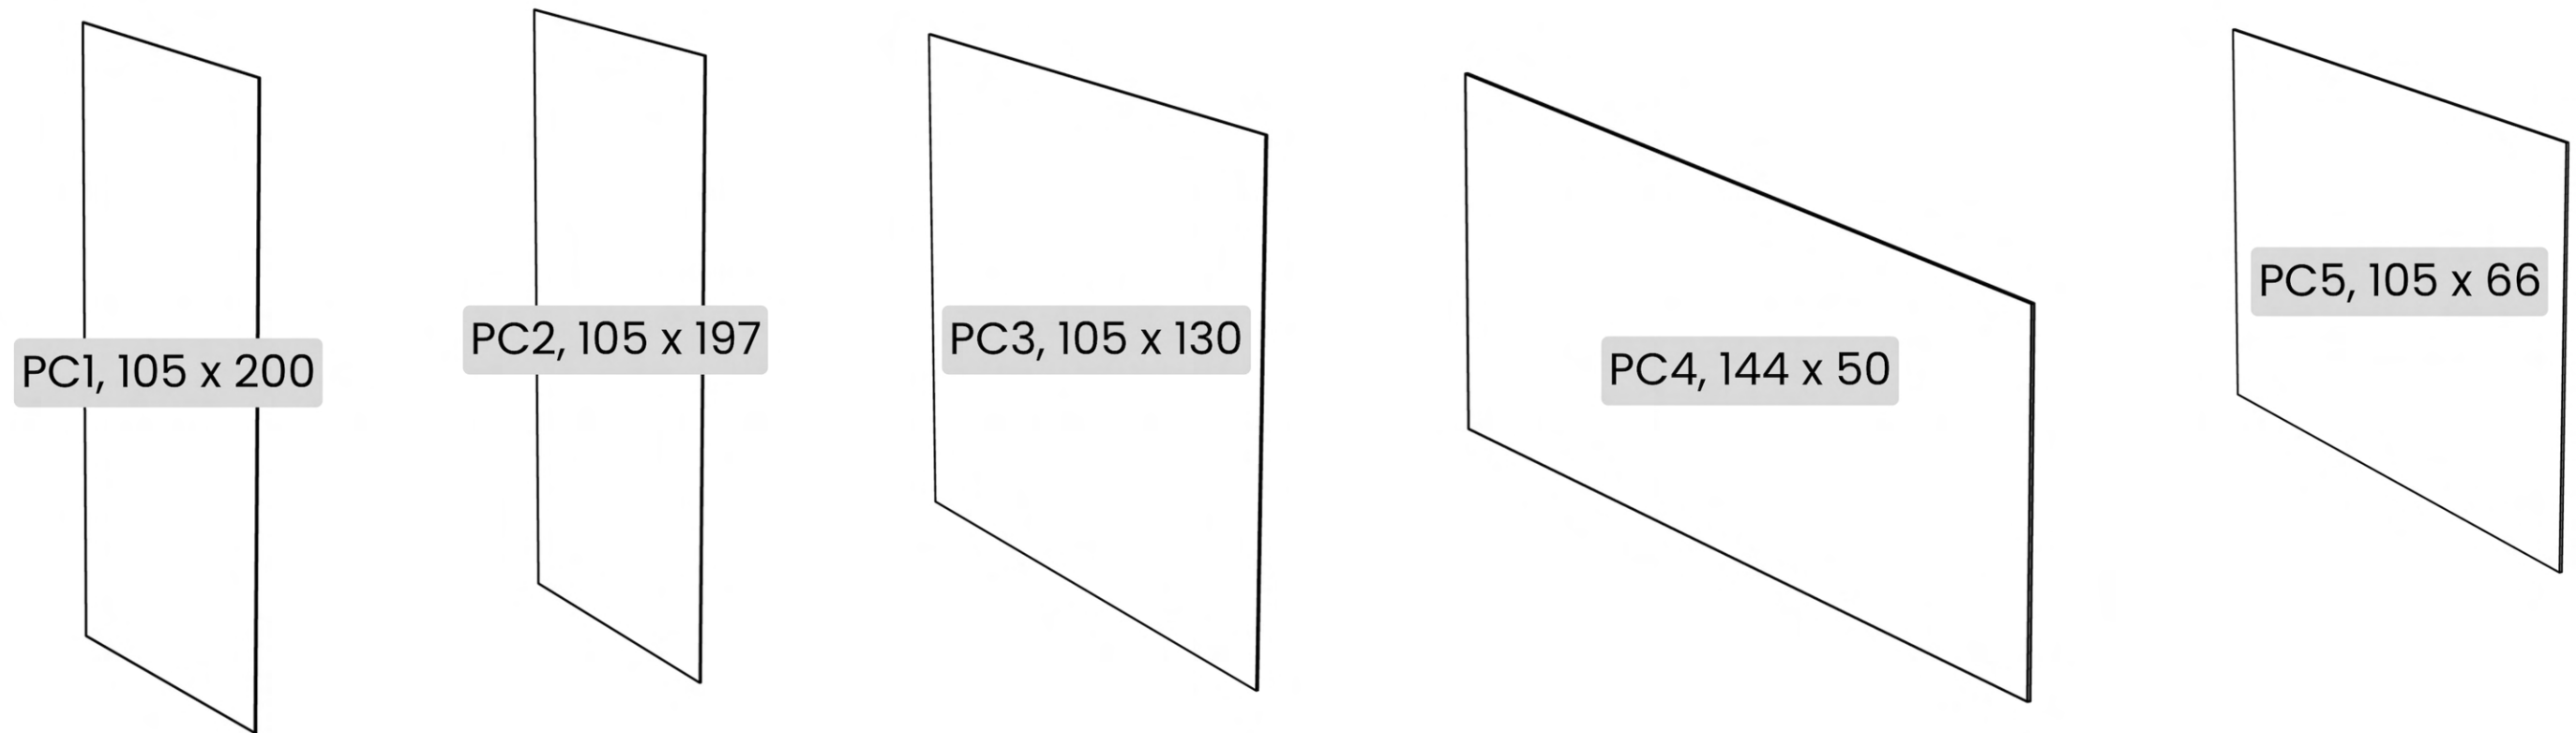





1



! 3 0A

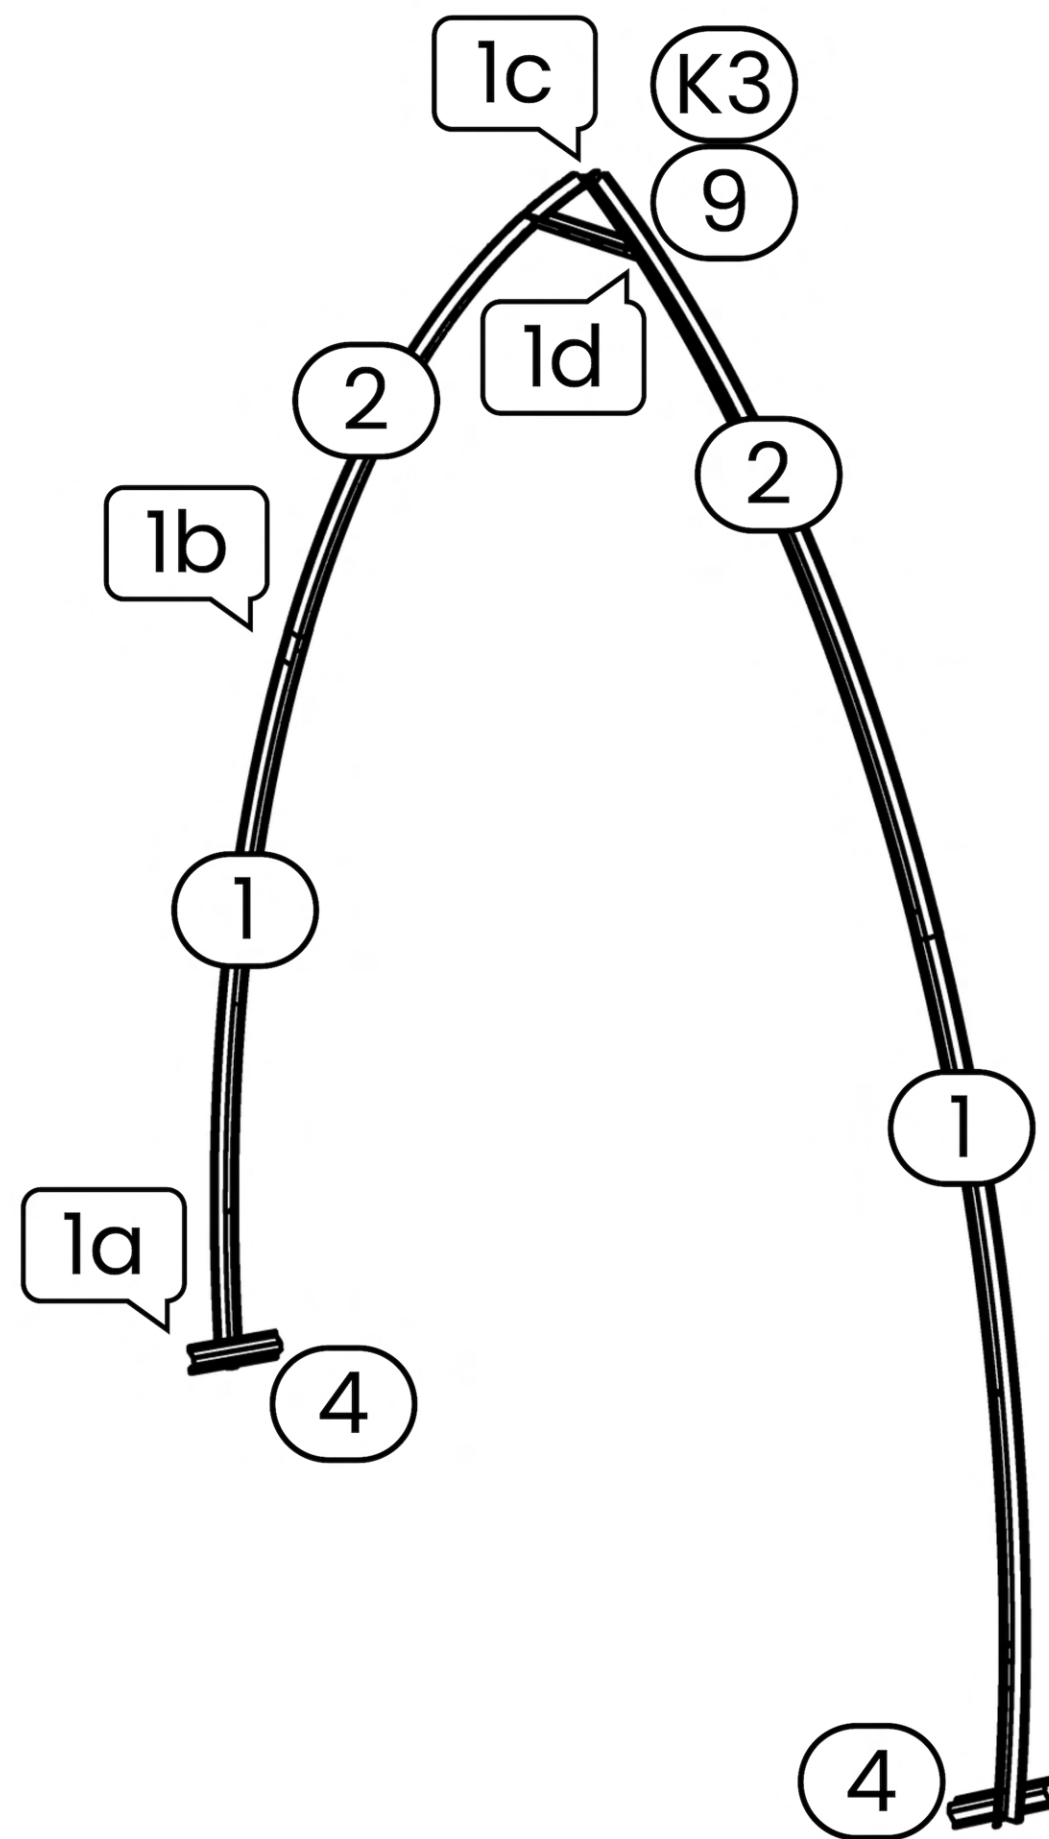

x3





Next page
1a
1b
1c
1d

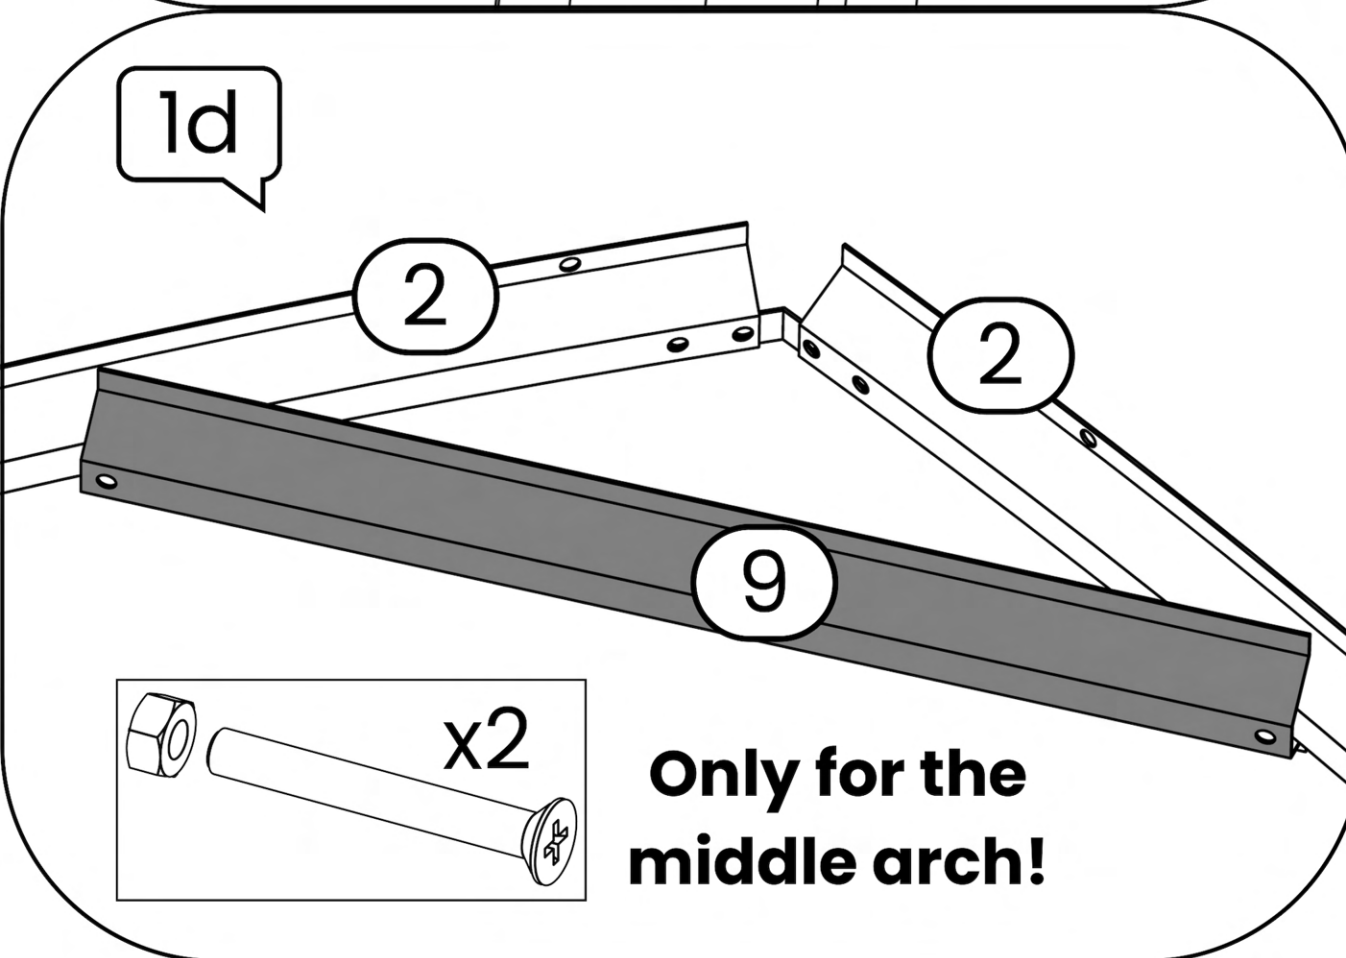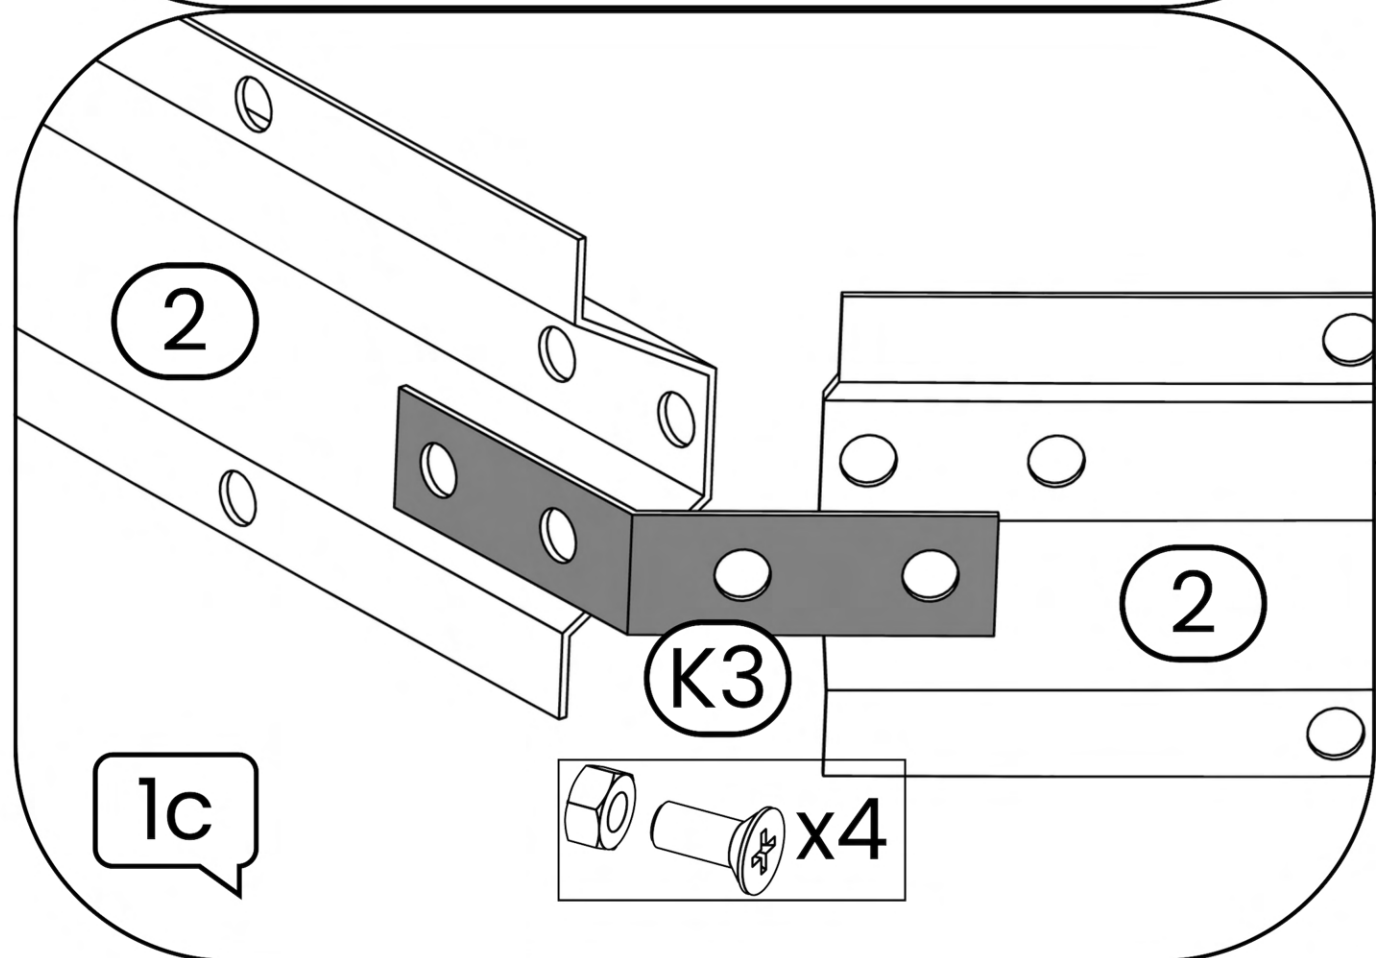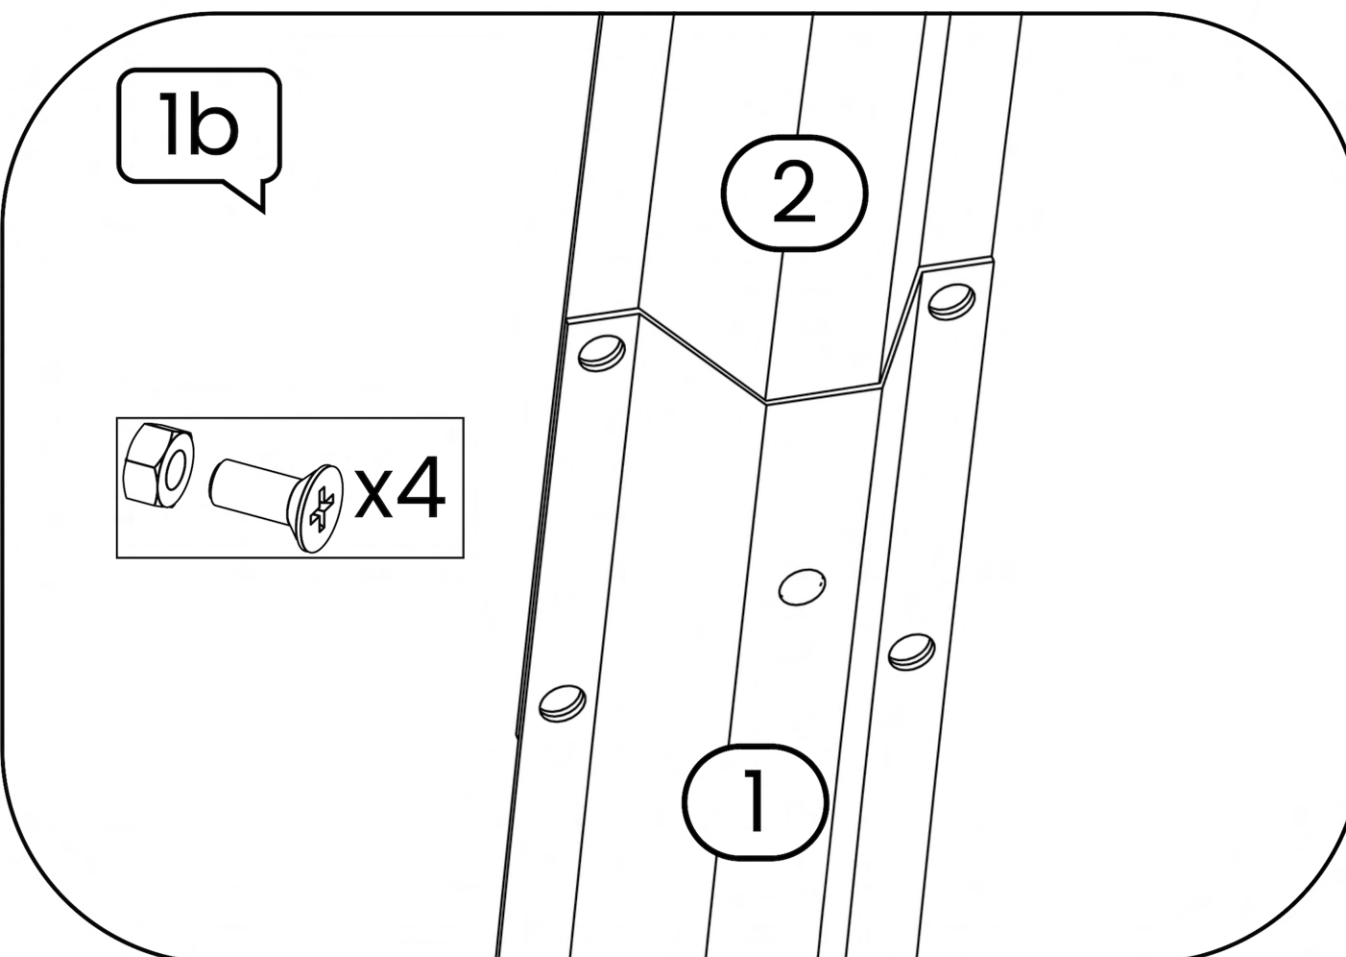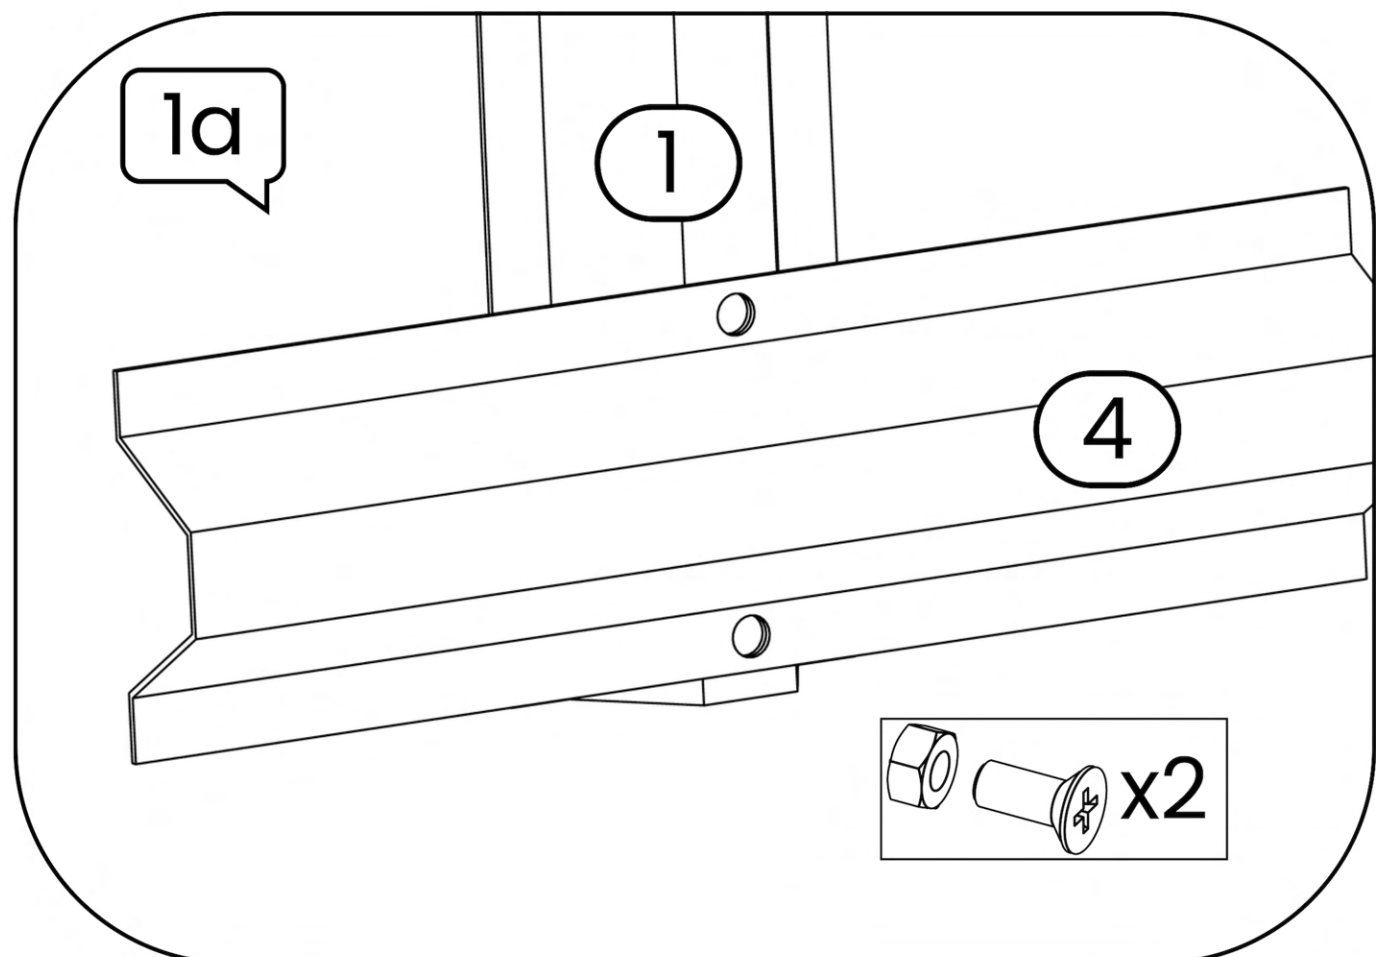

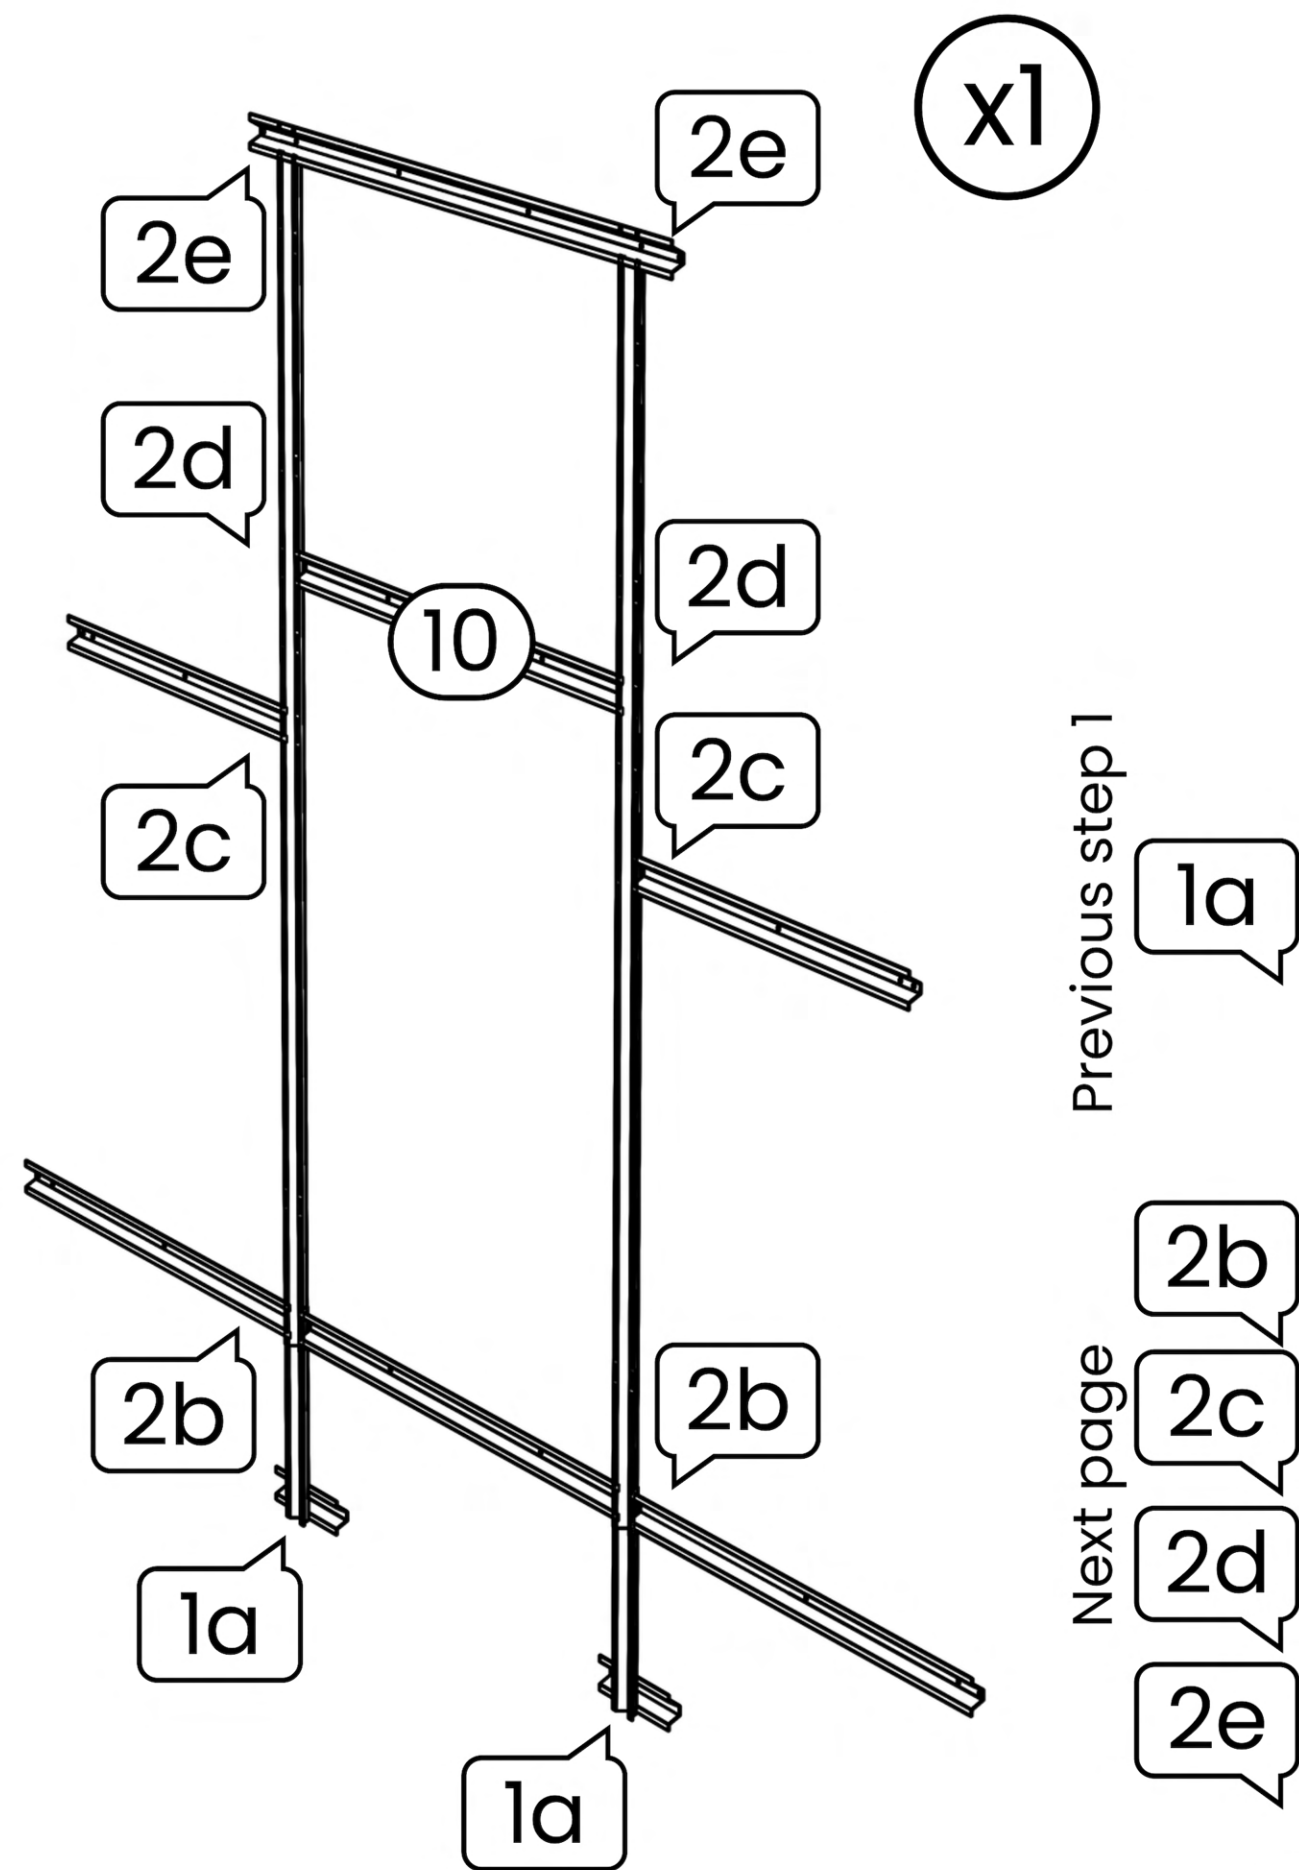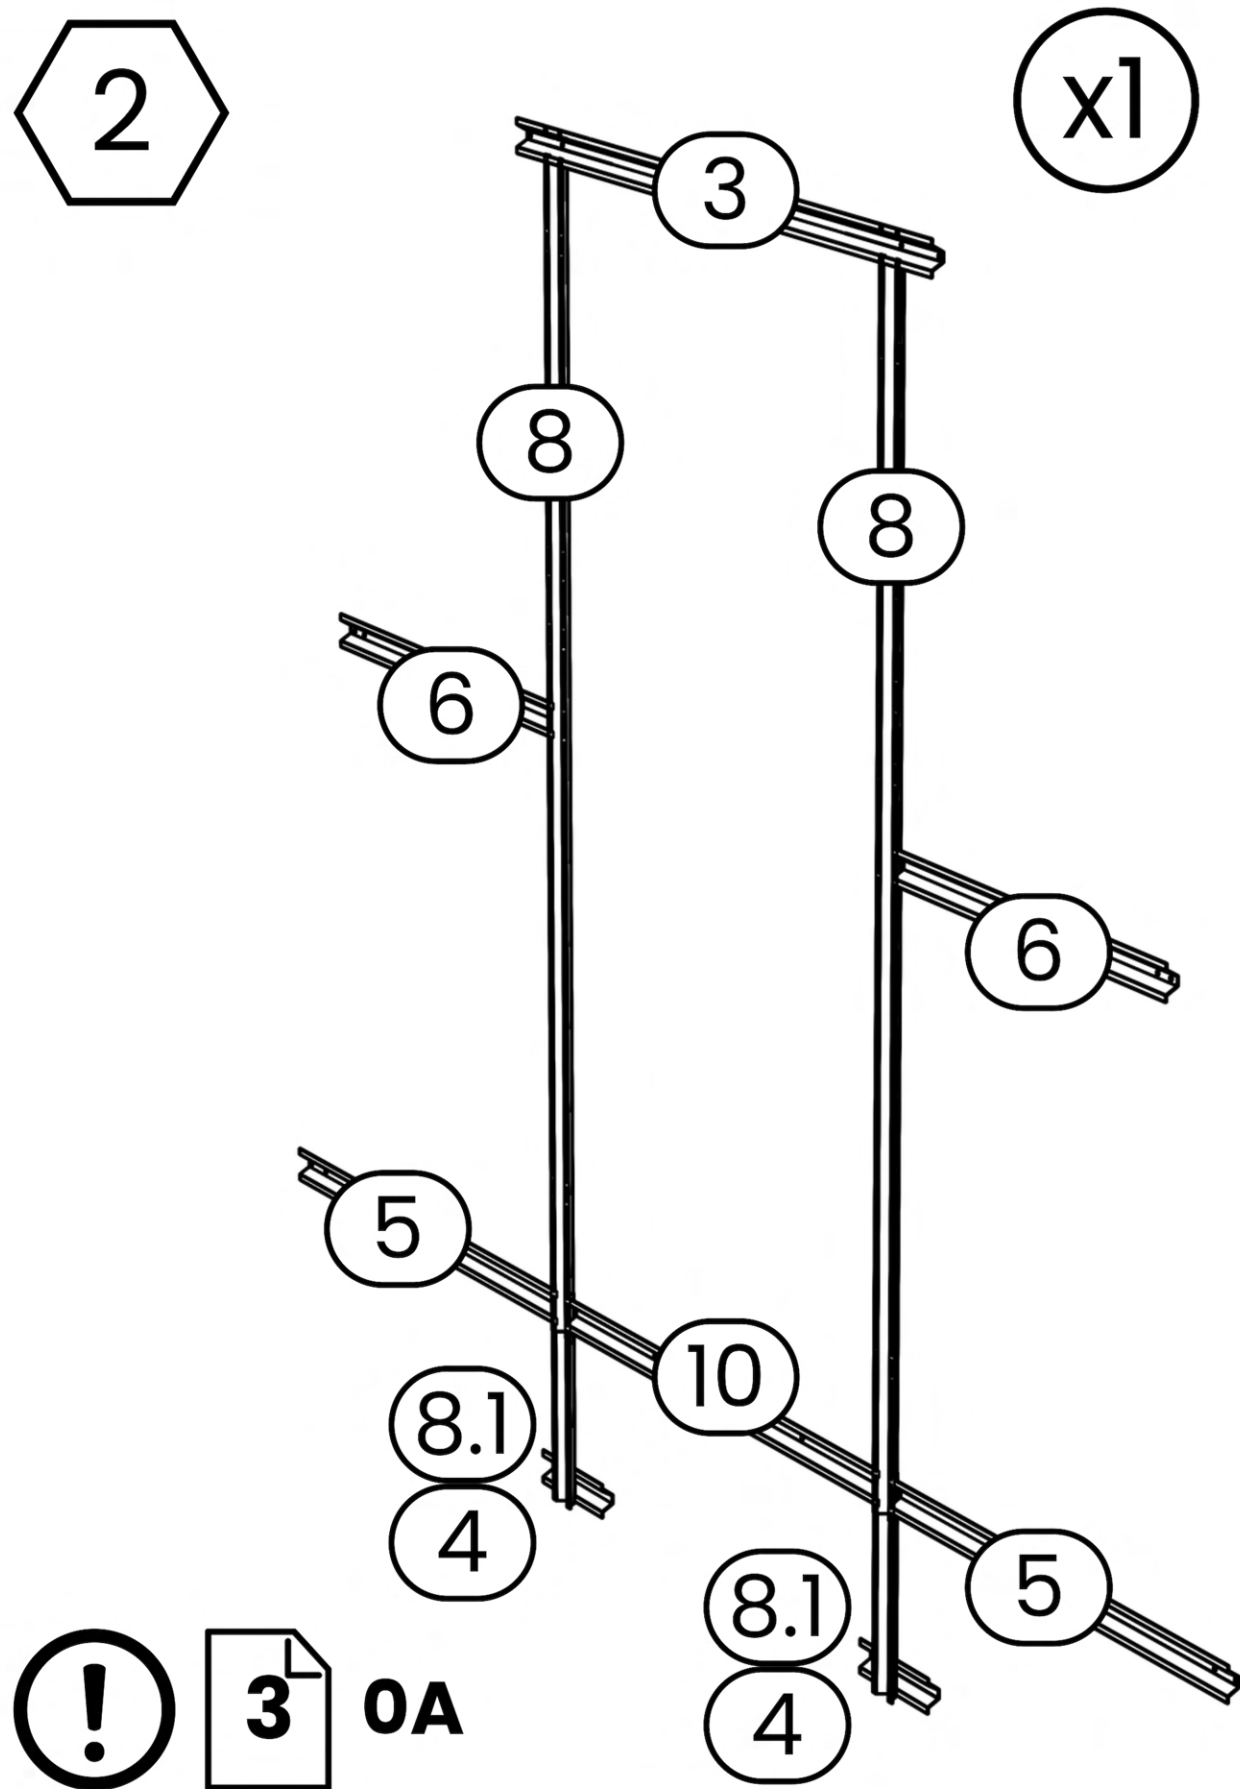


Previous step 1

Next page

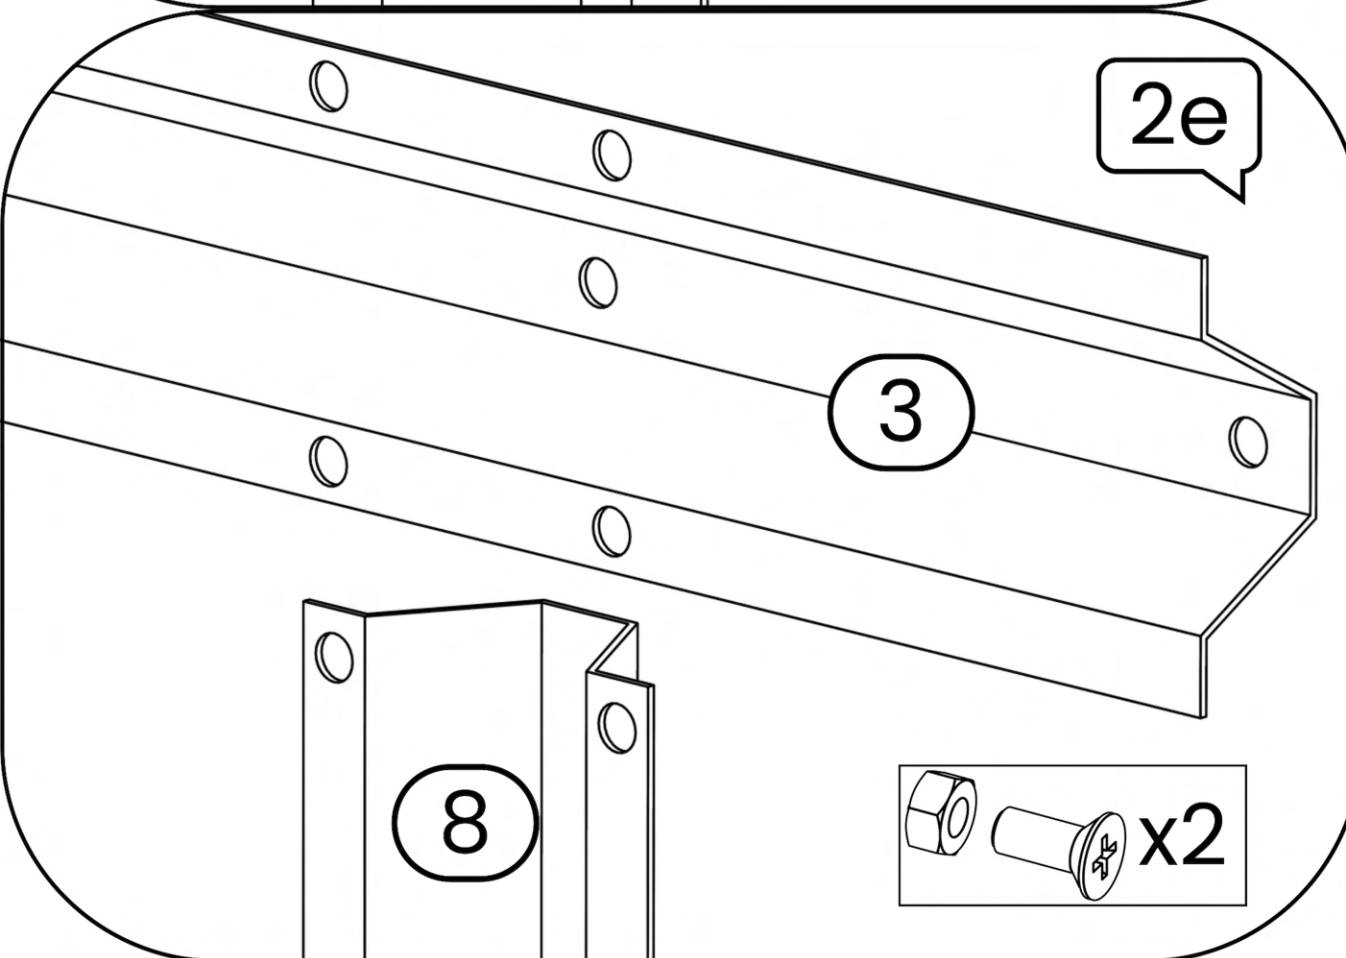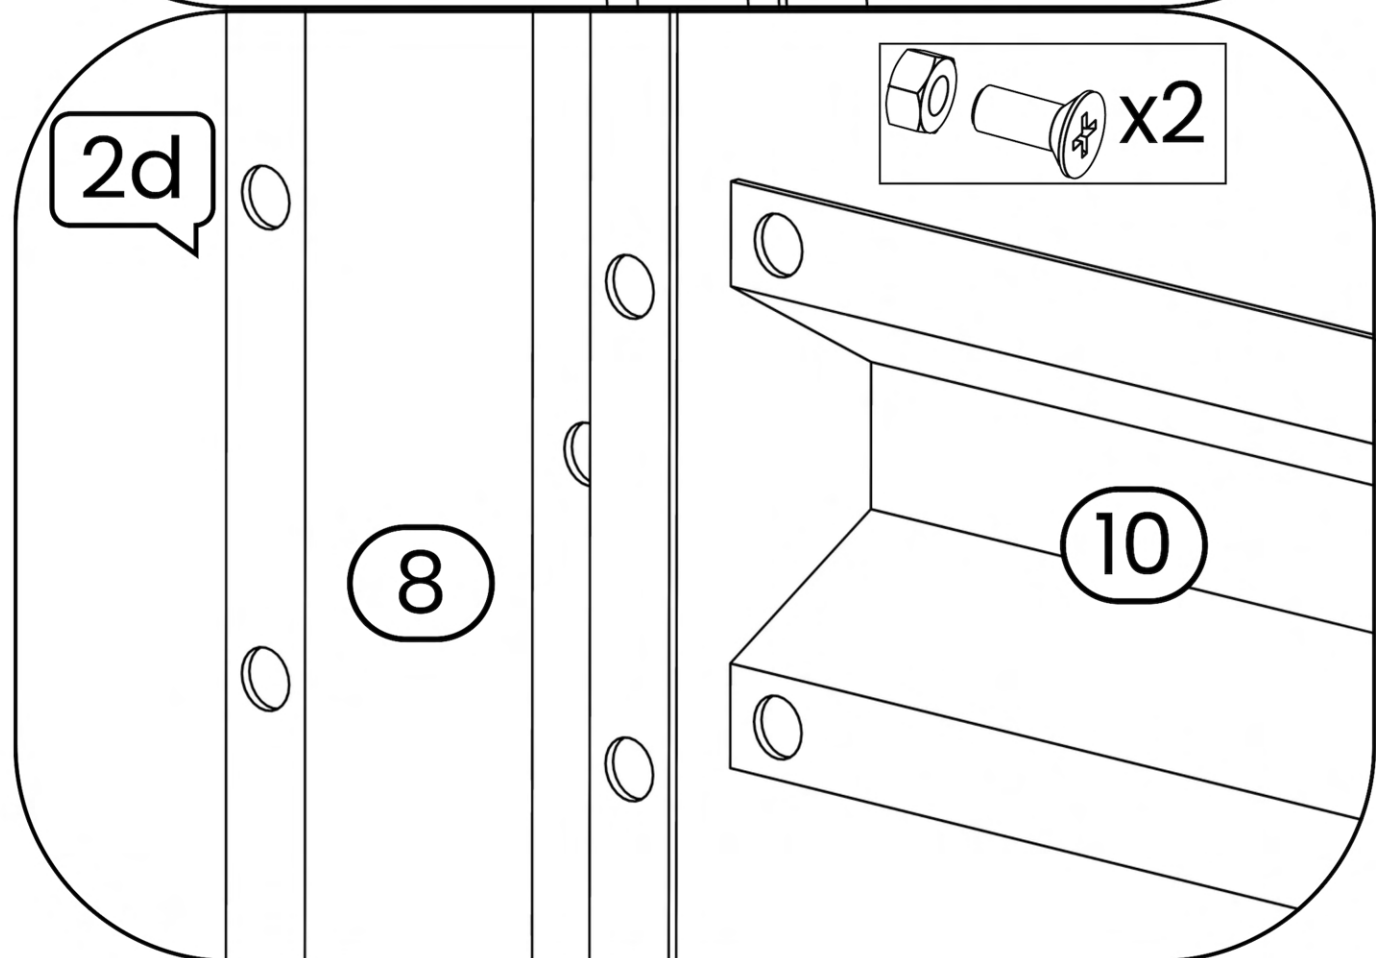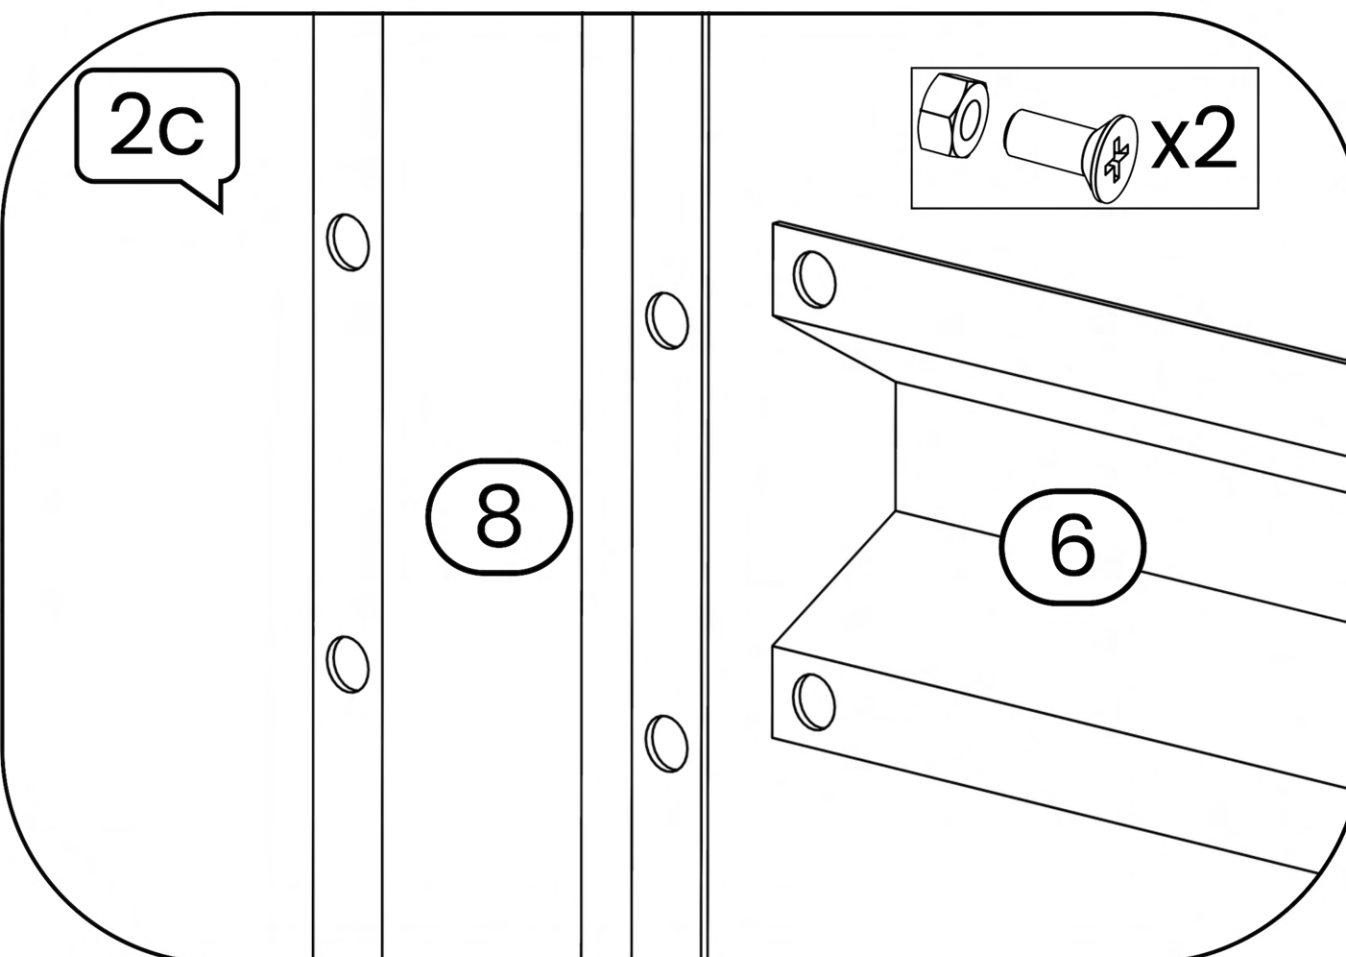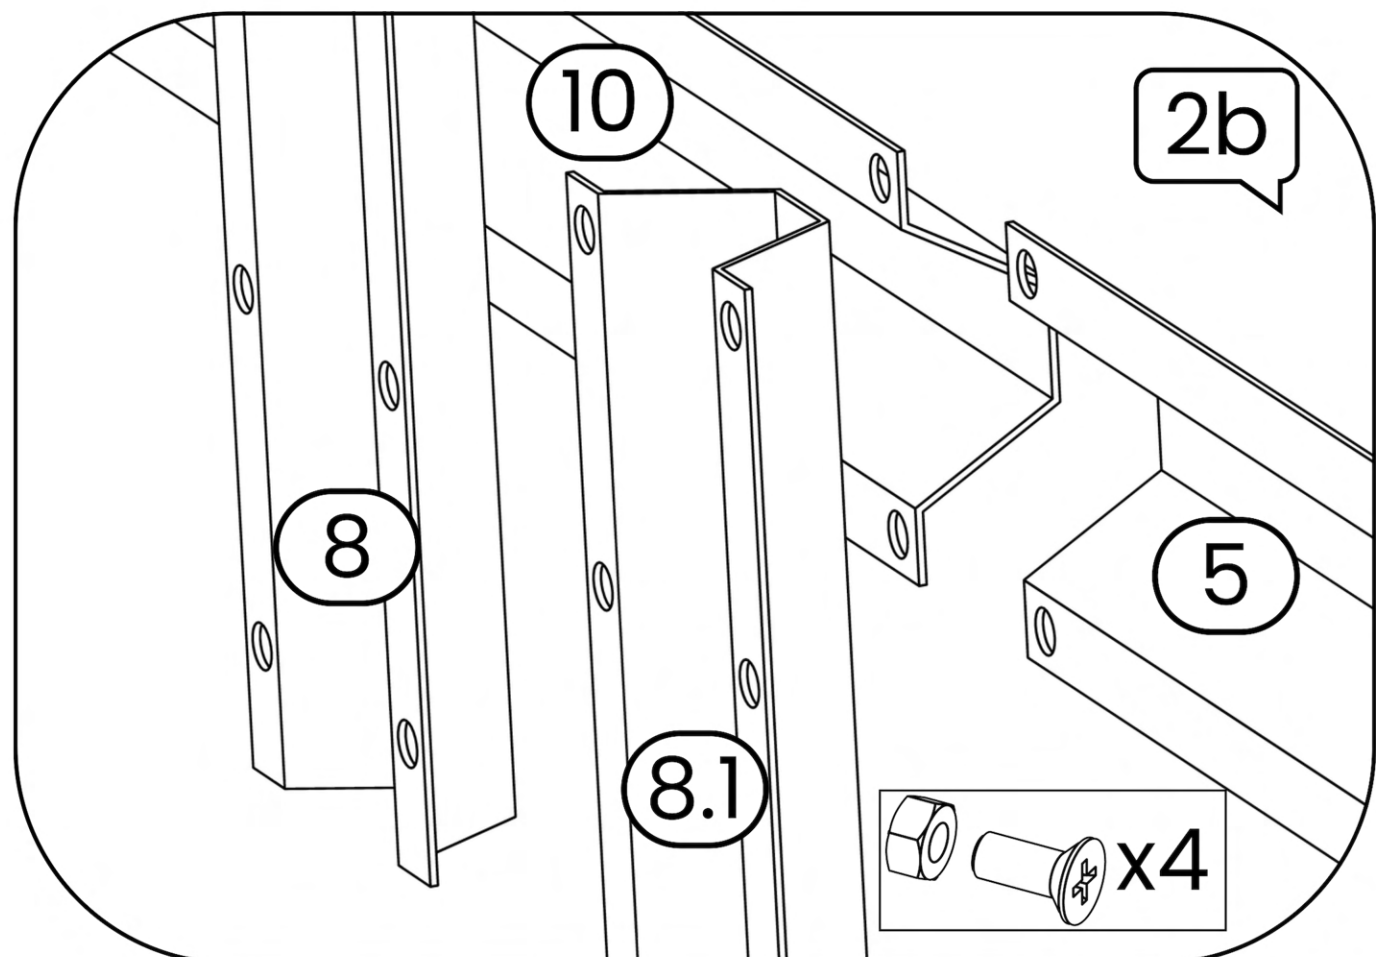




3

! 3 0B
! 3 0C

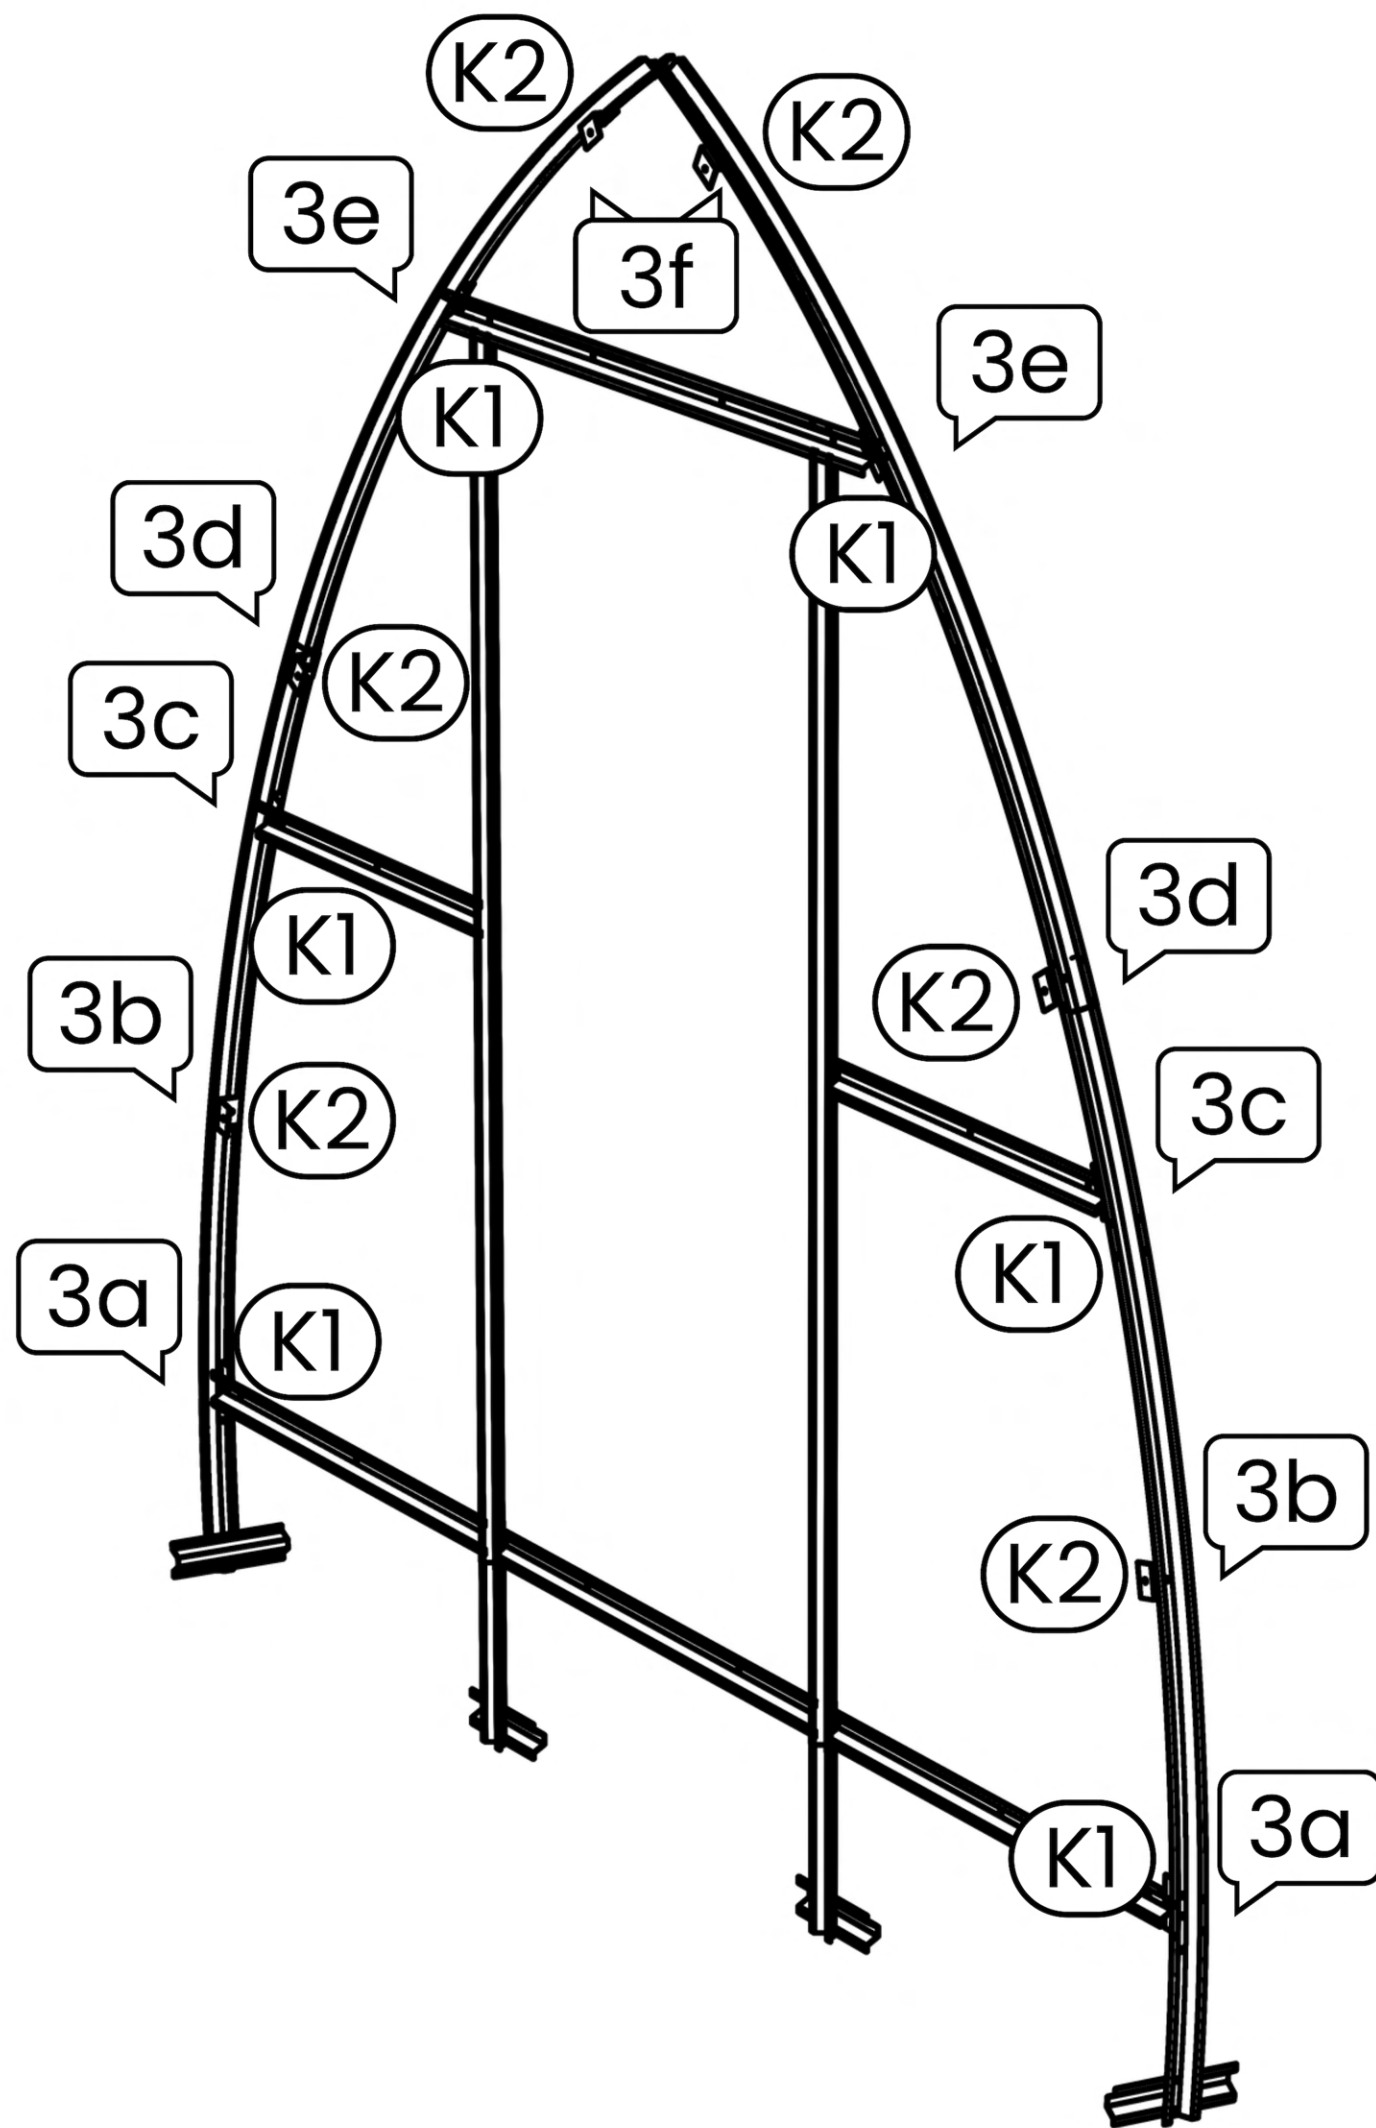

x2

Next page
3a
3b
3c
3d
3e
3f

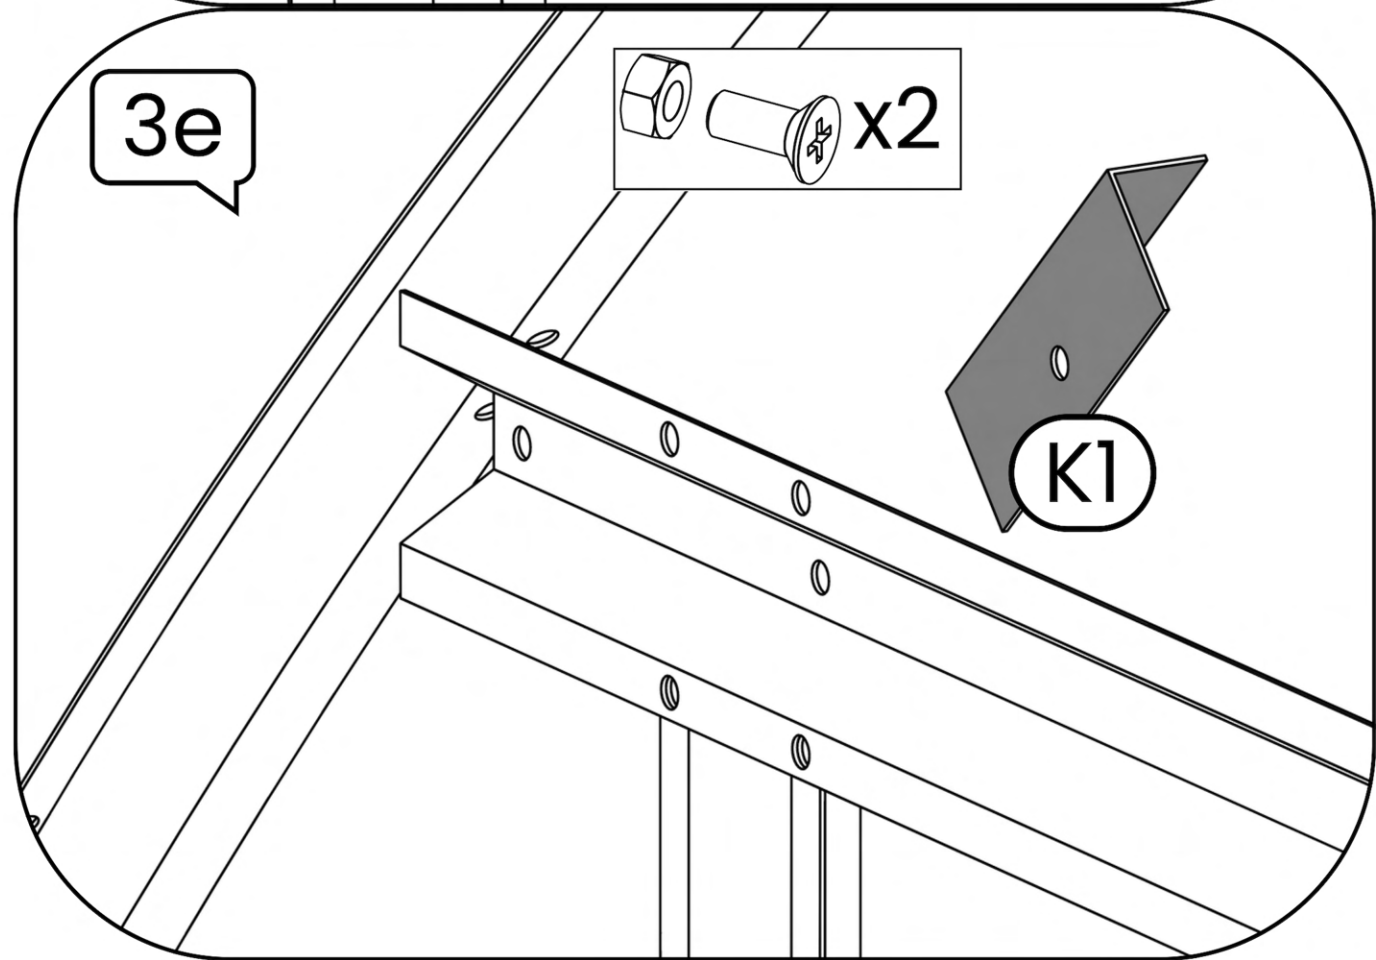
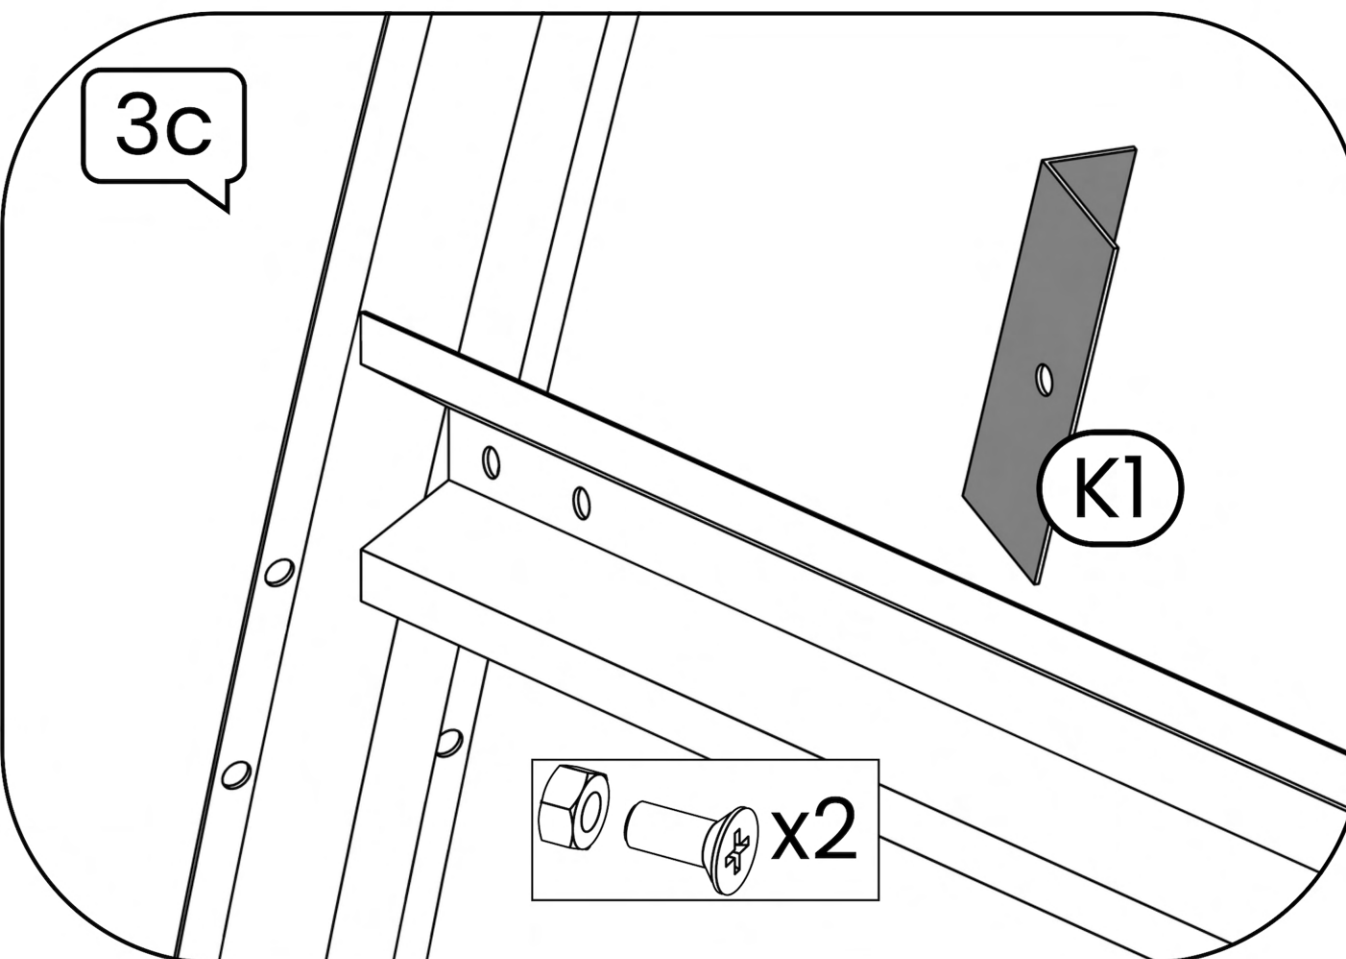
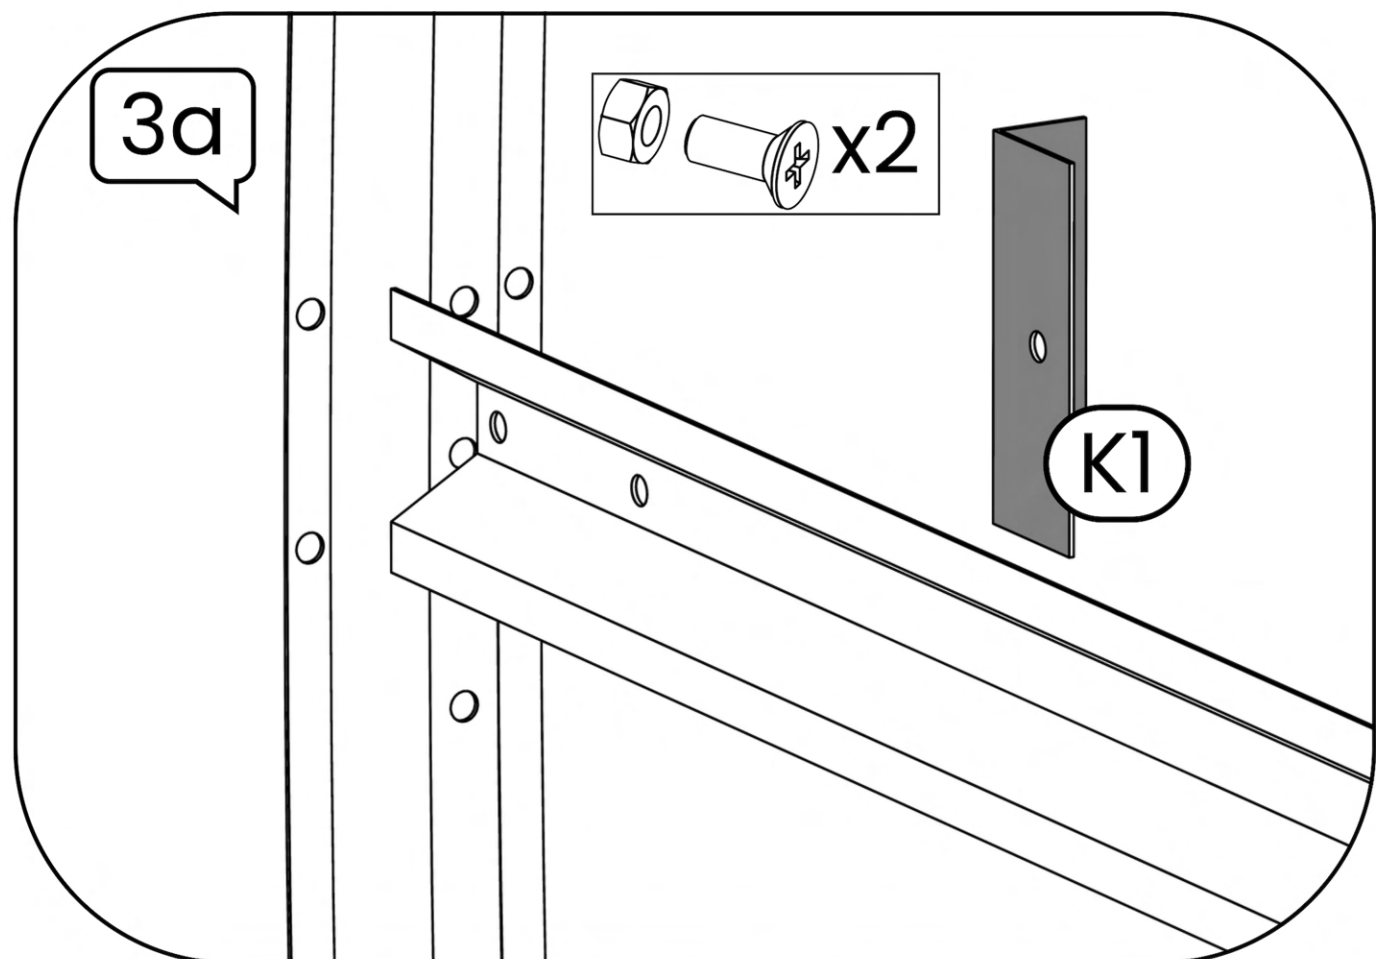


Next page


3b

3d

3f

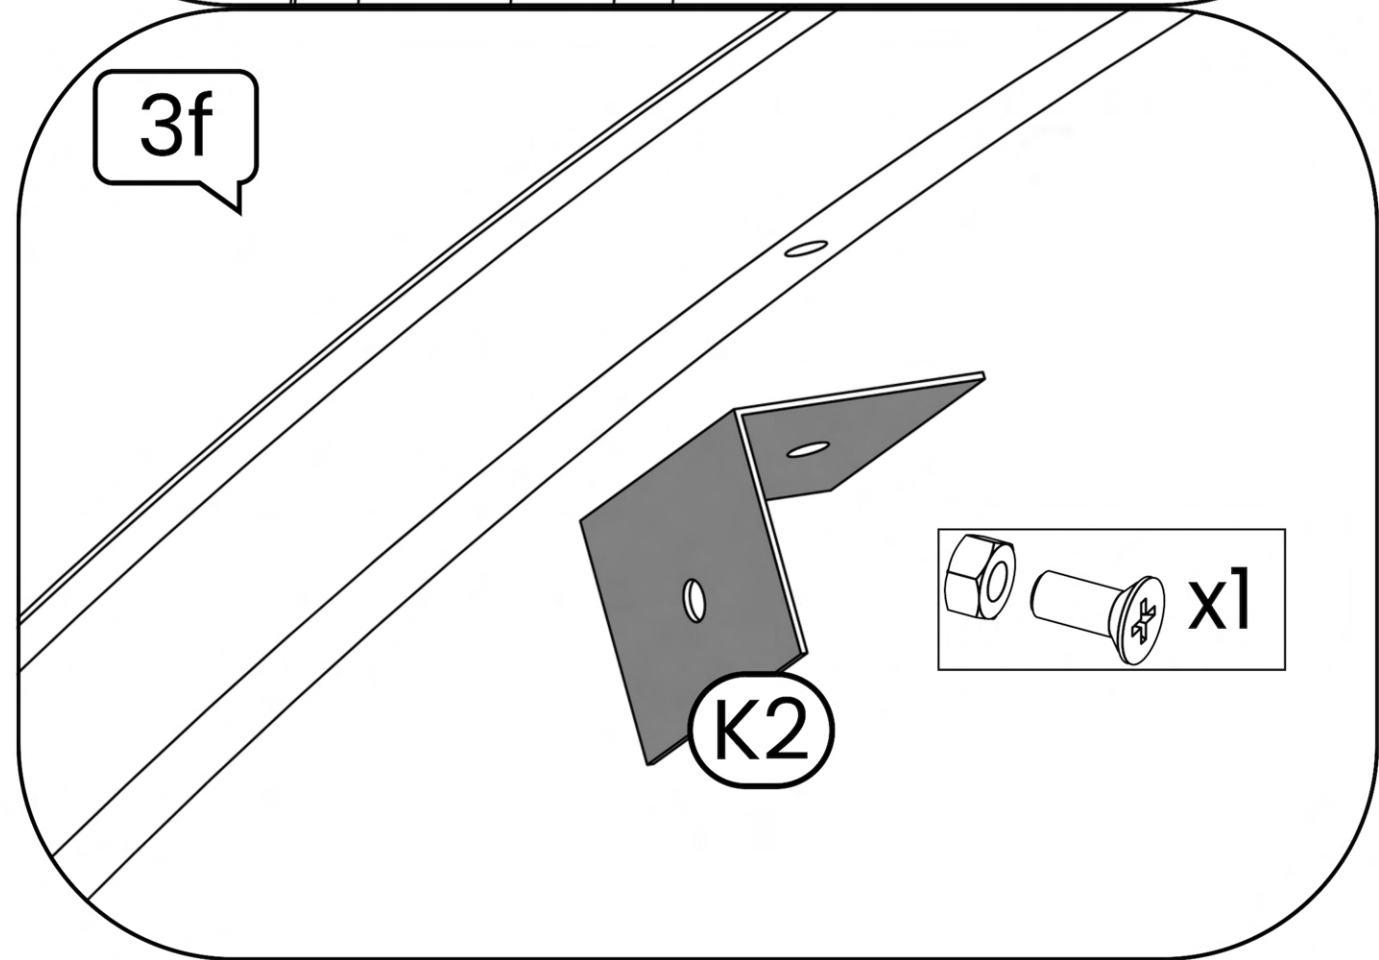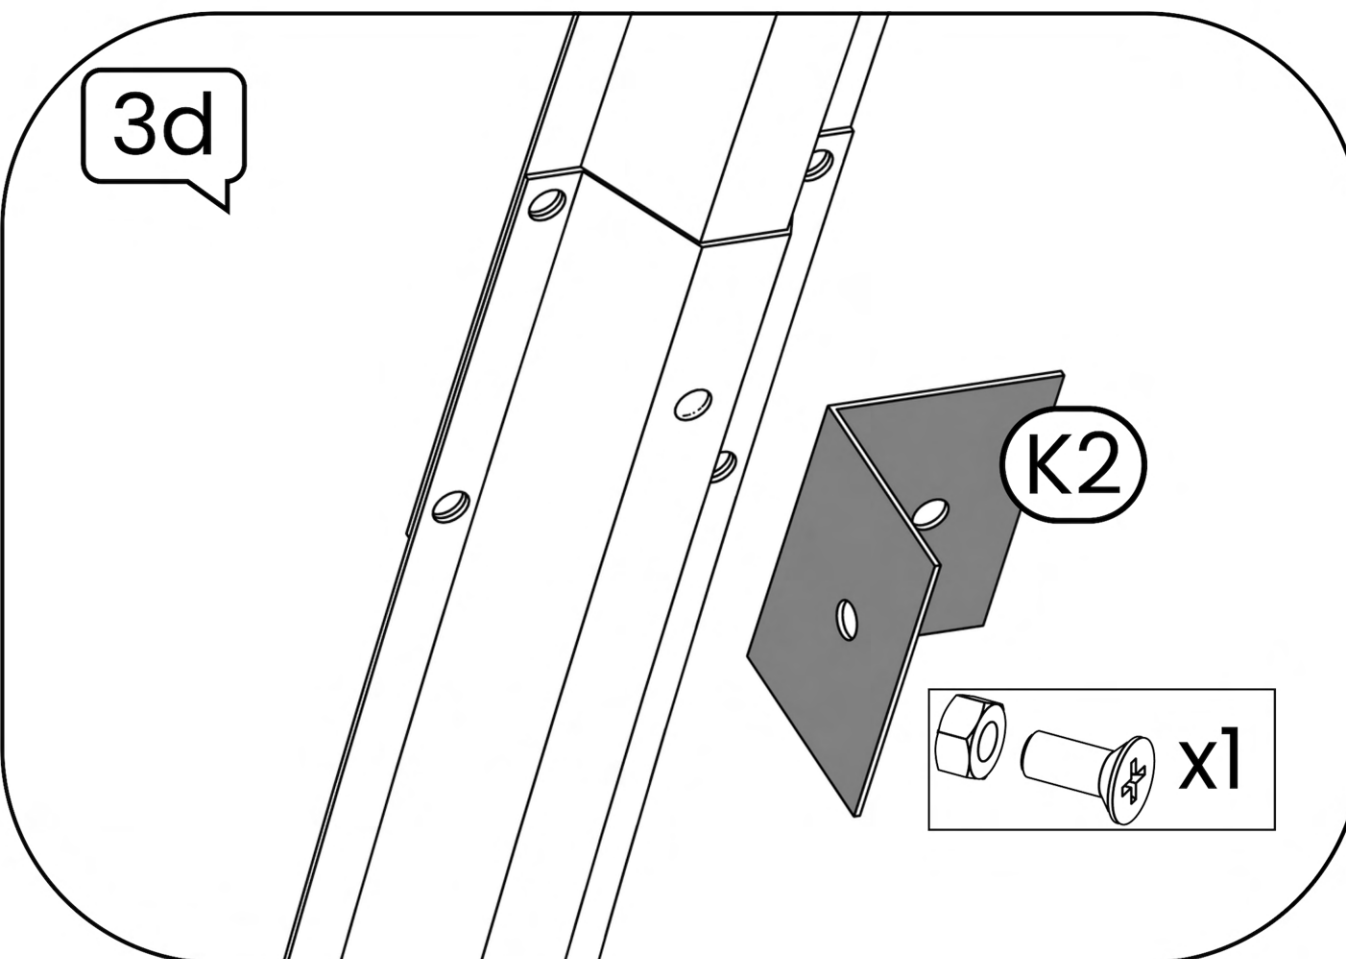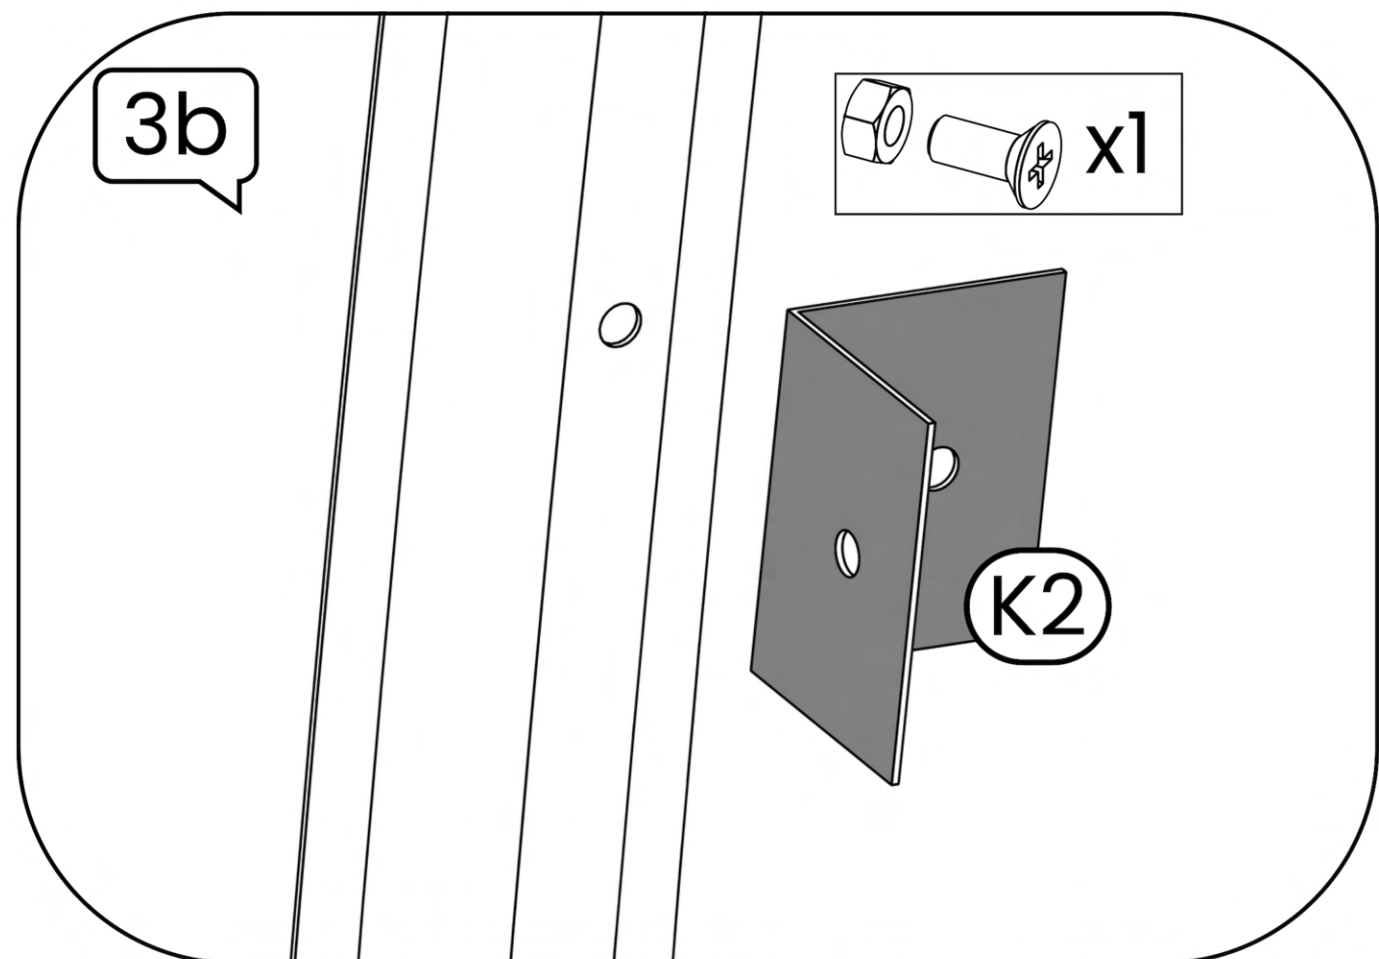

4




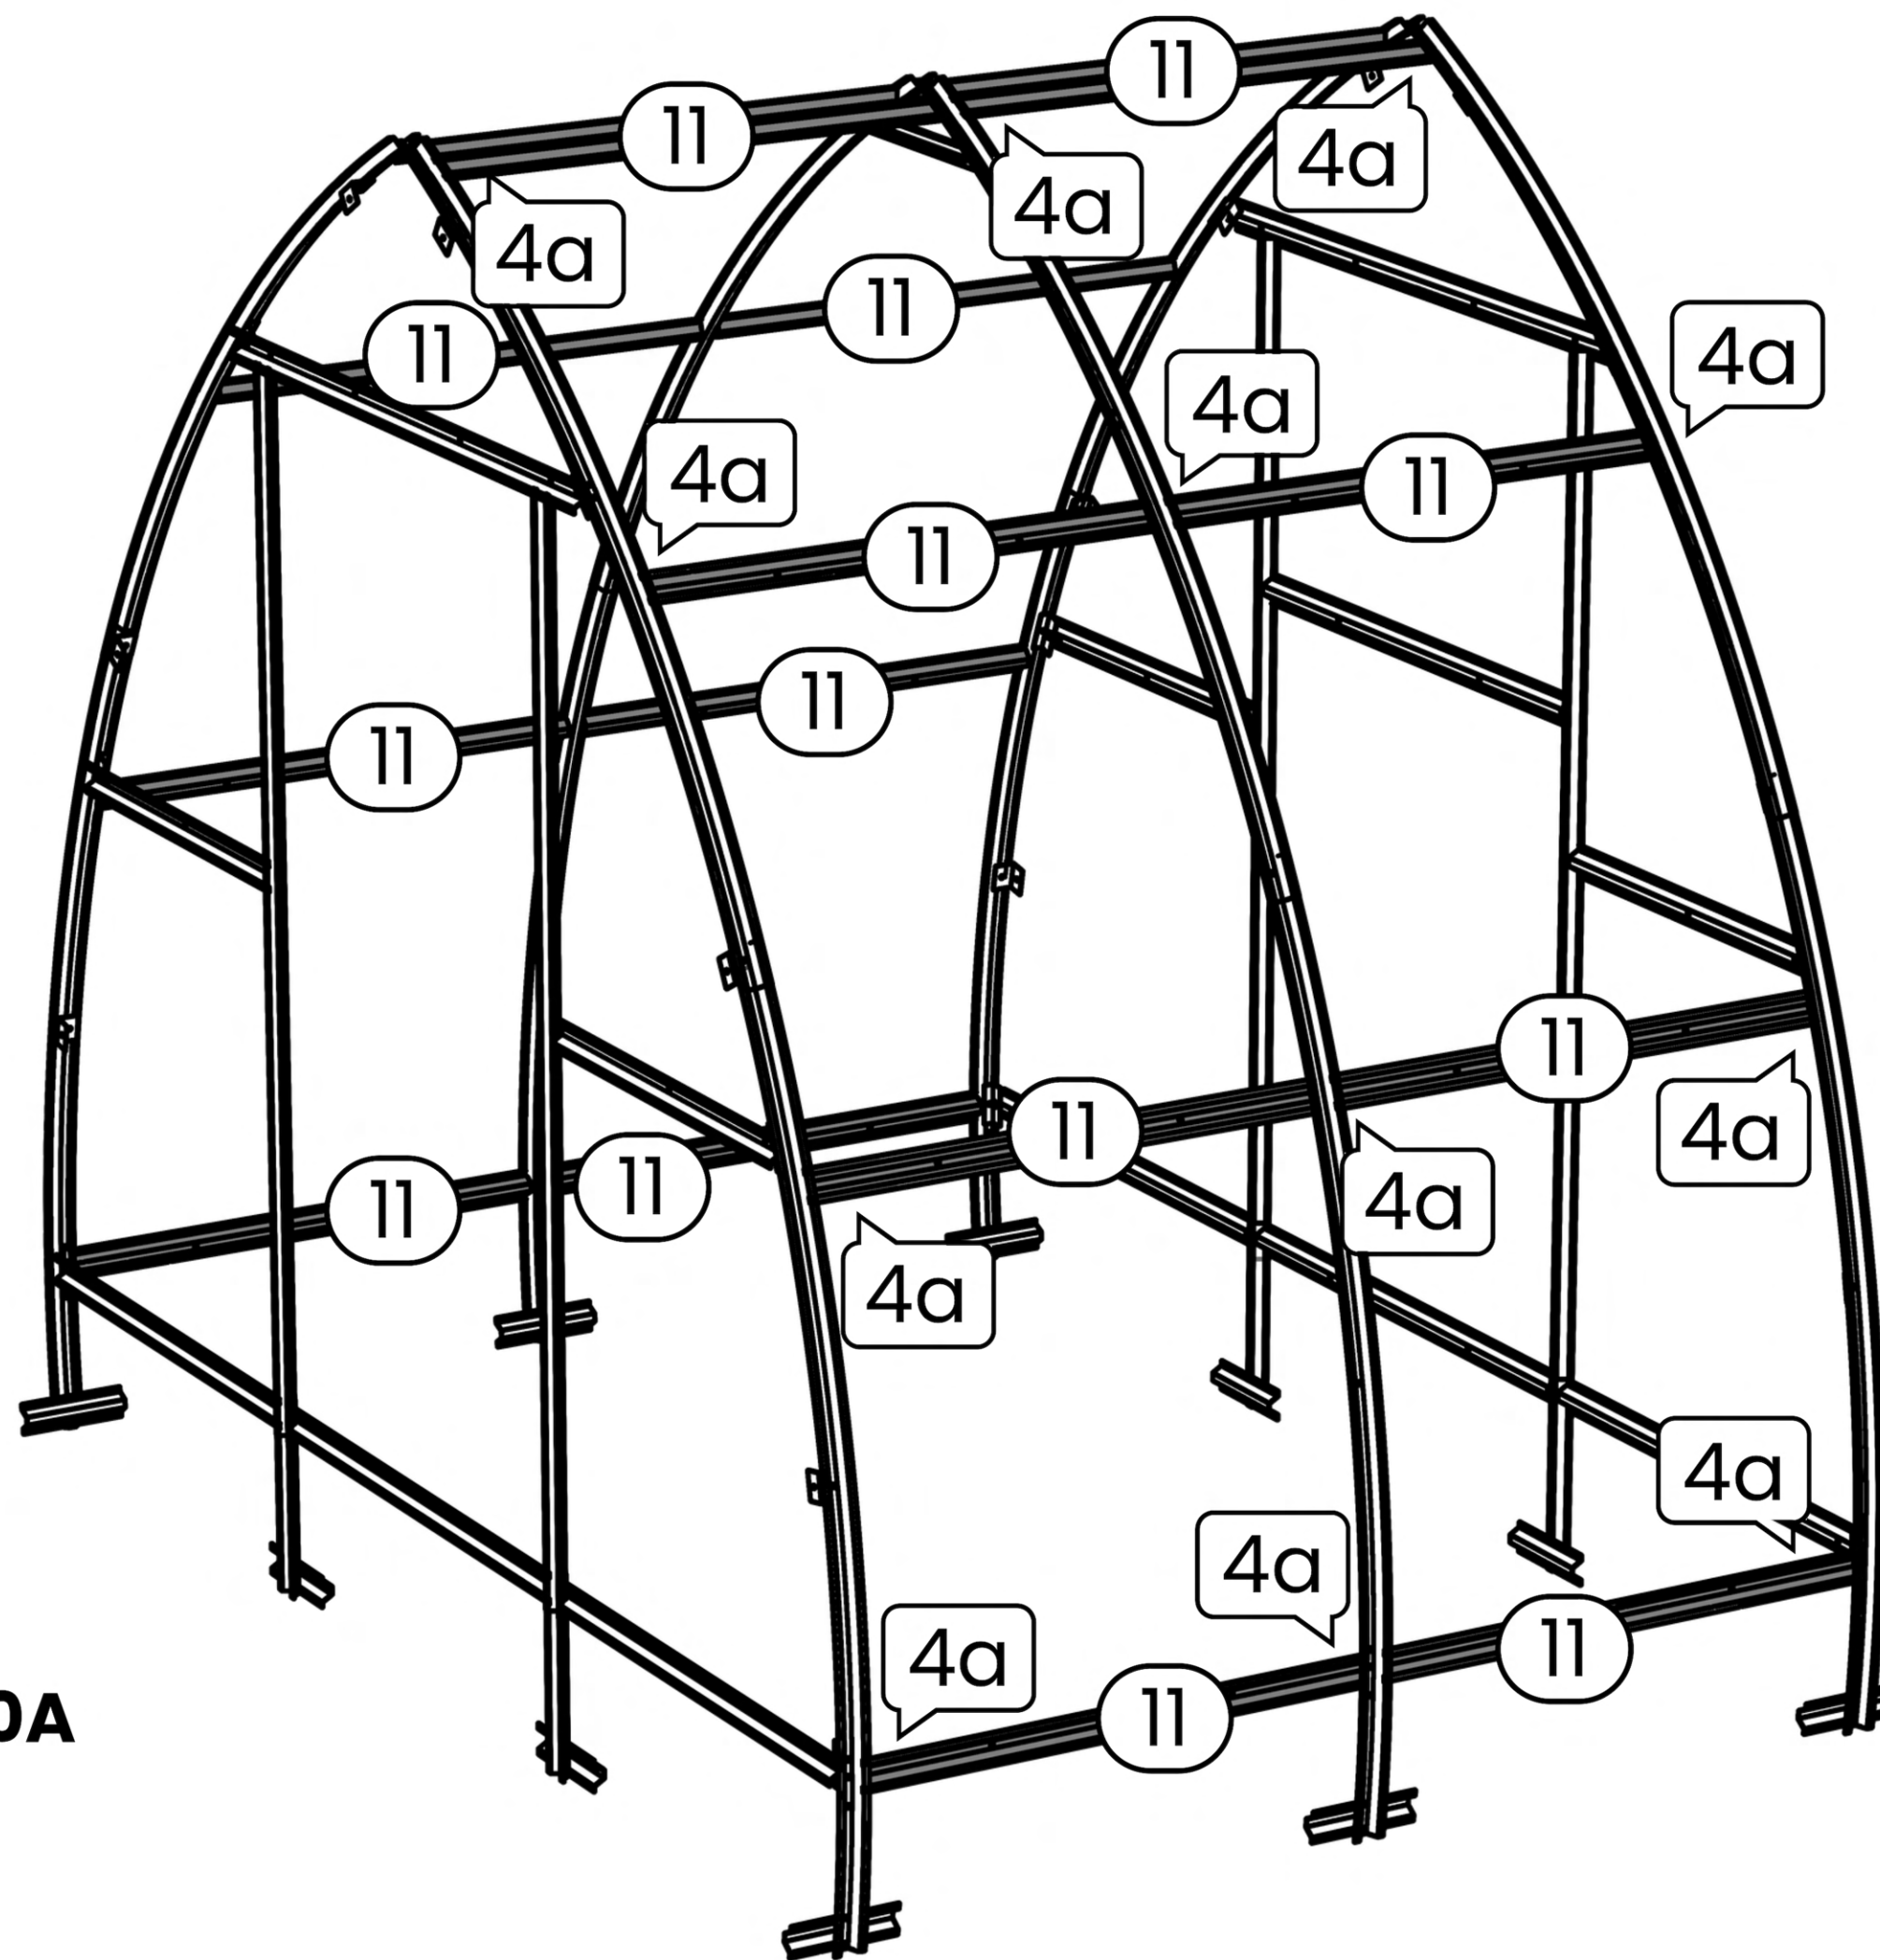


3

0A


Next page

4a

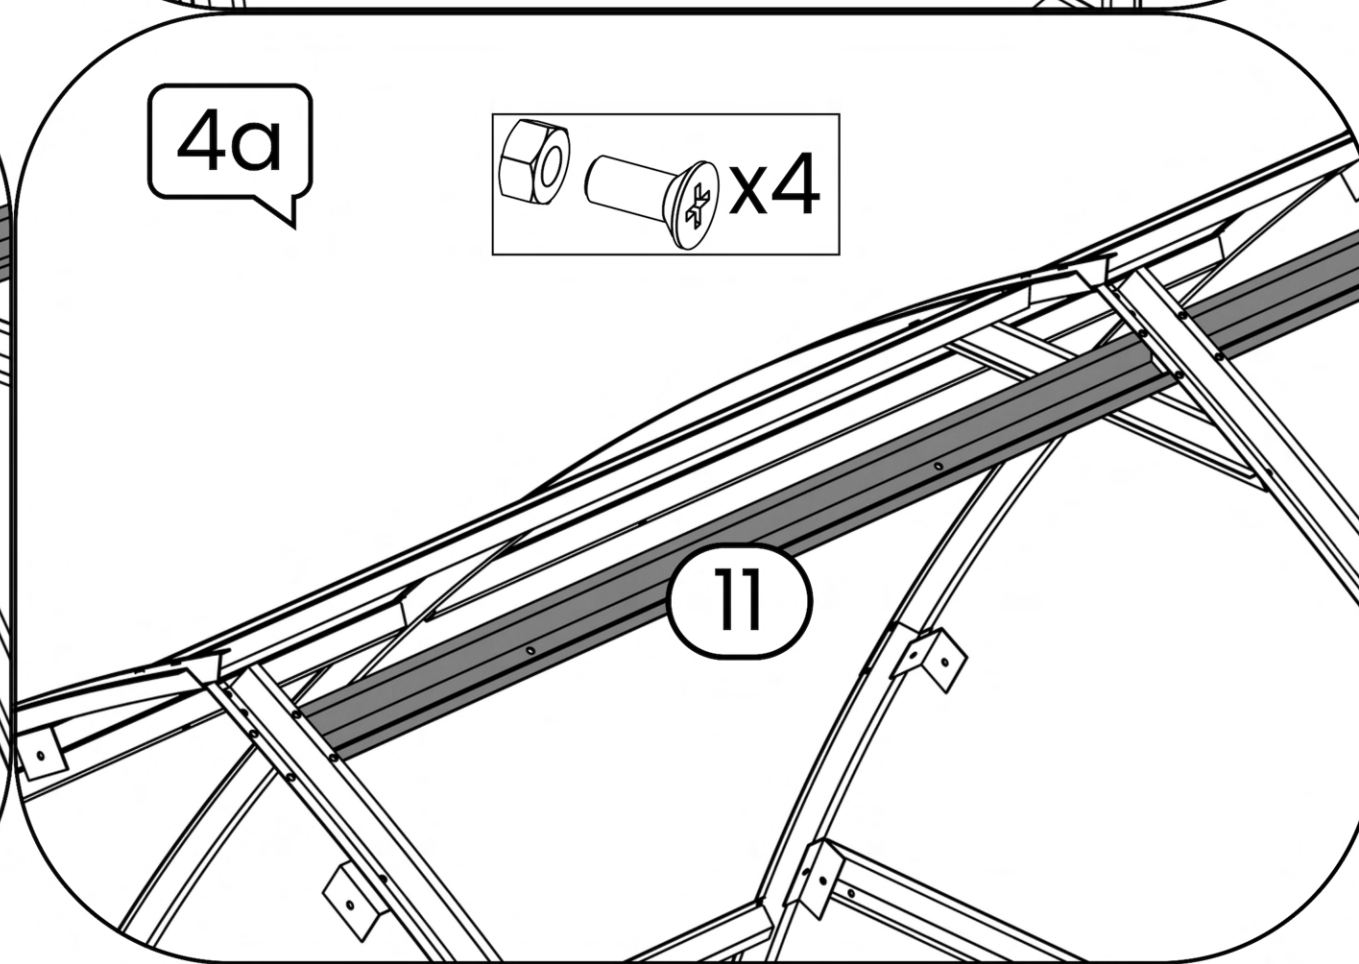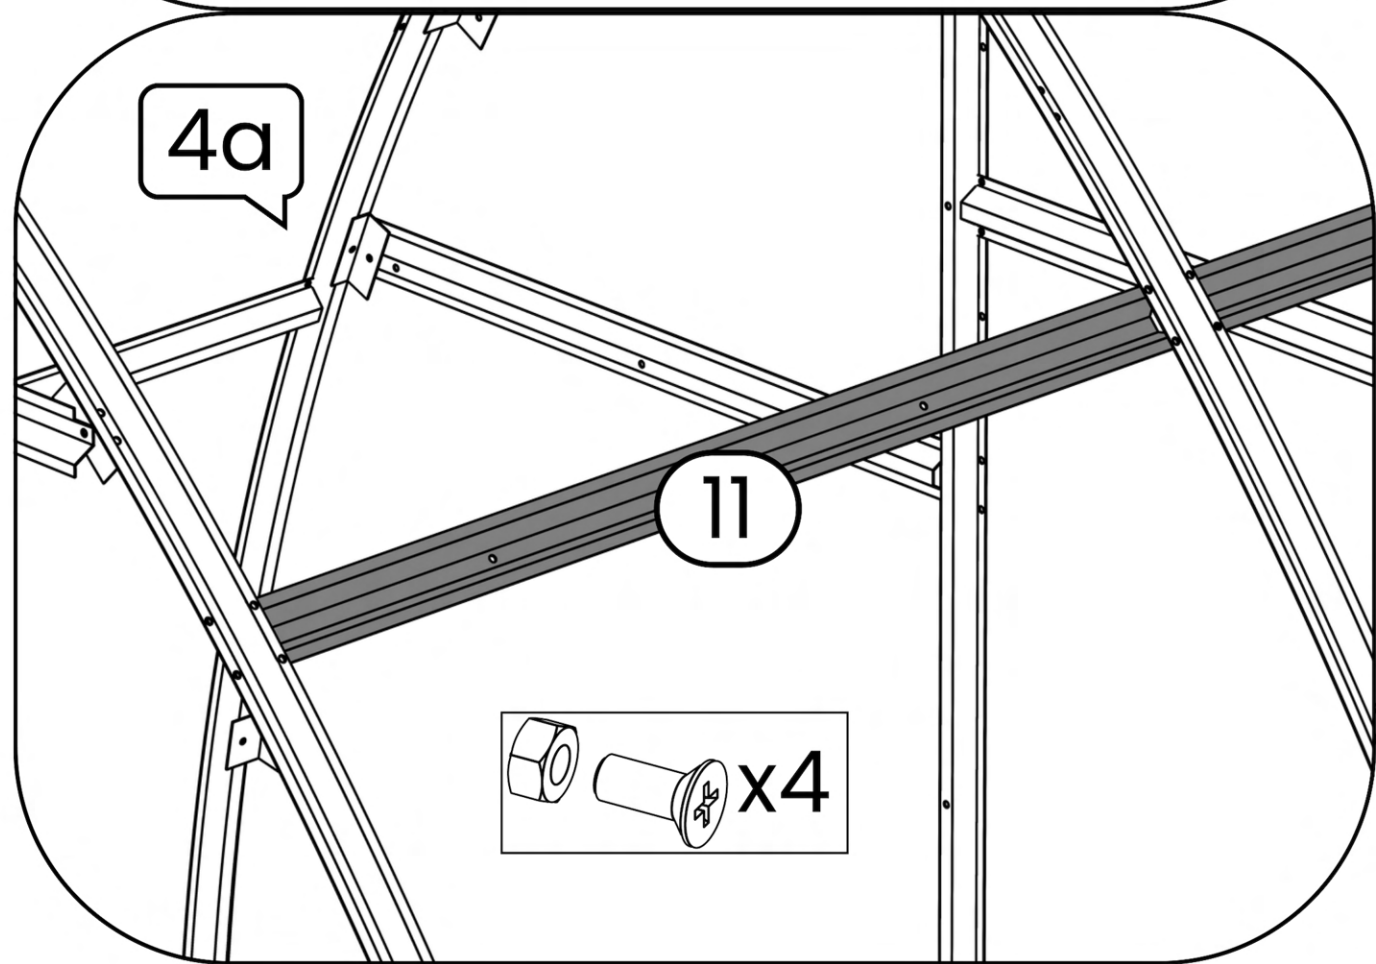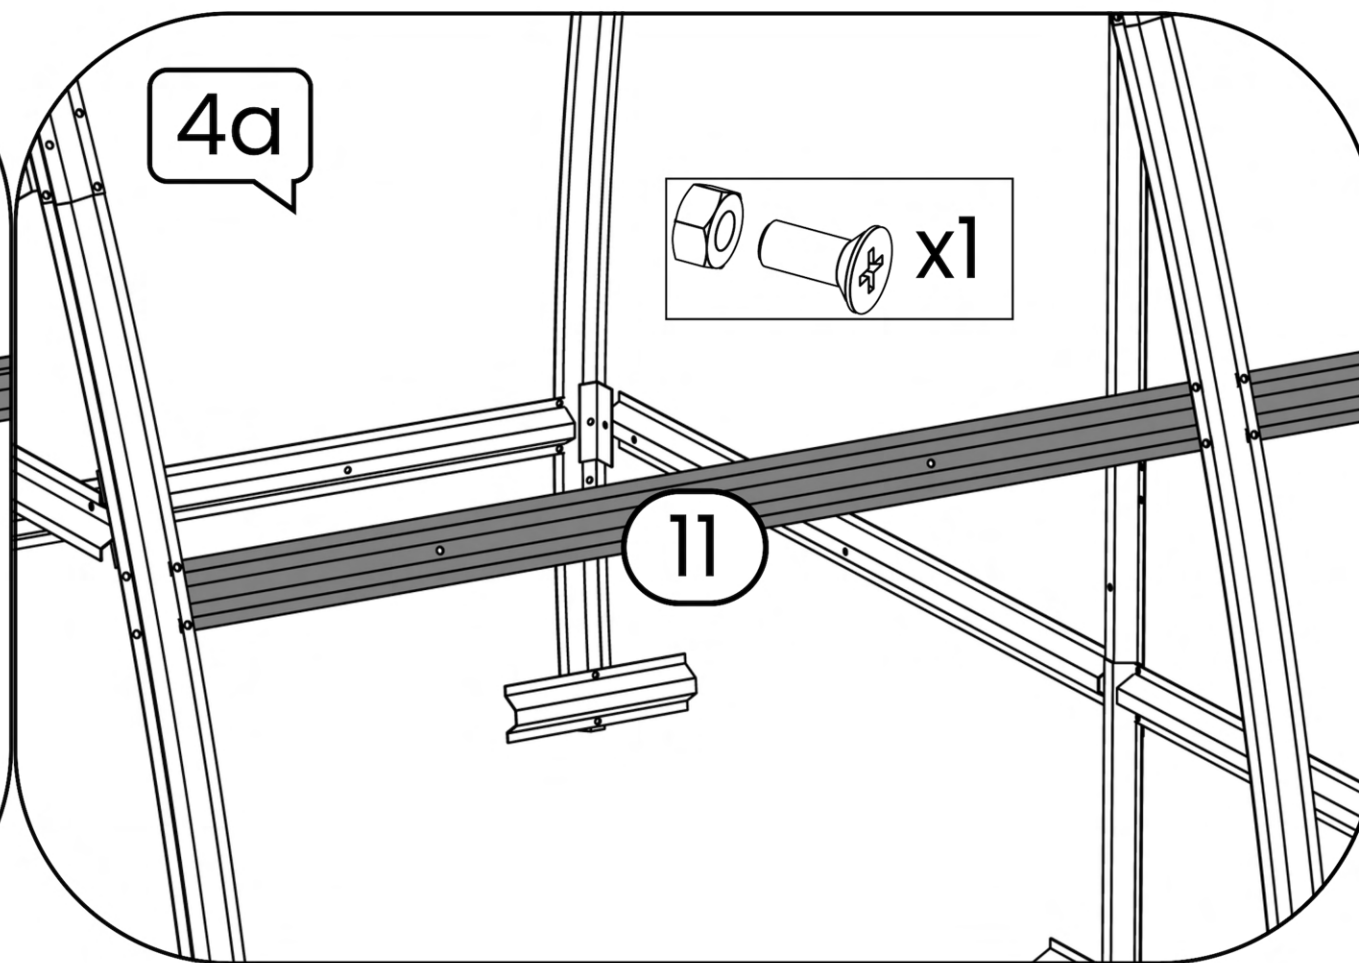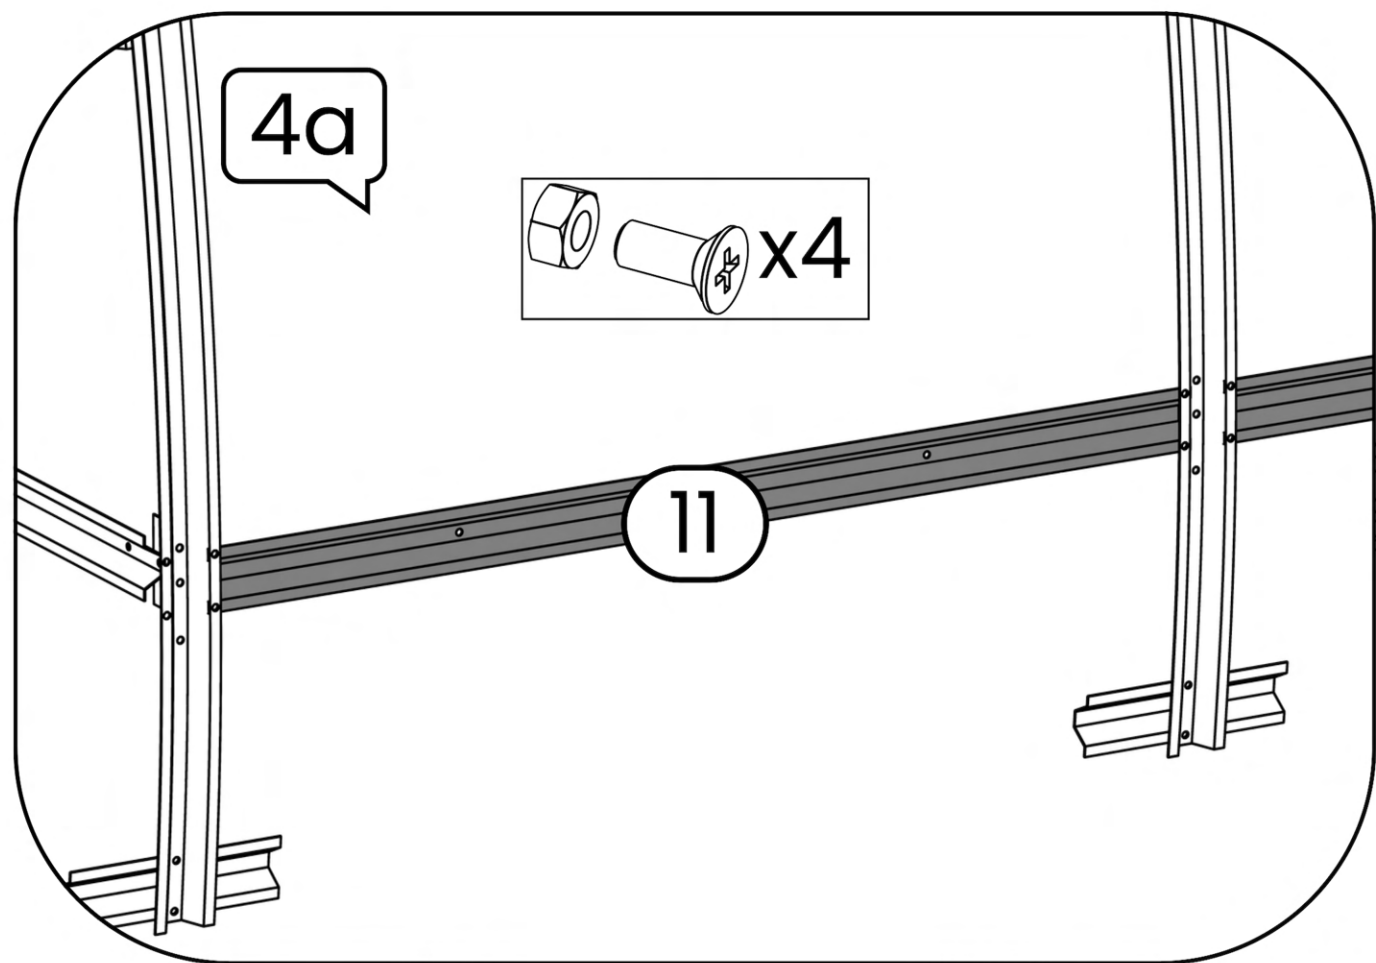

5

Only for the
middle arch!

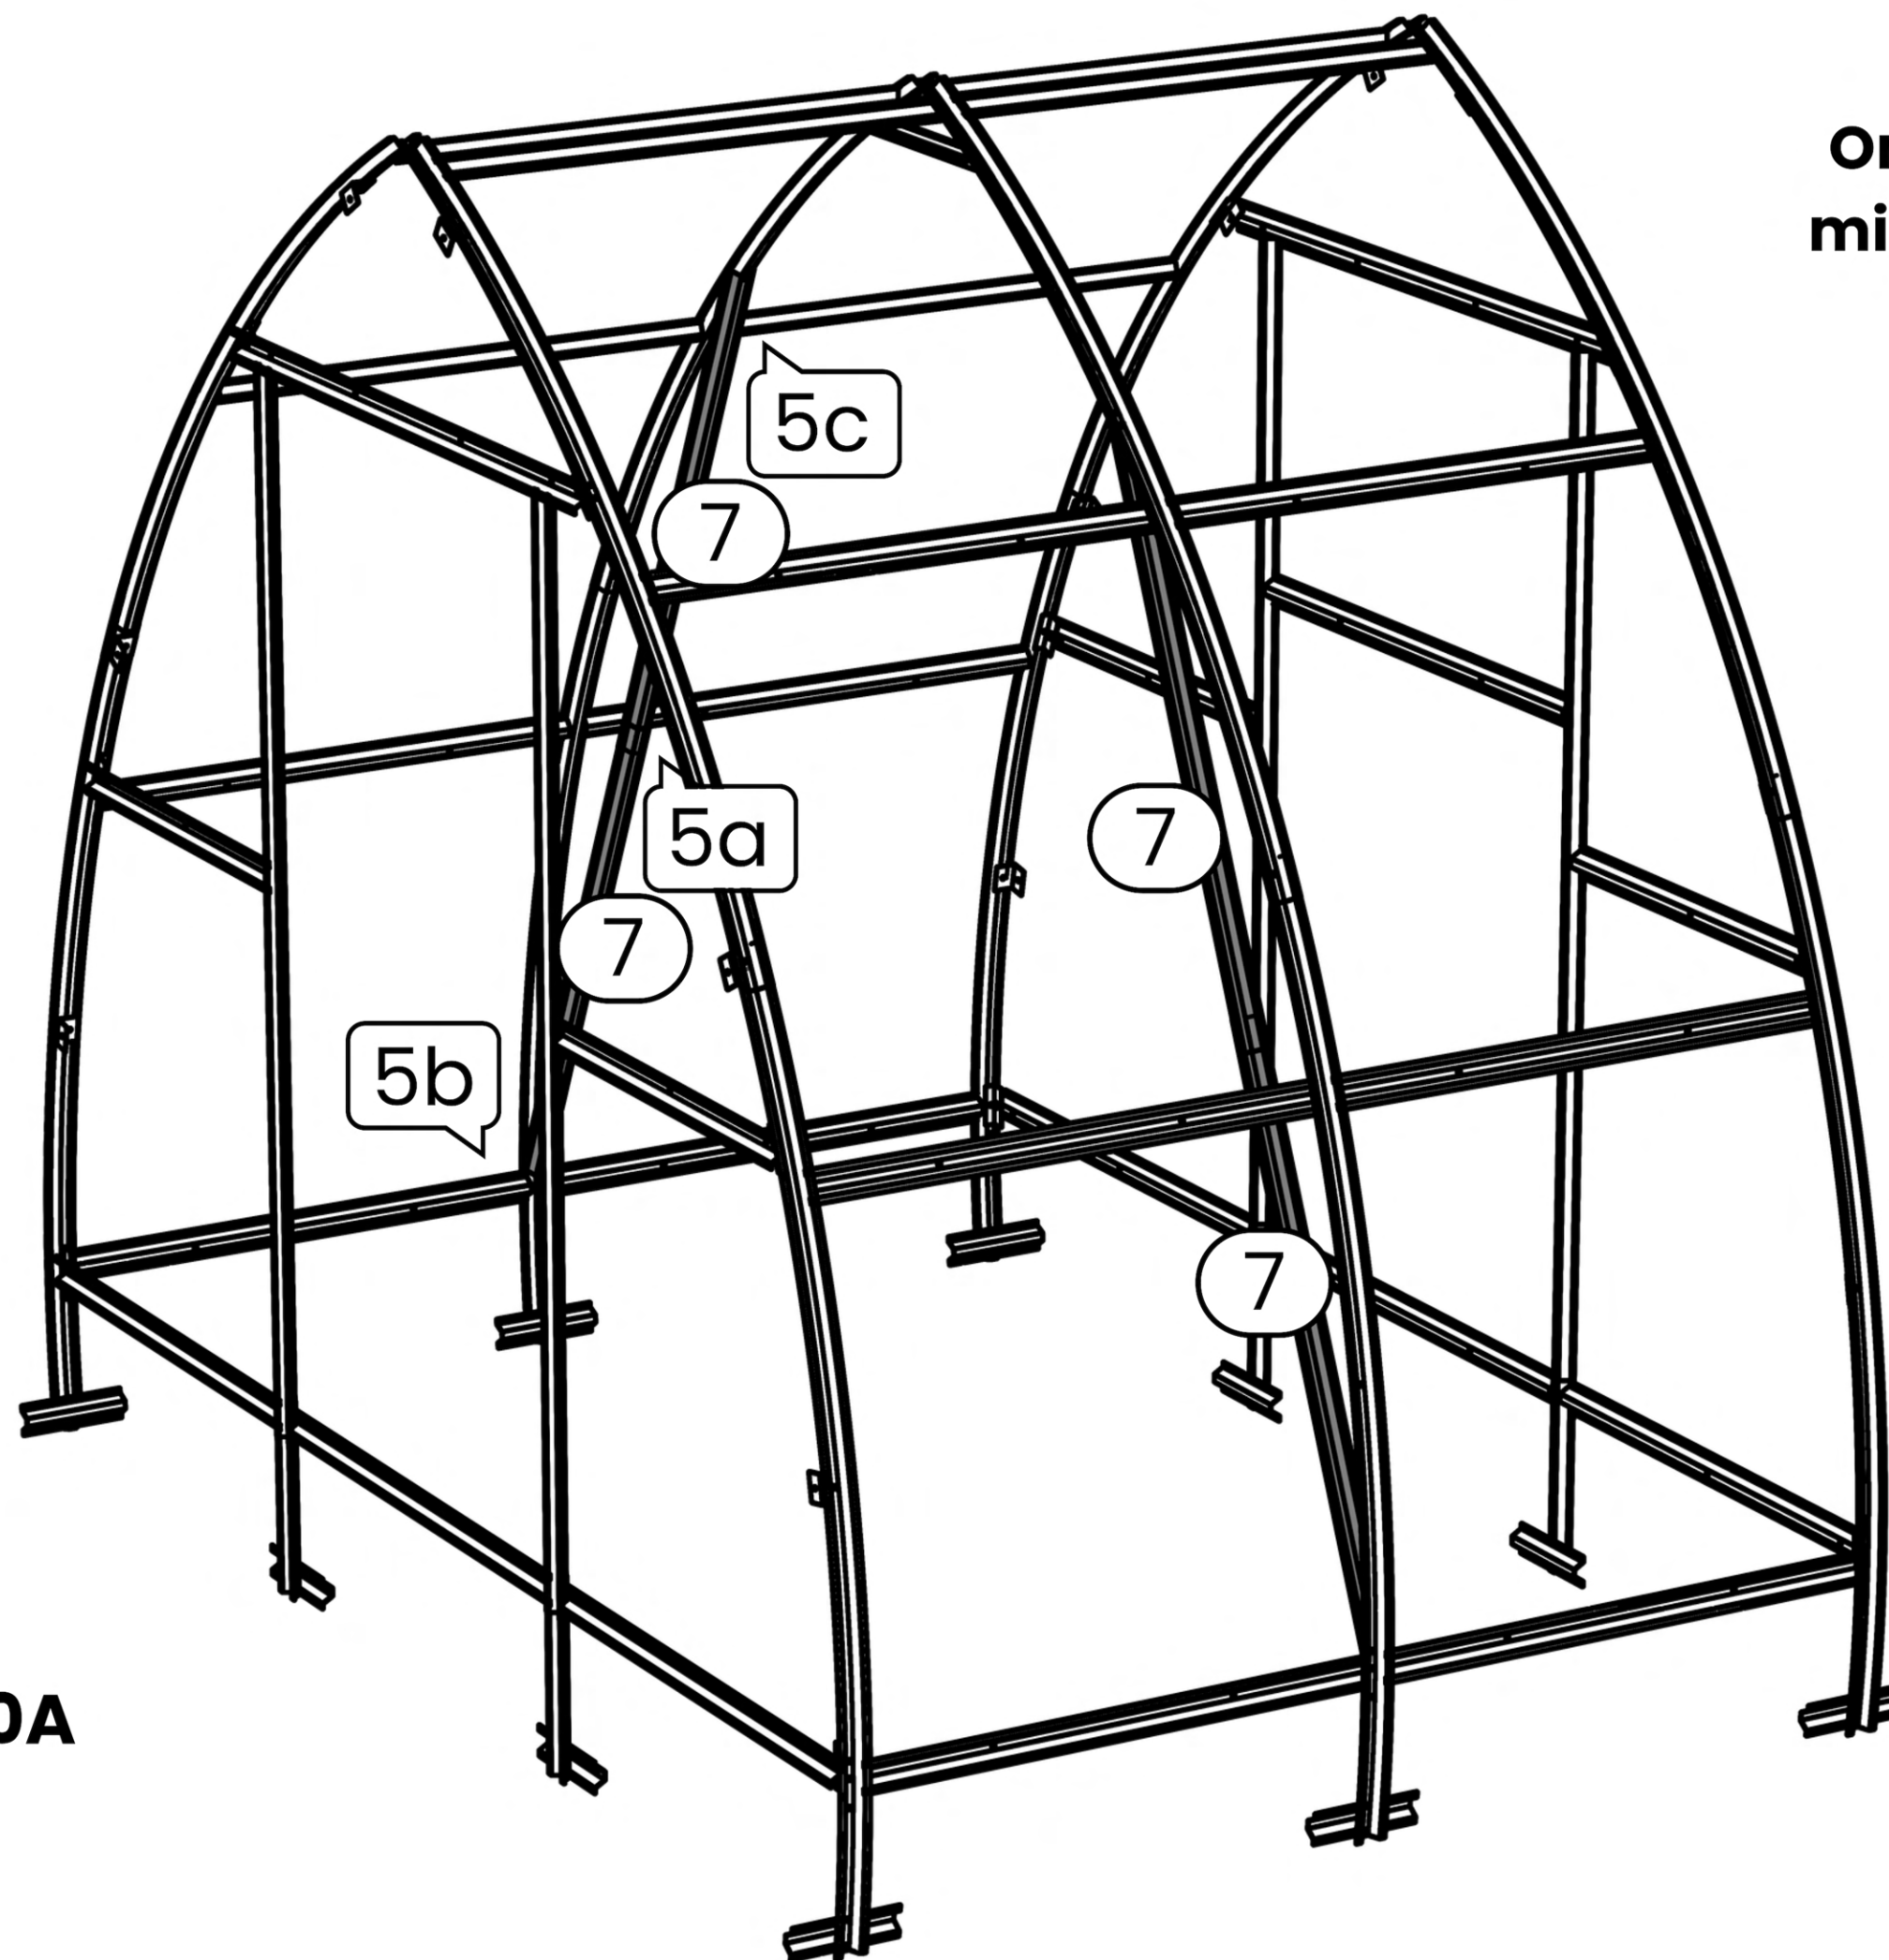

3




0A




Next page

5a



5b

5c

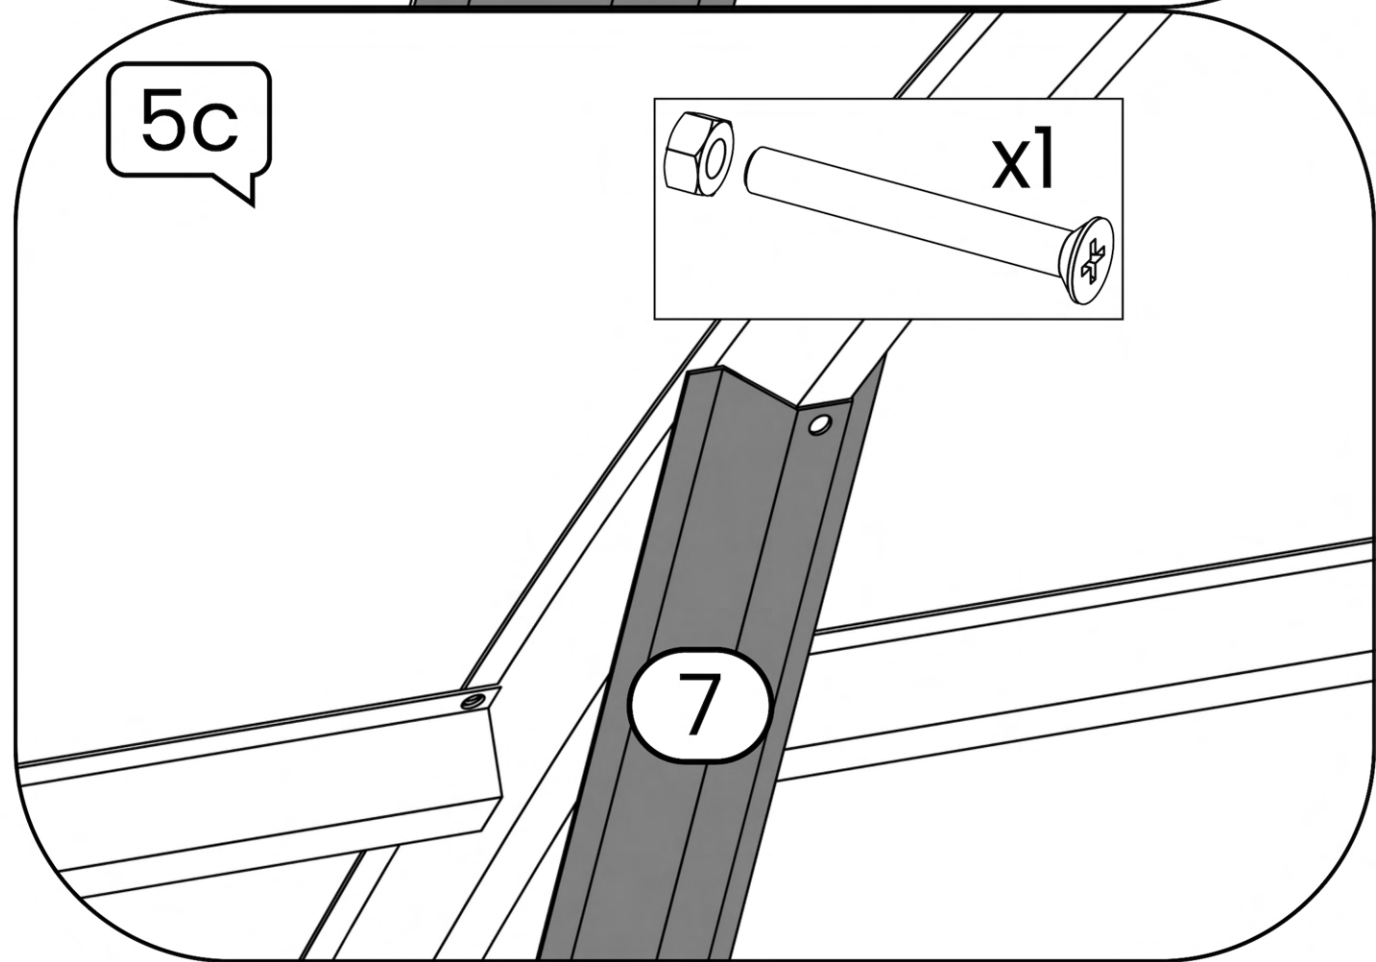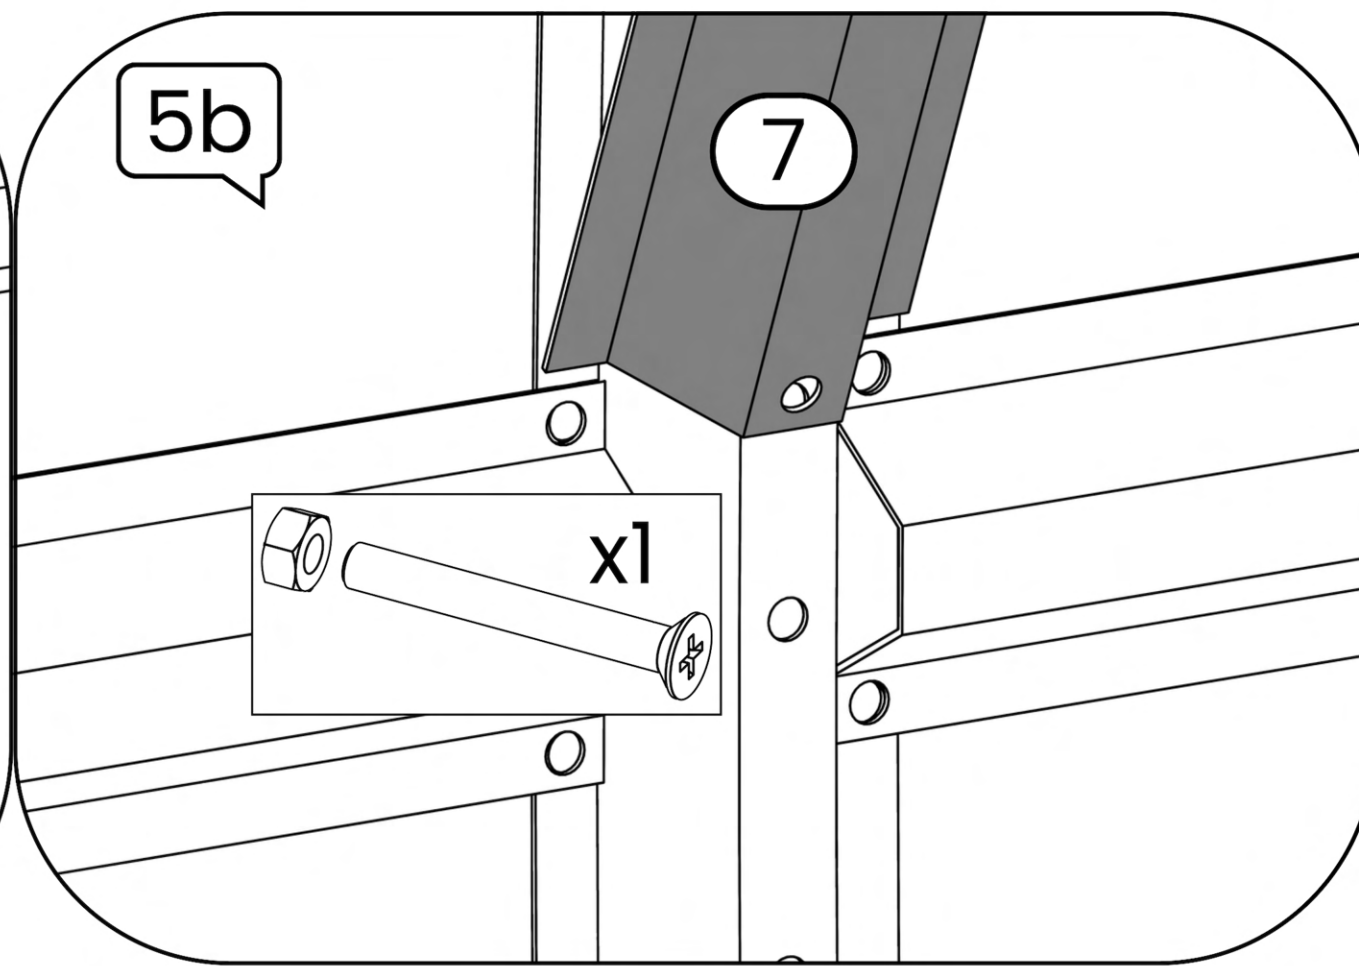
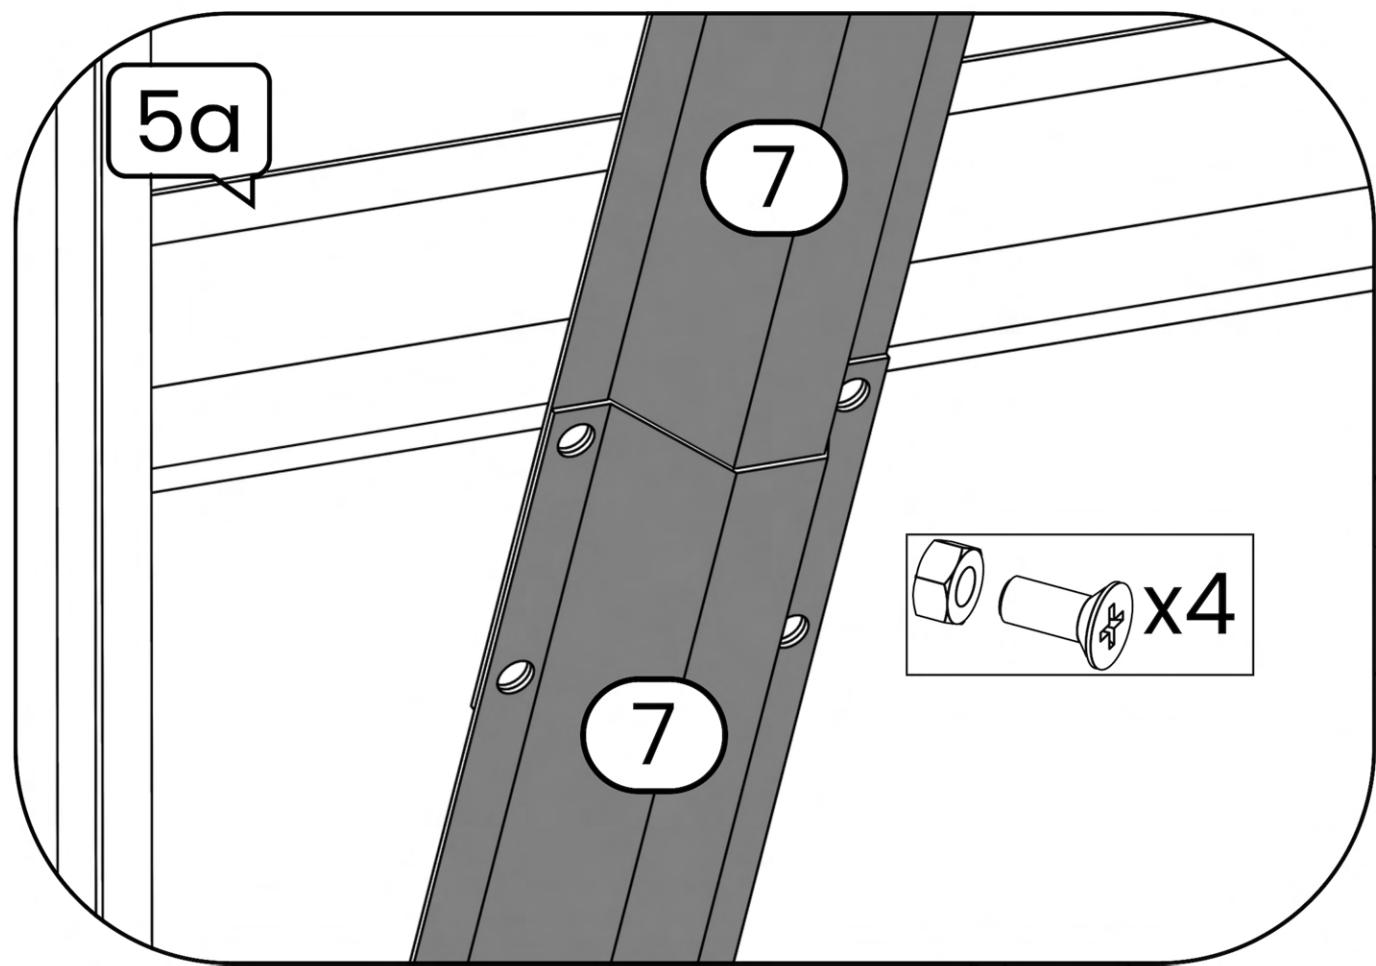


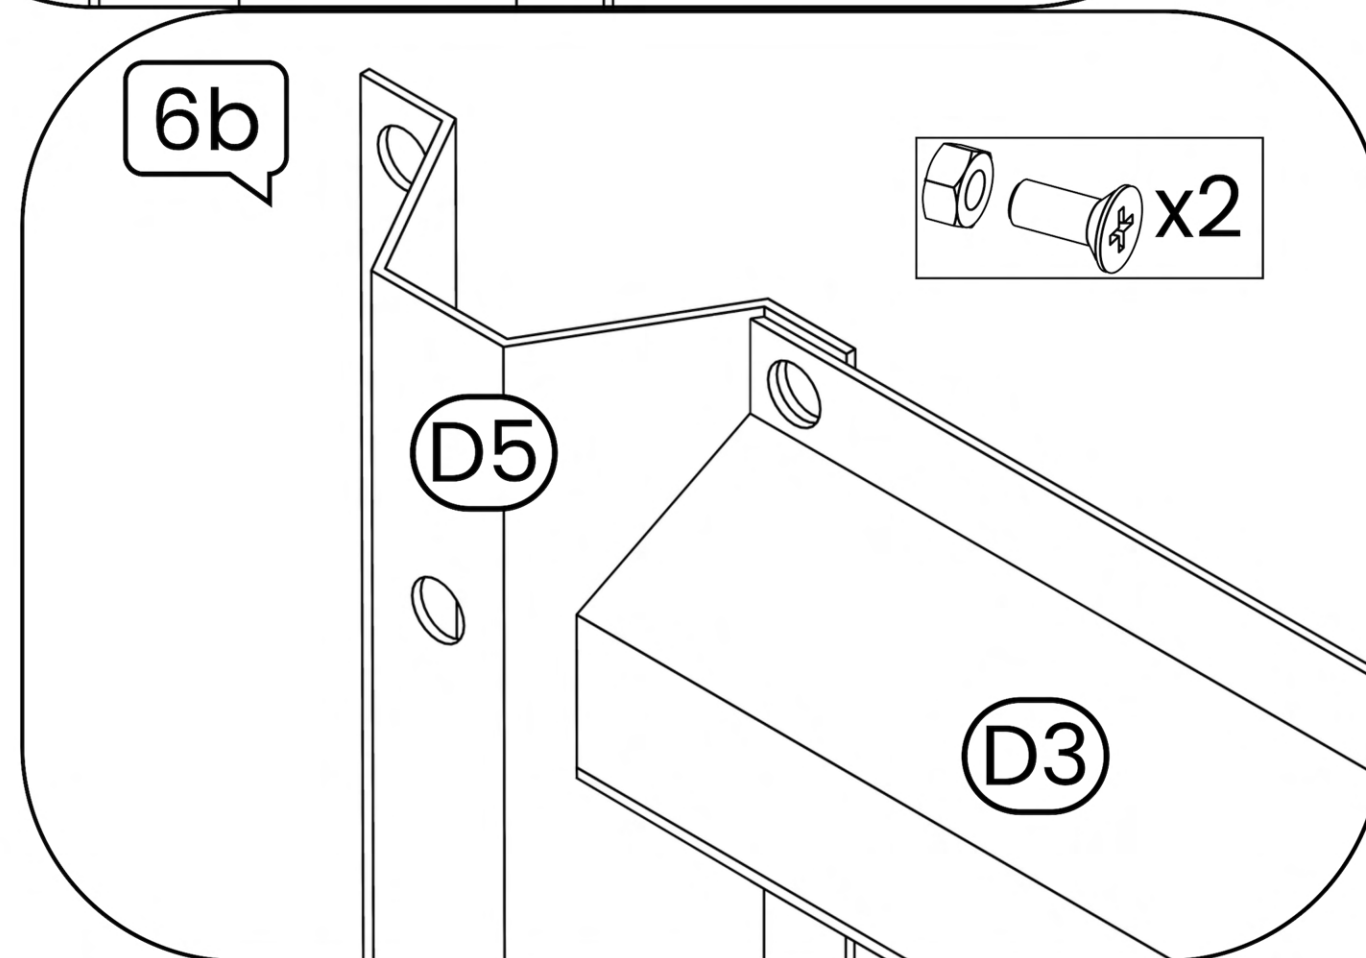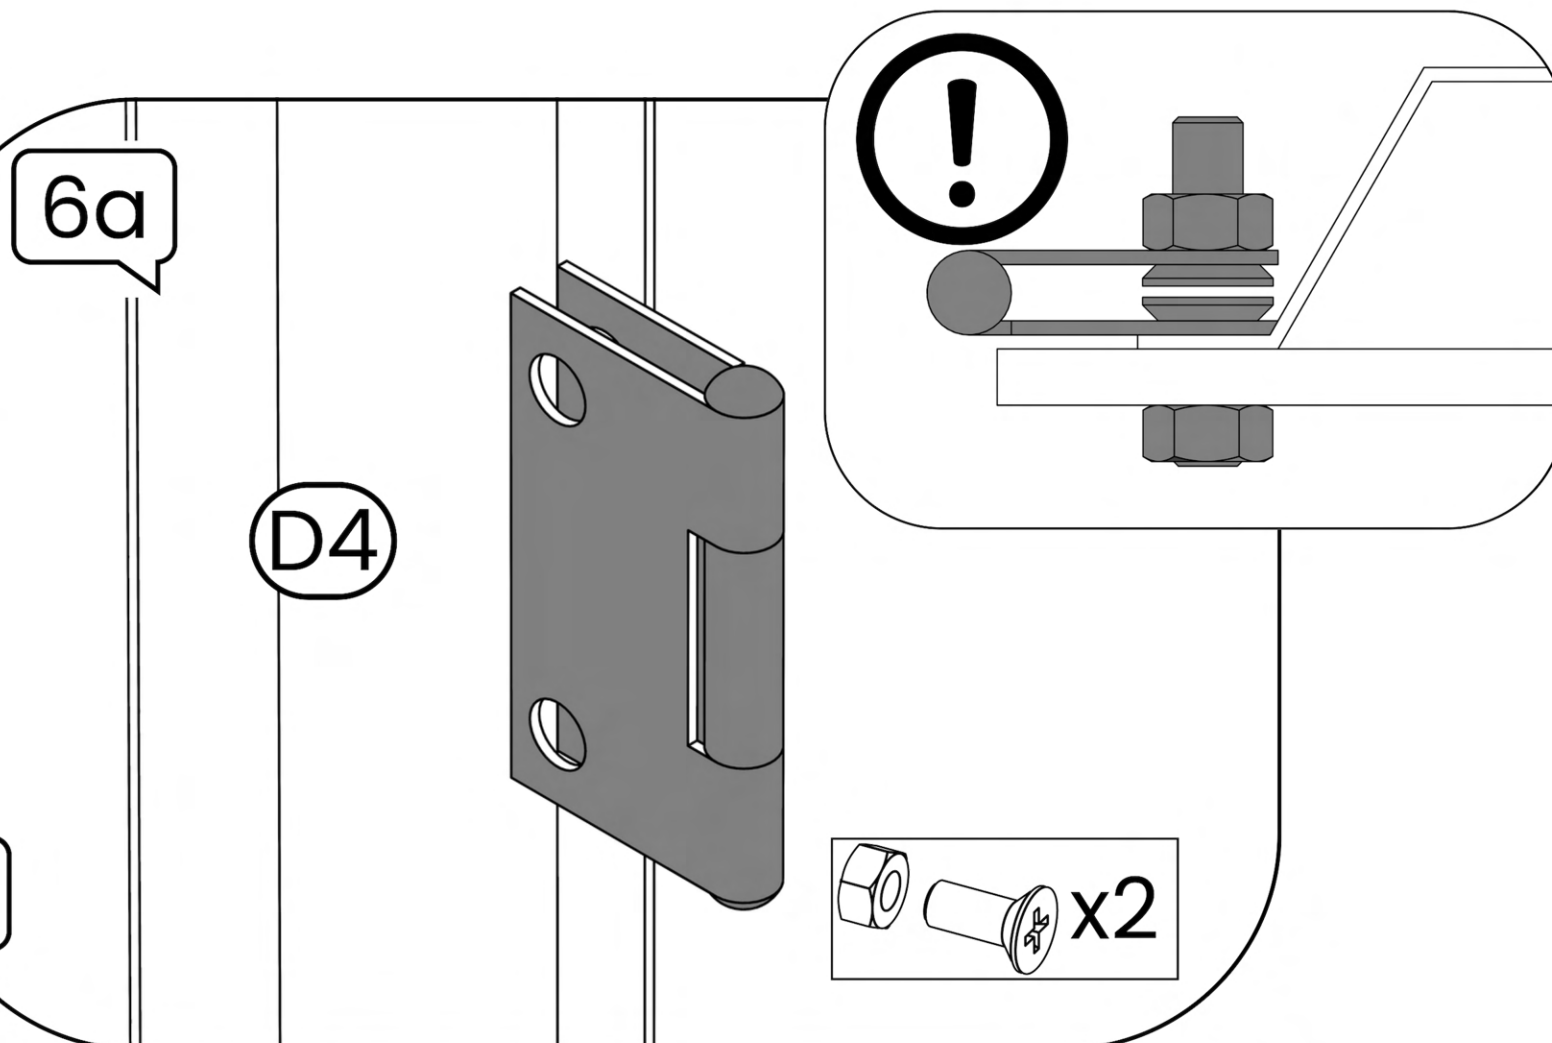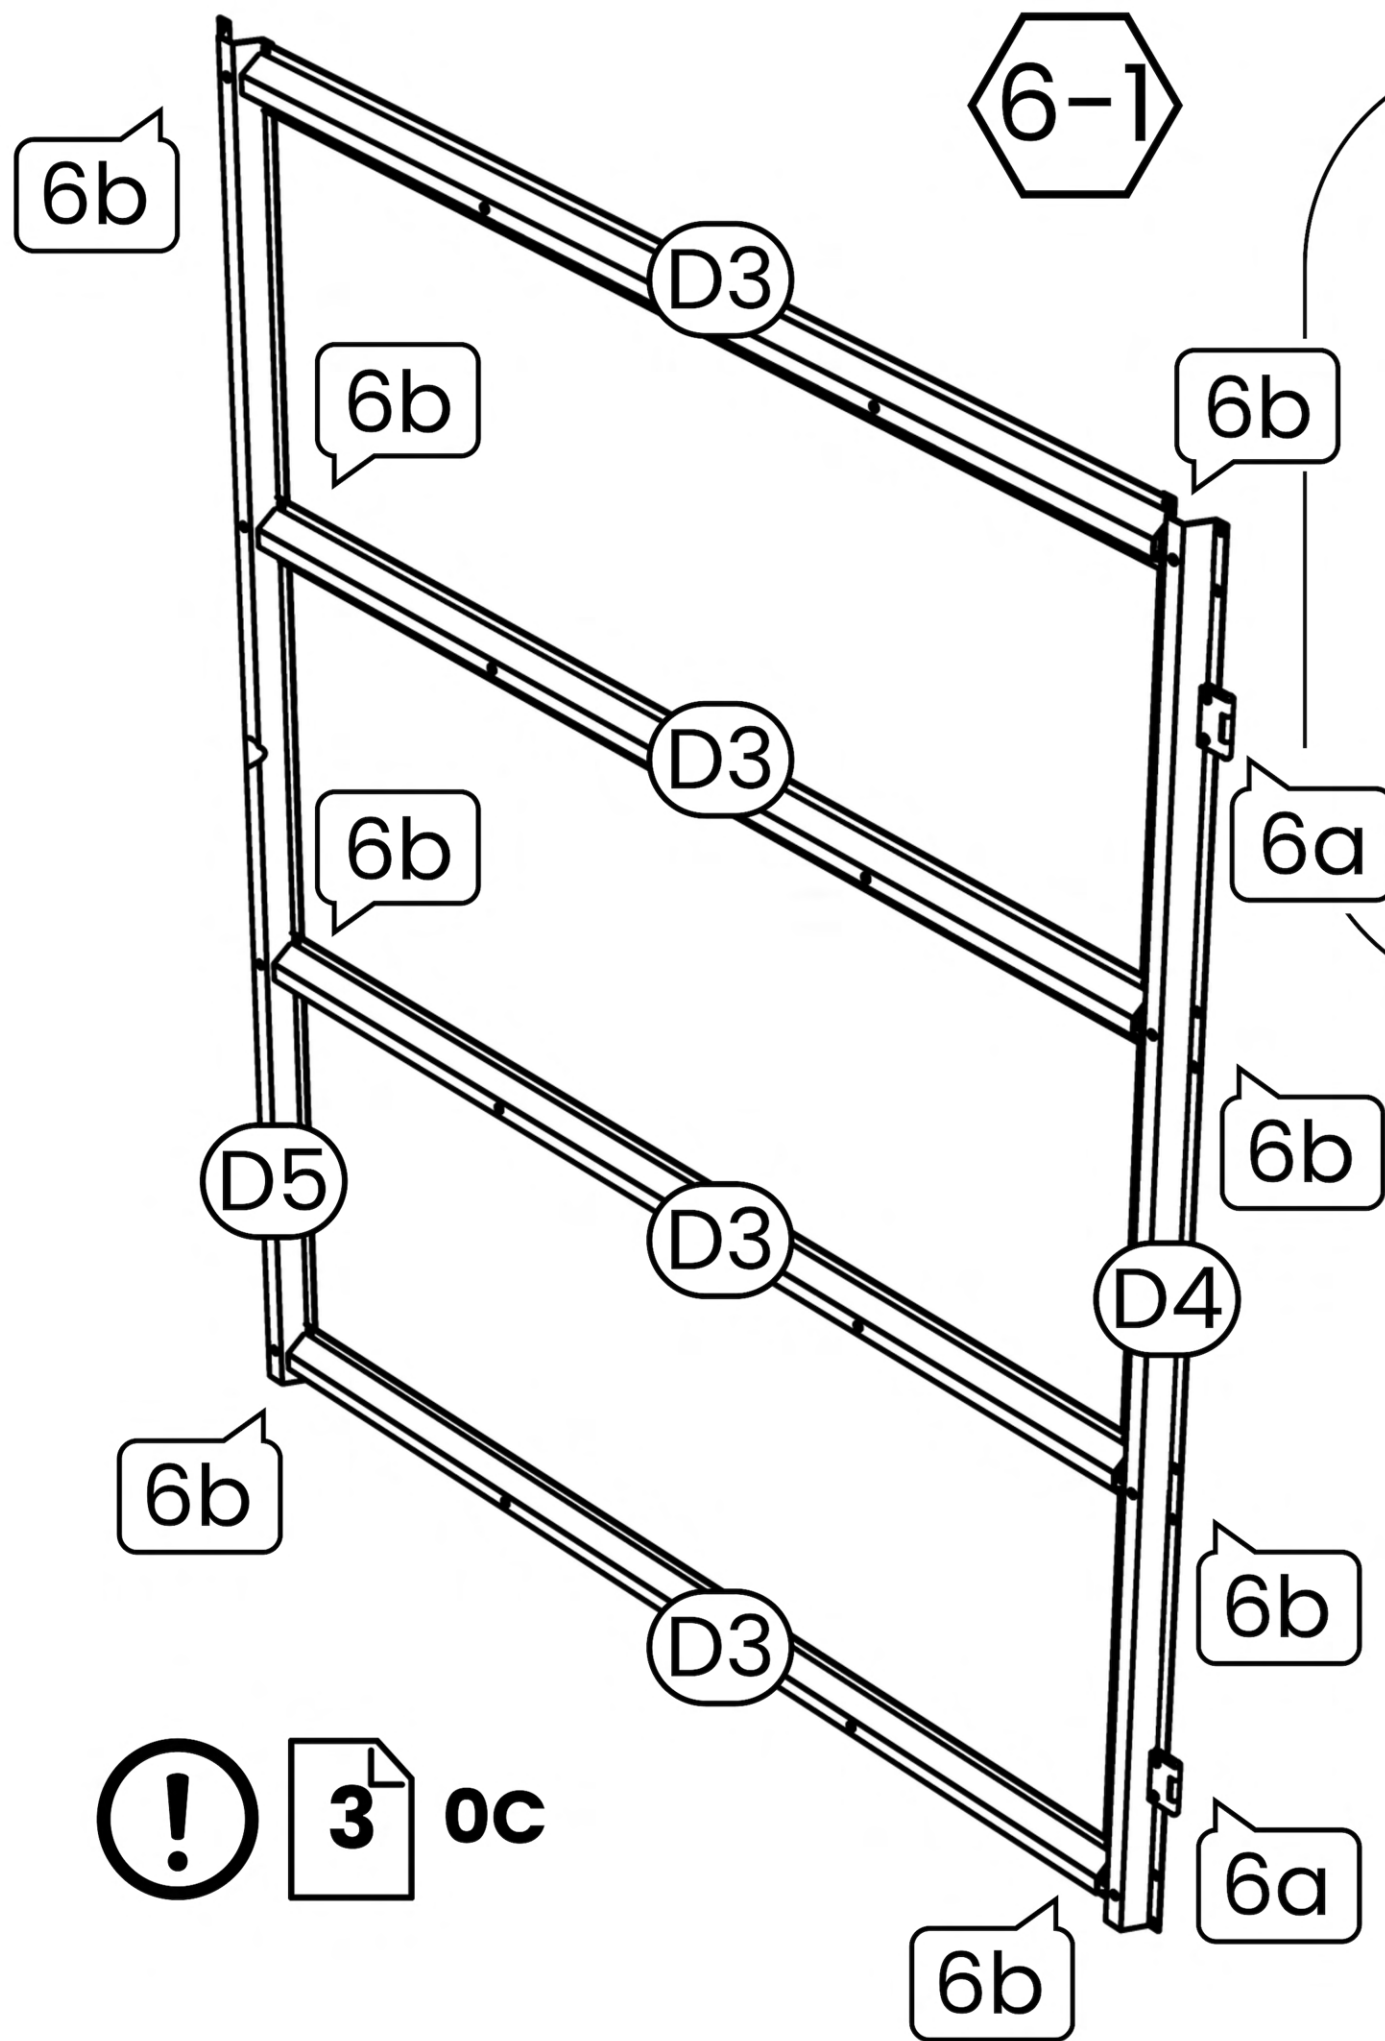


6-2

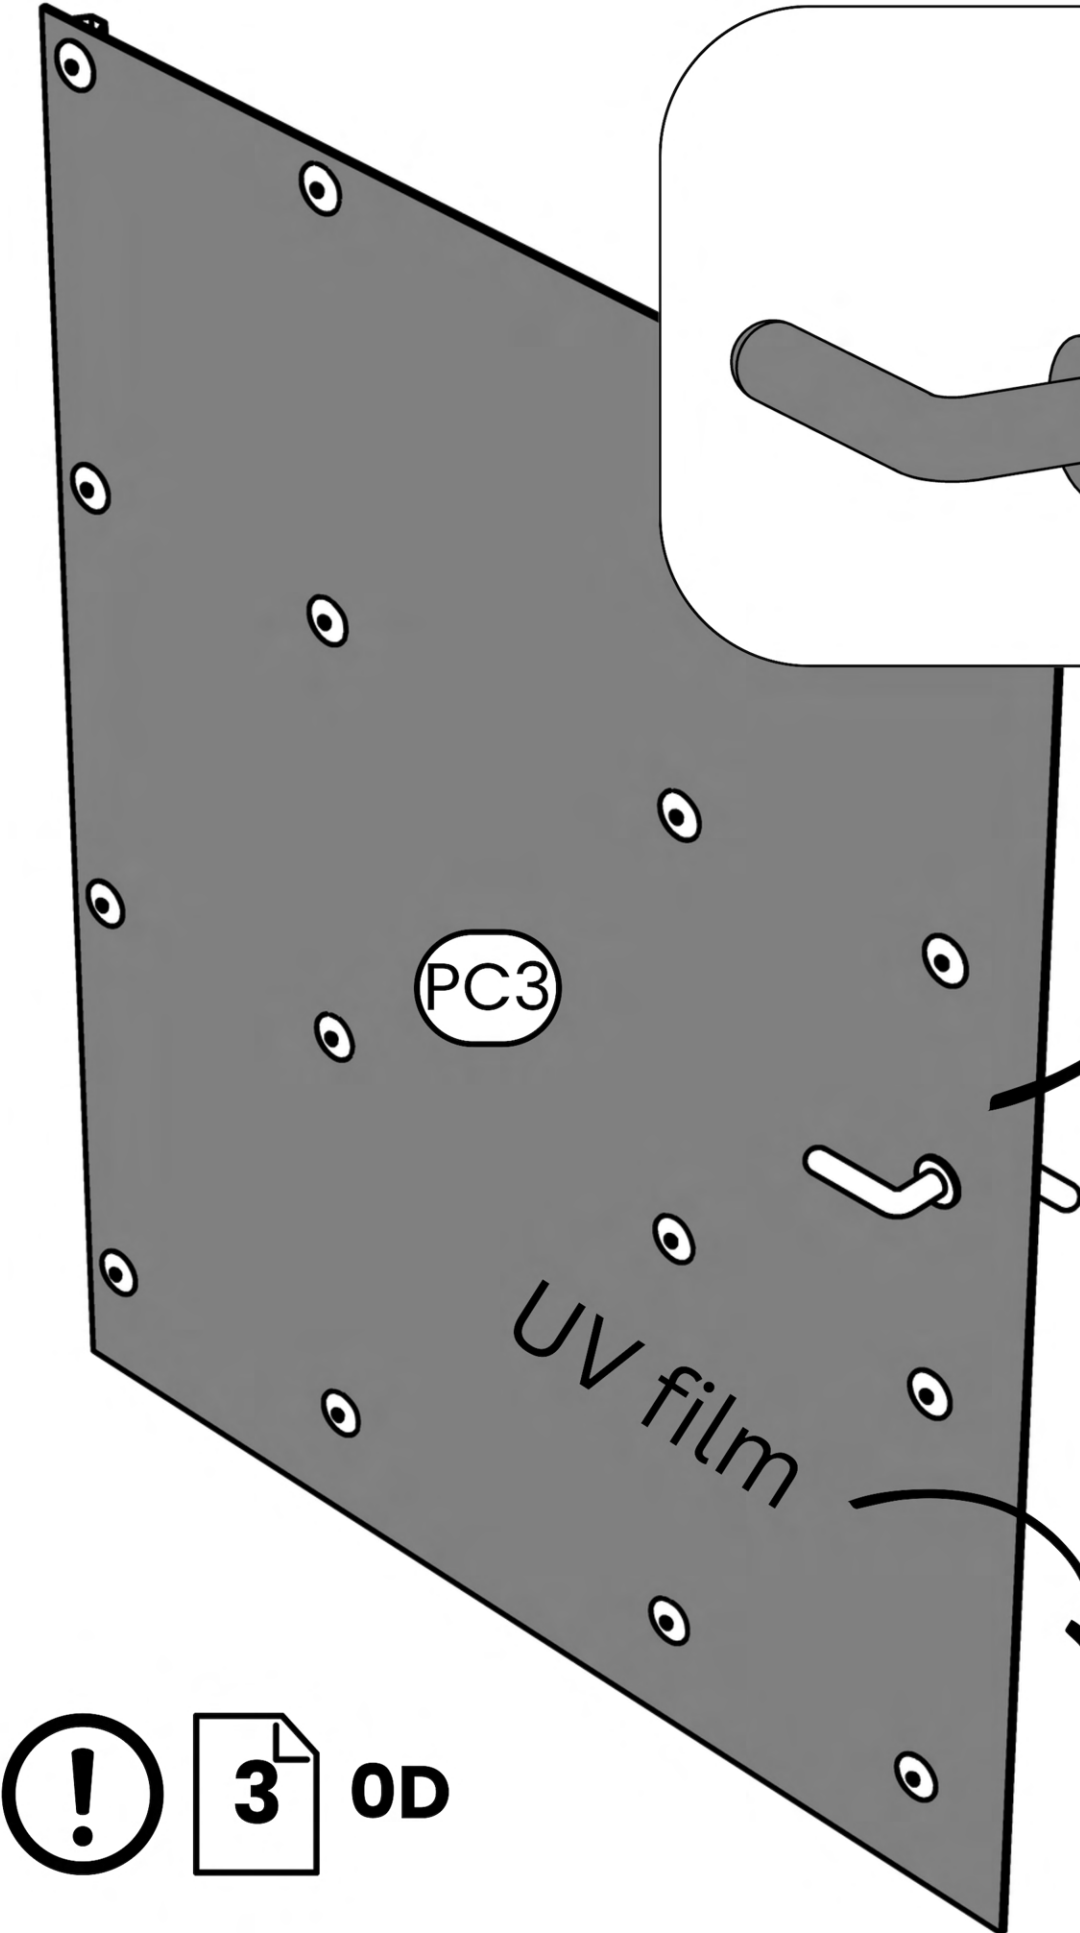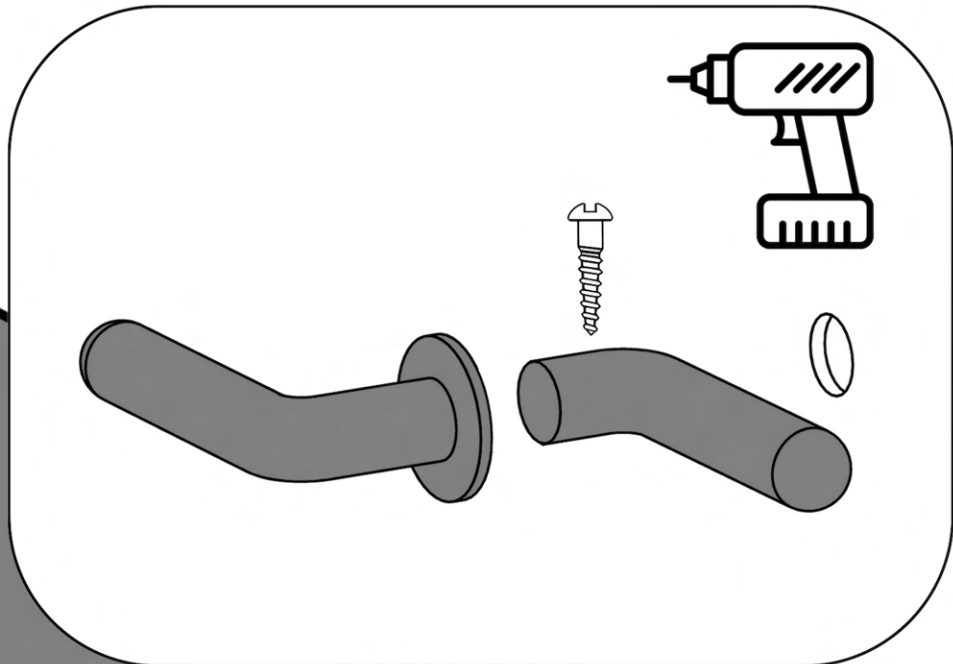

! 3 OD

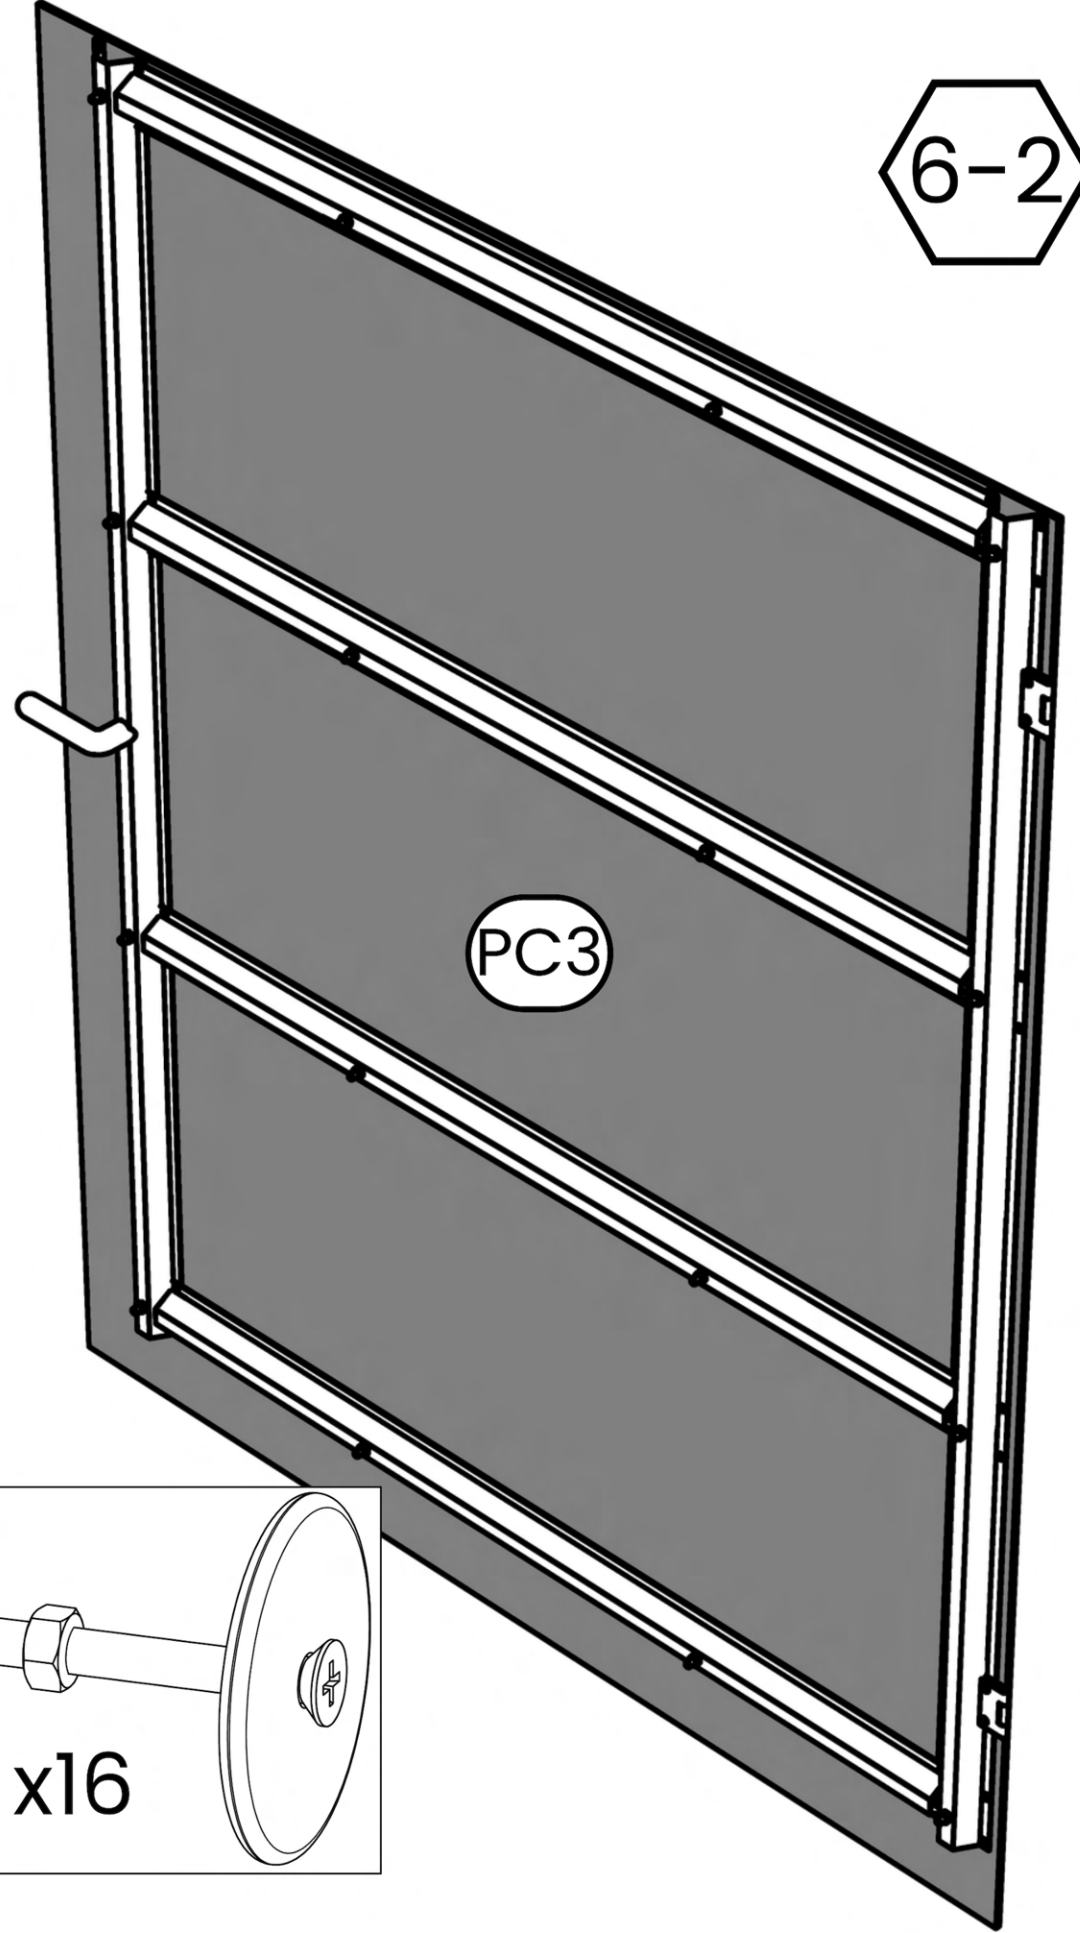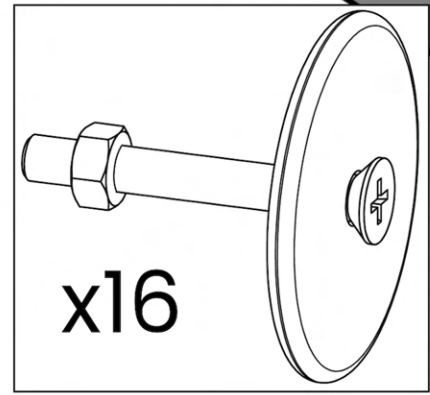

7-1

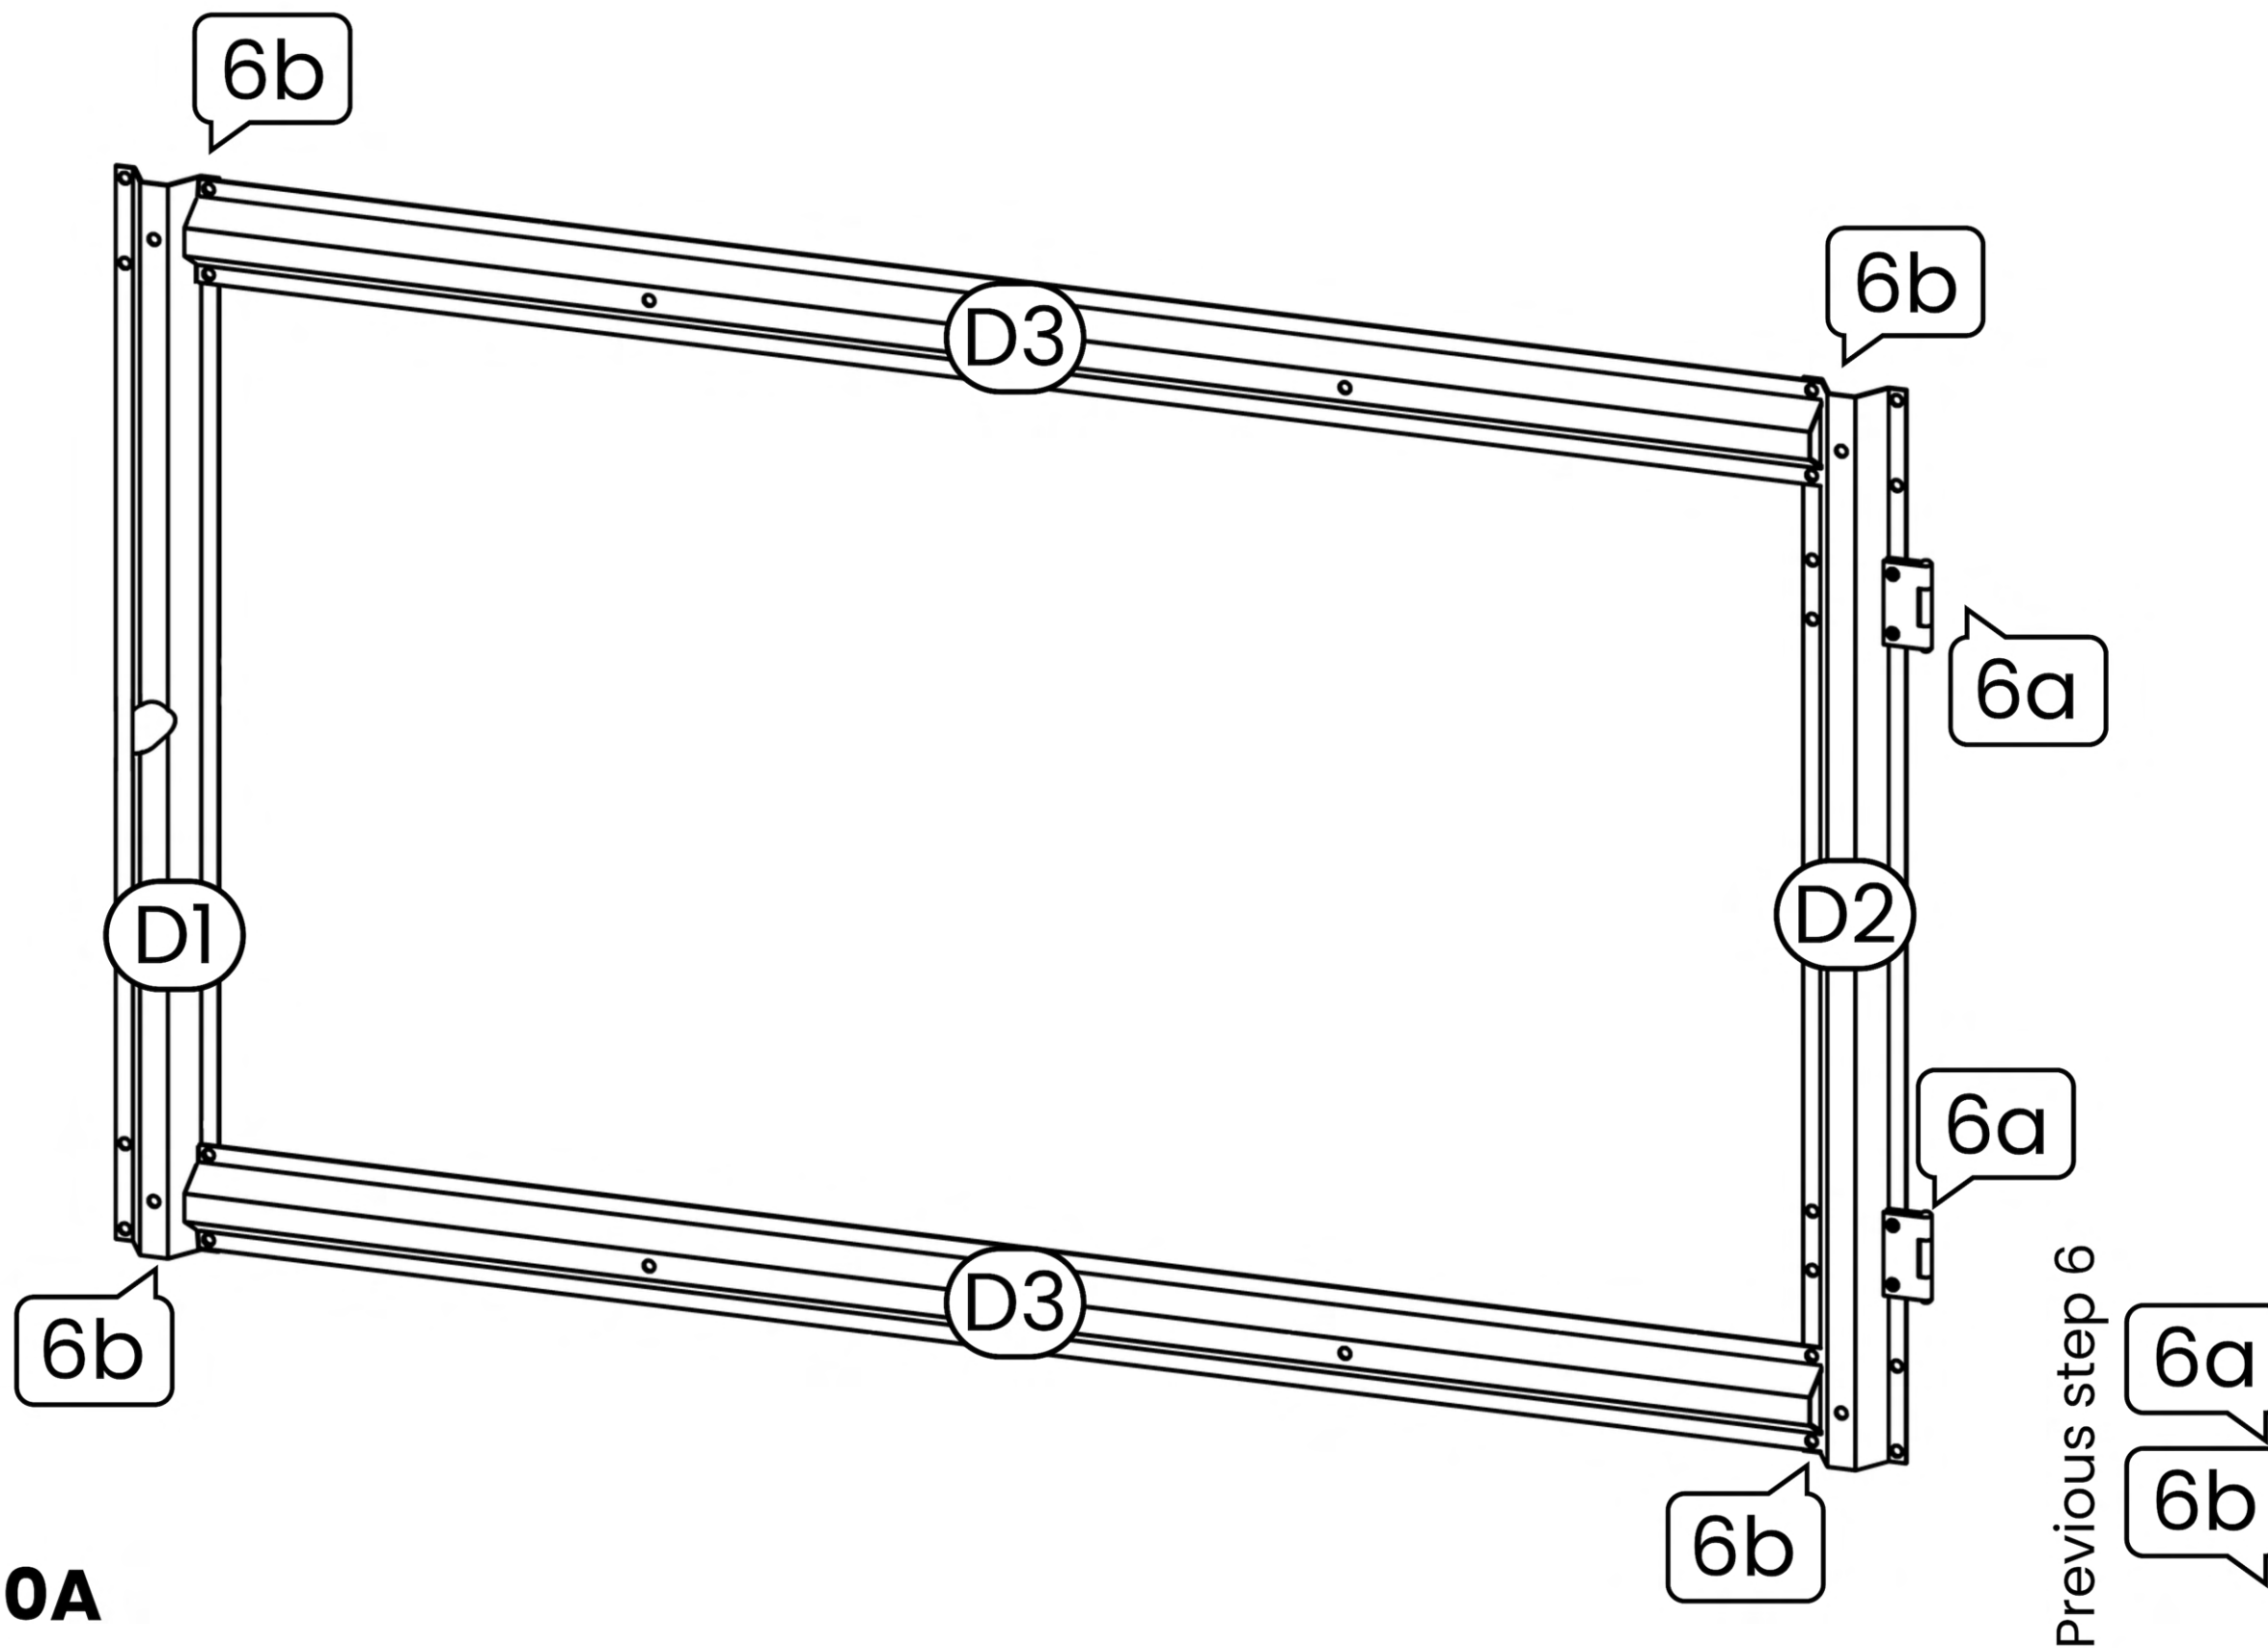


7-2




3


0D

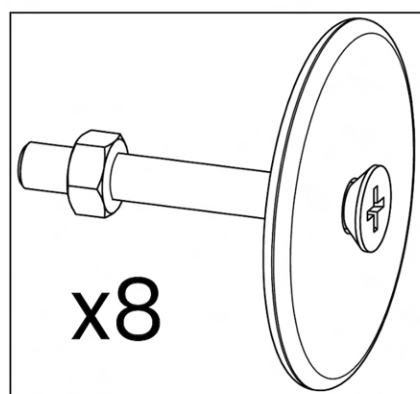

x8

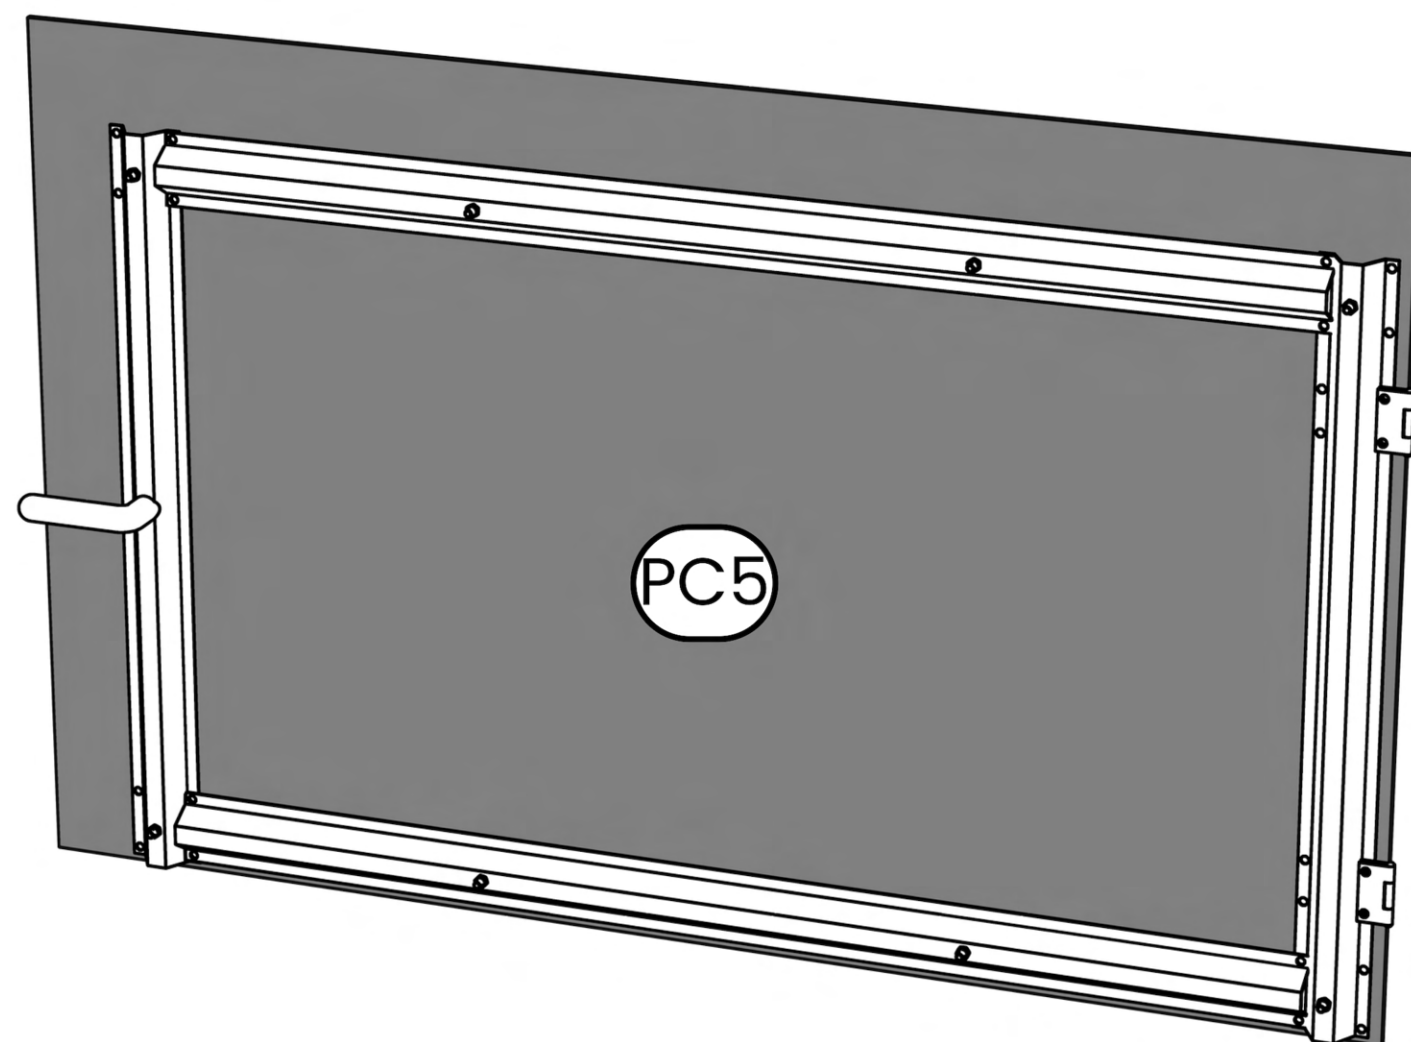


PC5

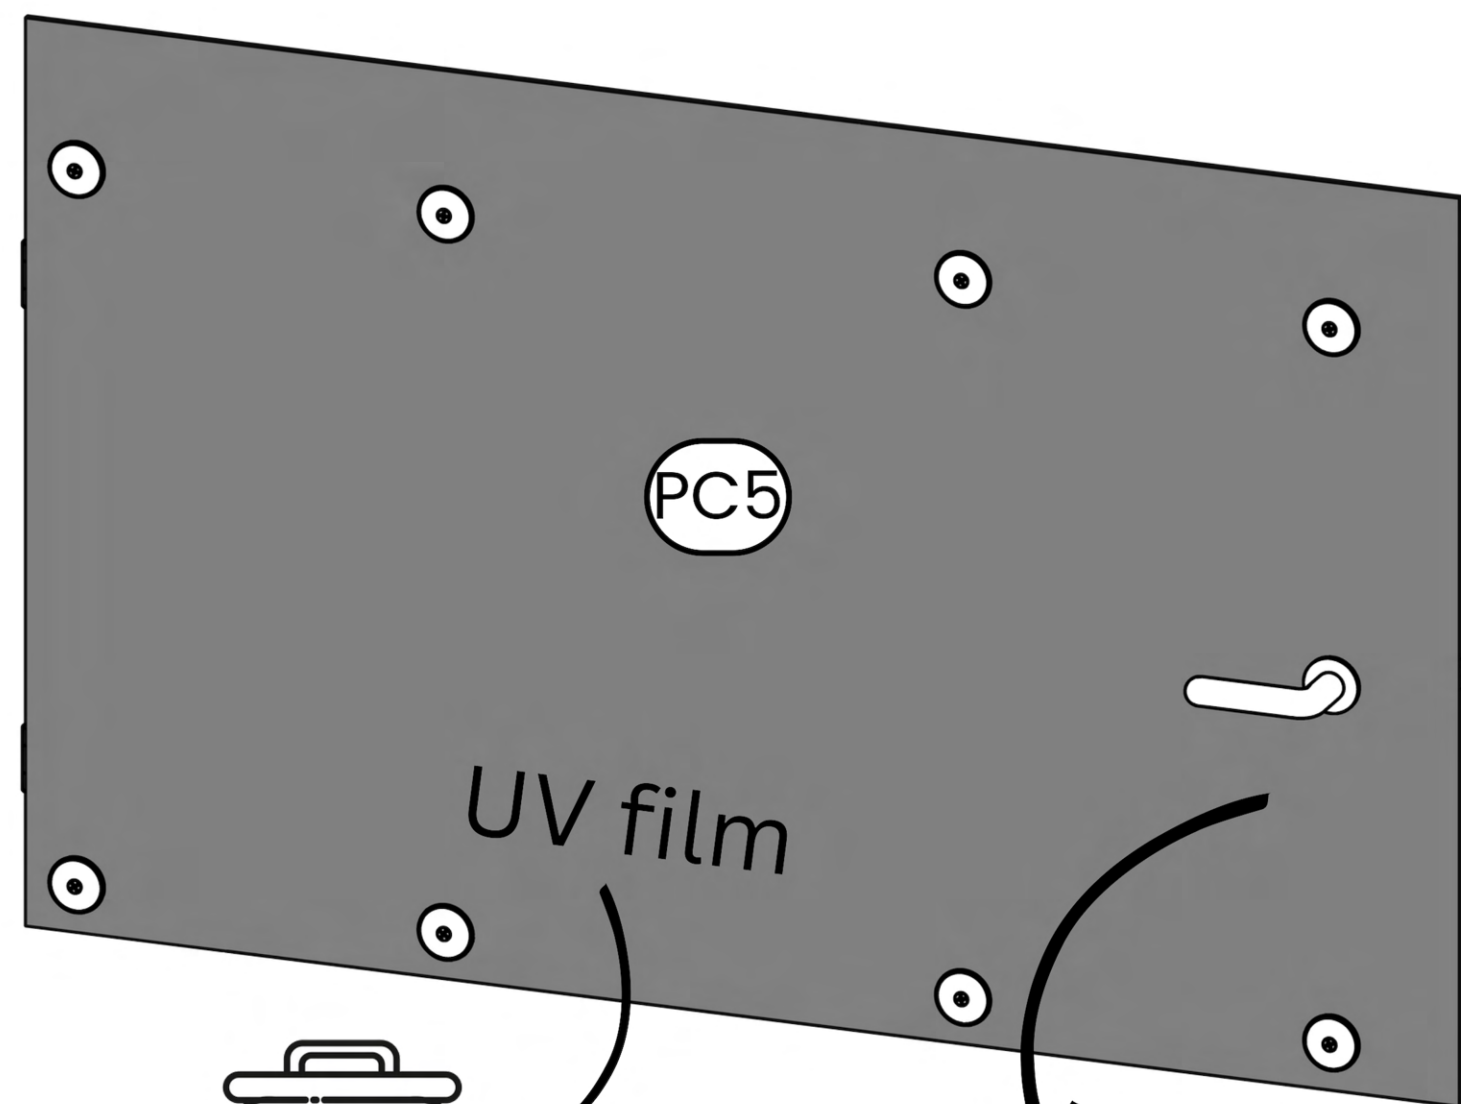


PC5

UV film

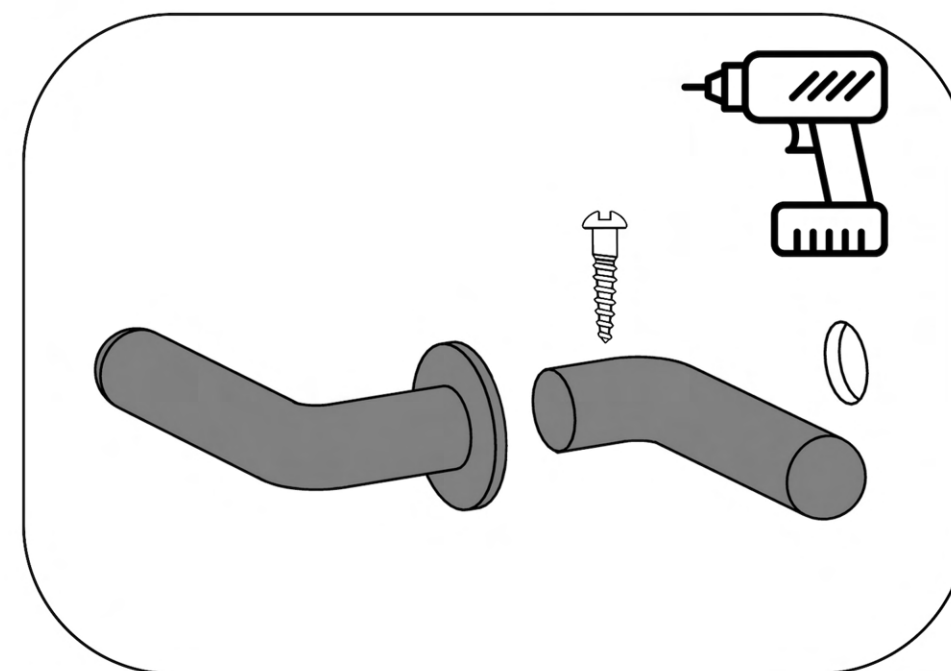

8

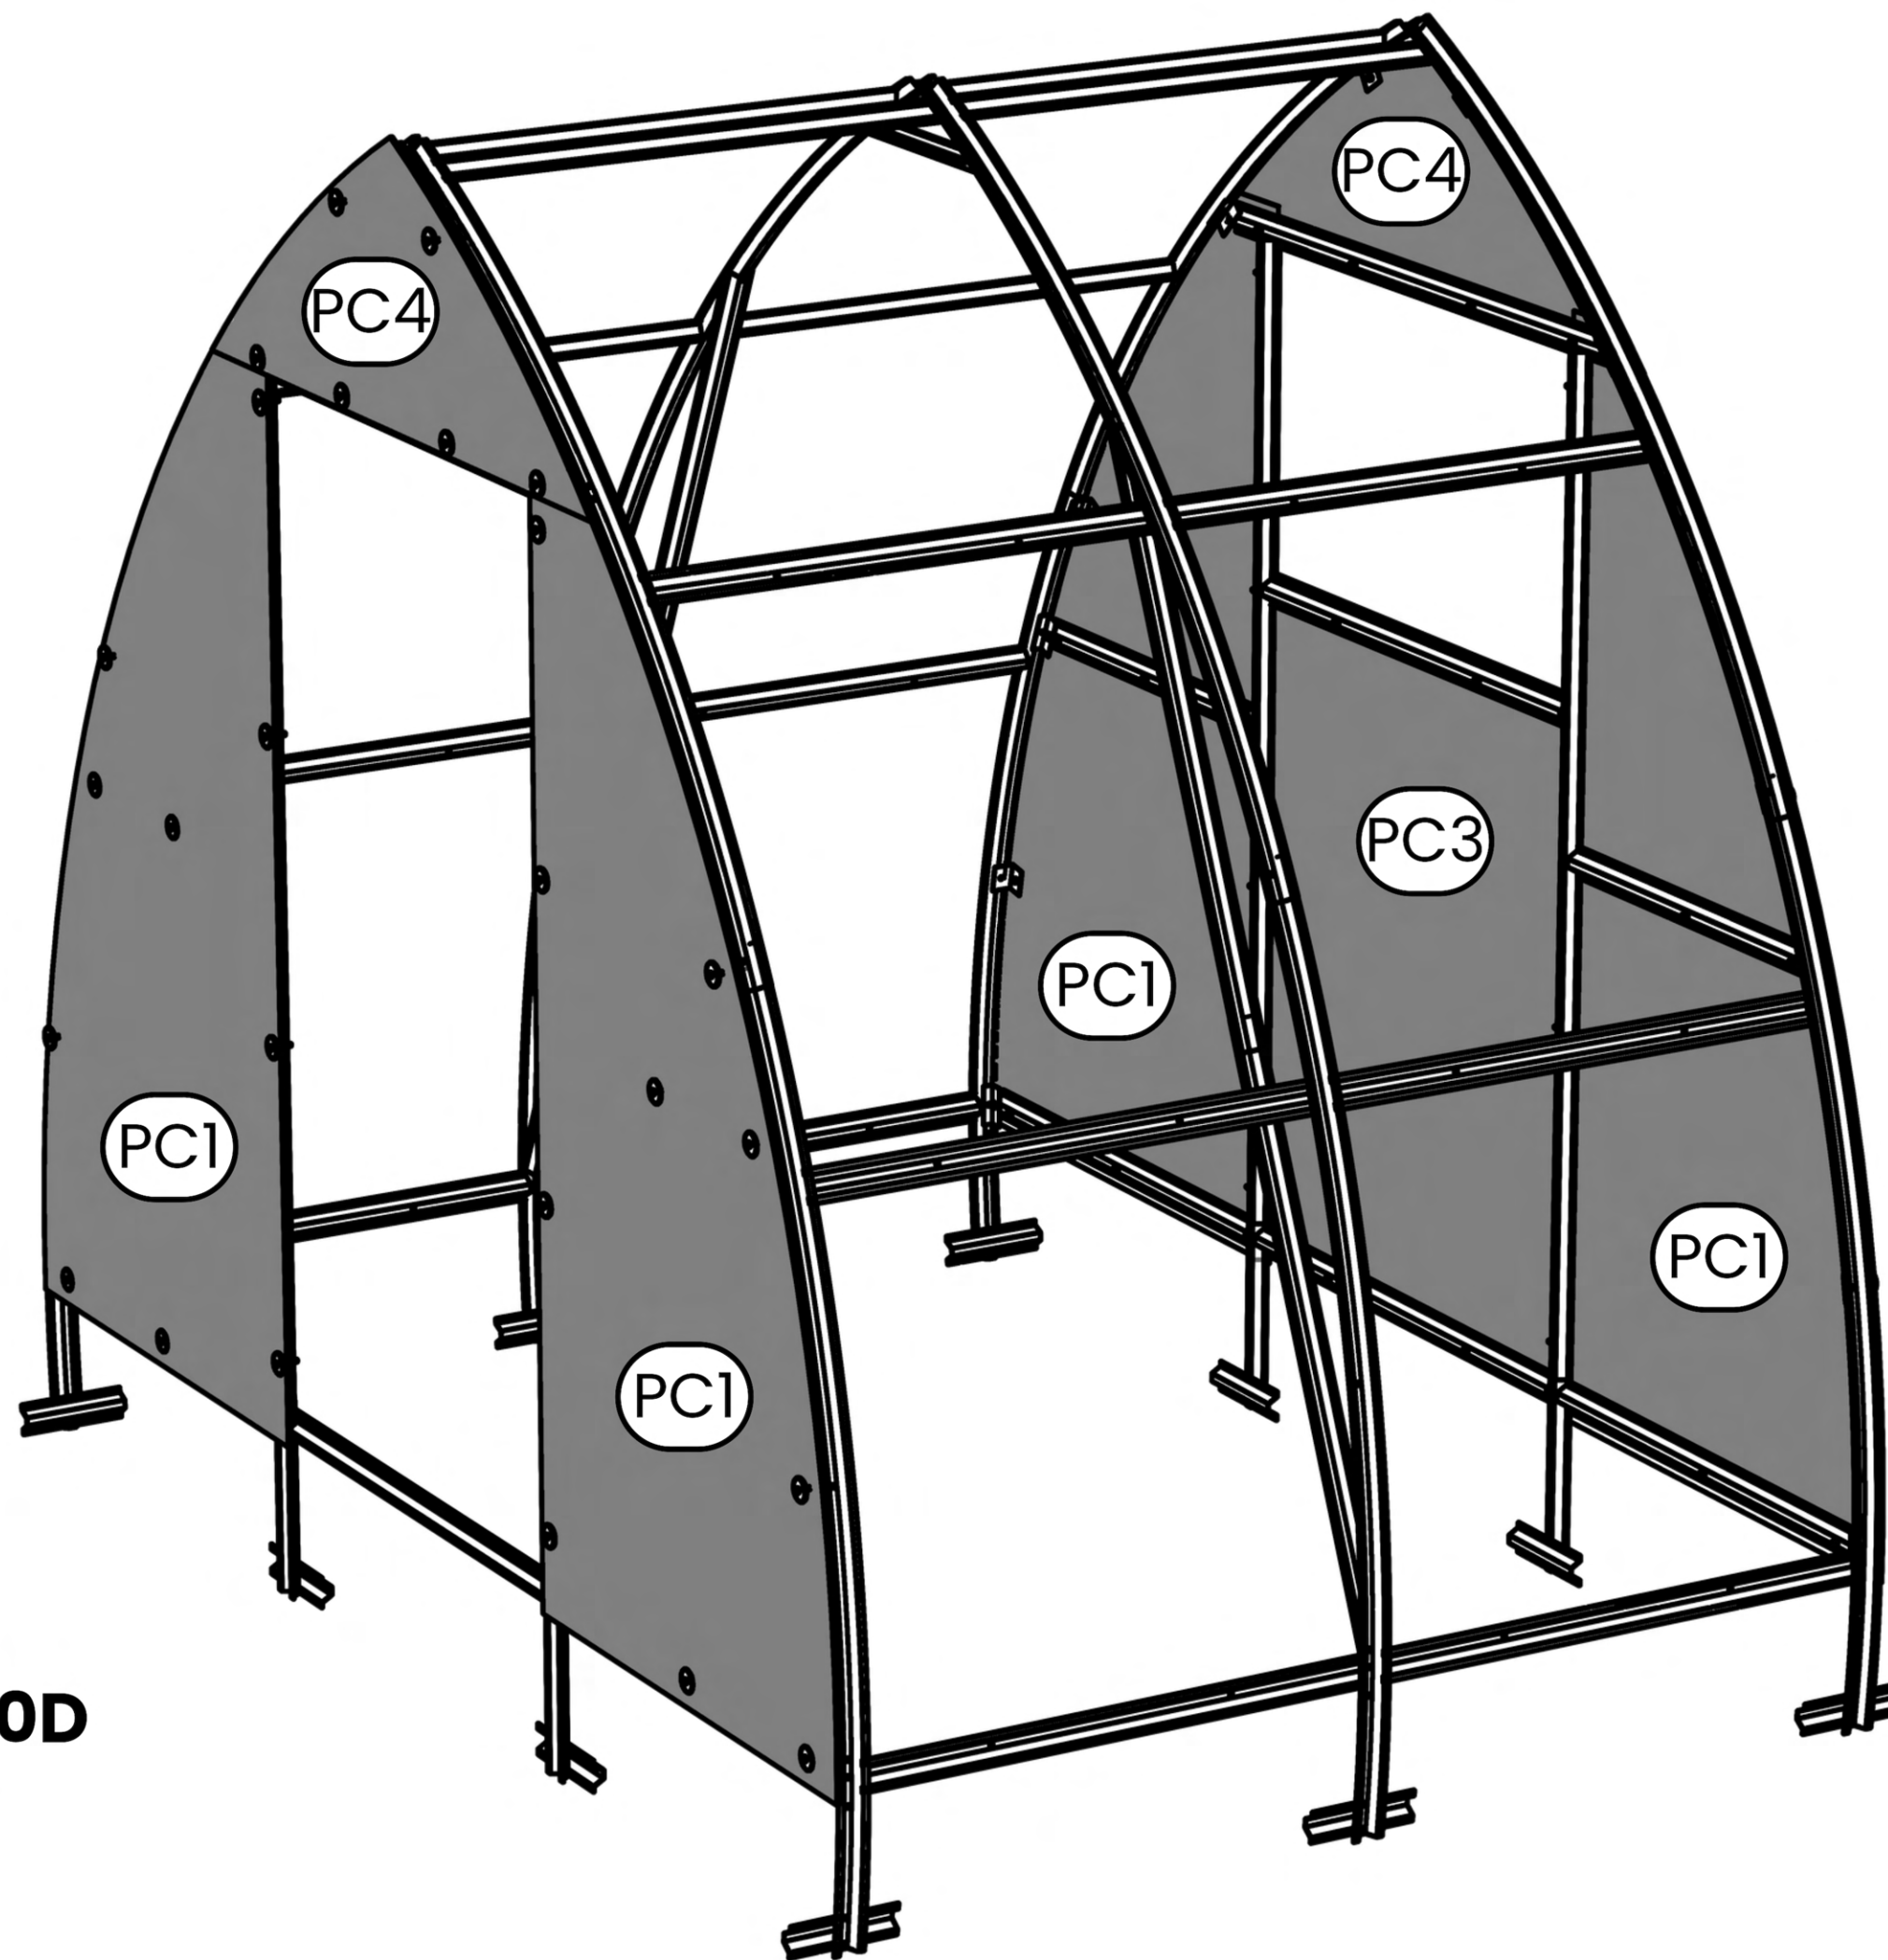

3


OD

8



3

0D

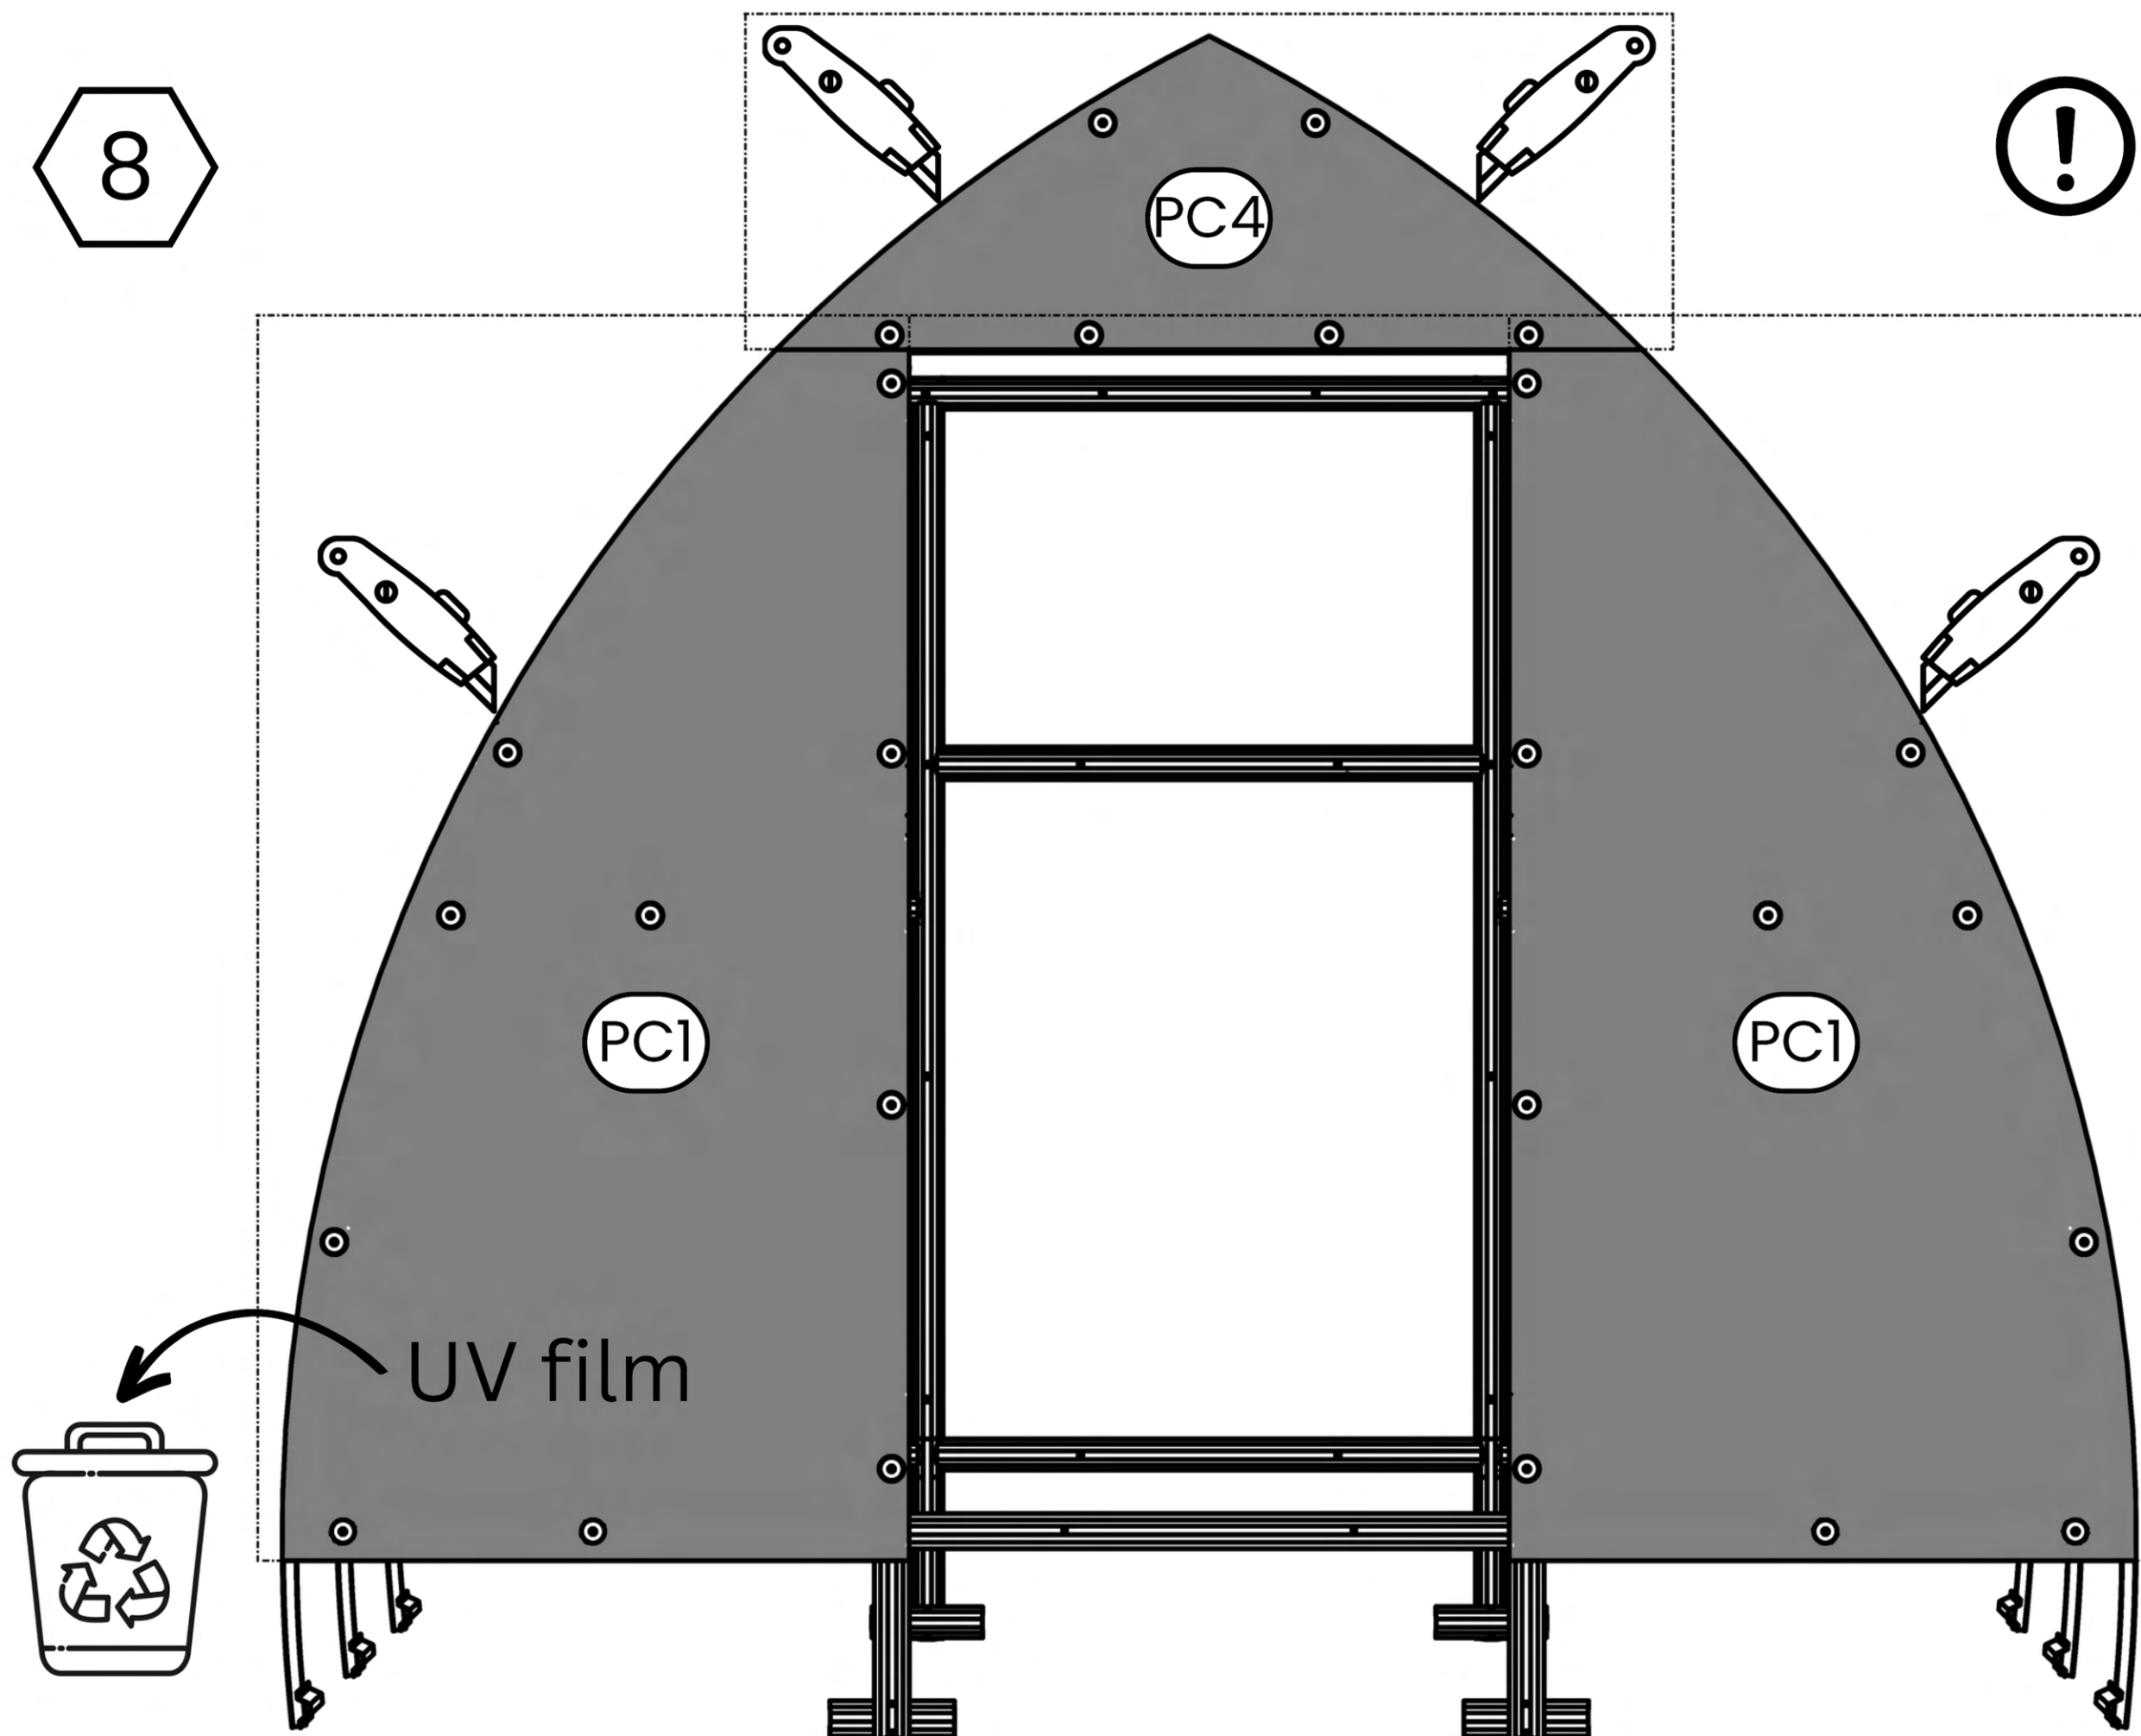



8





3


0D

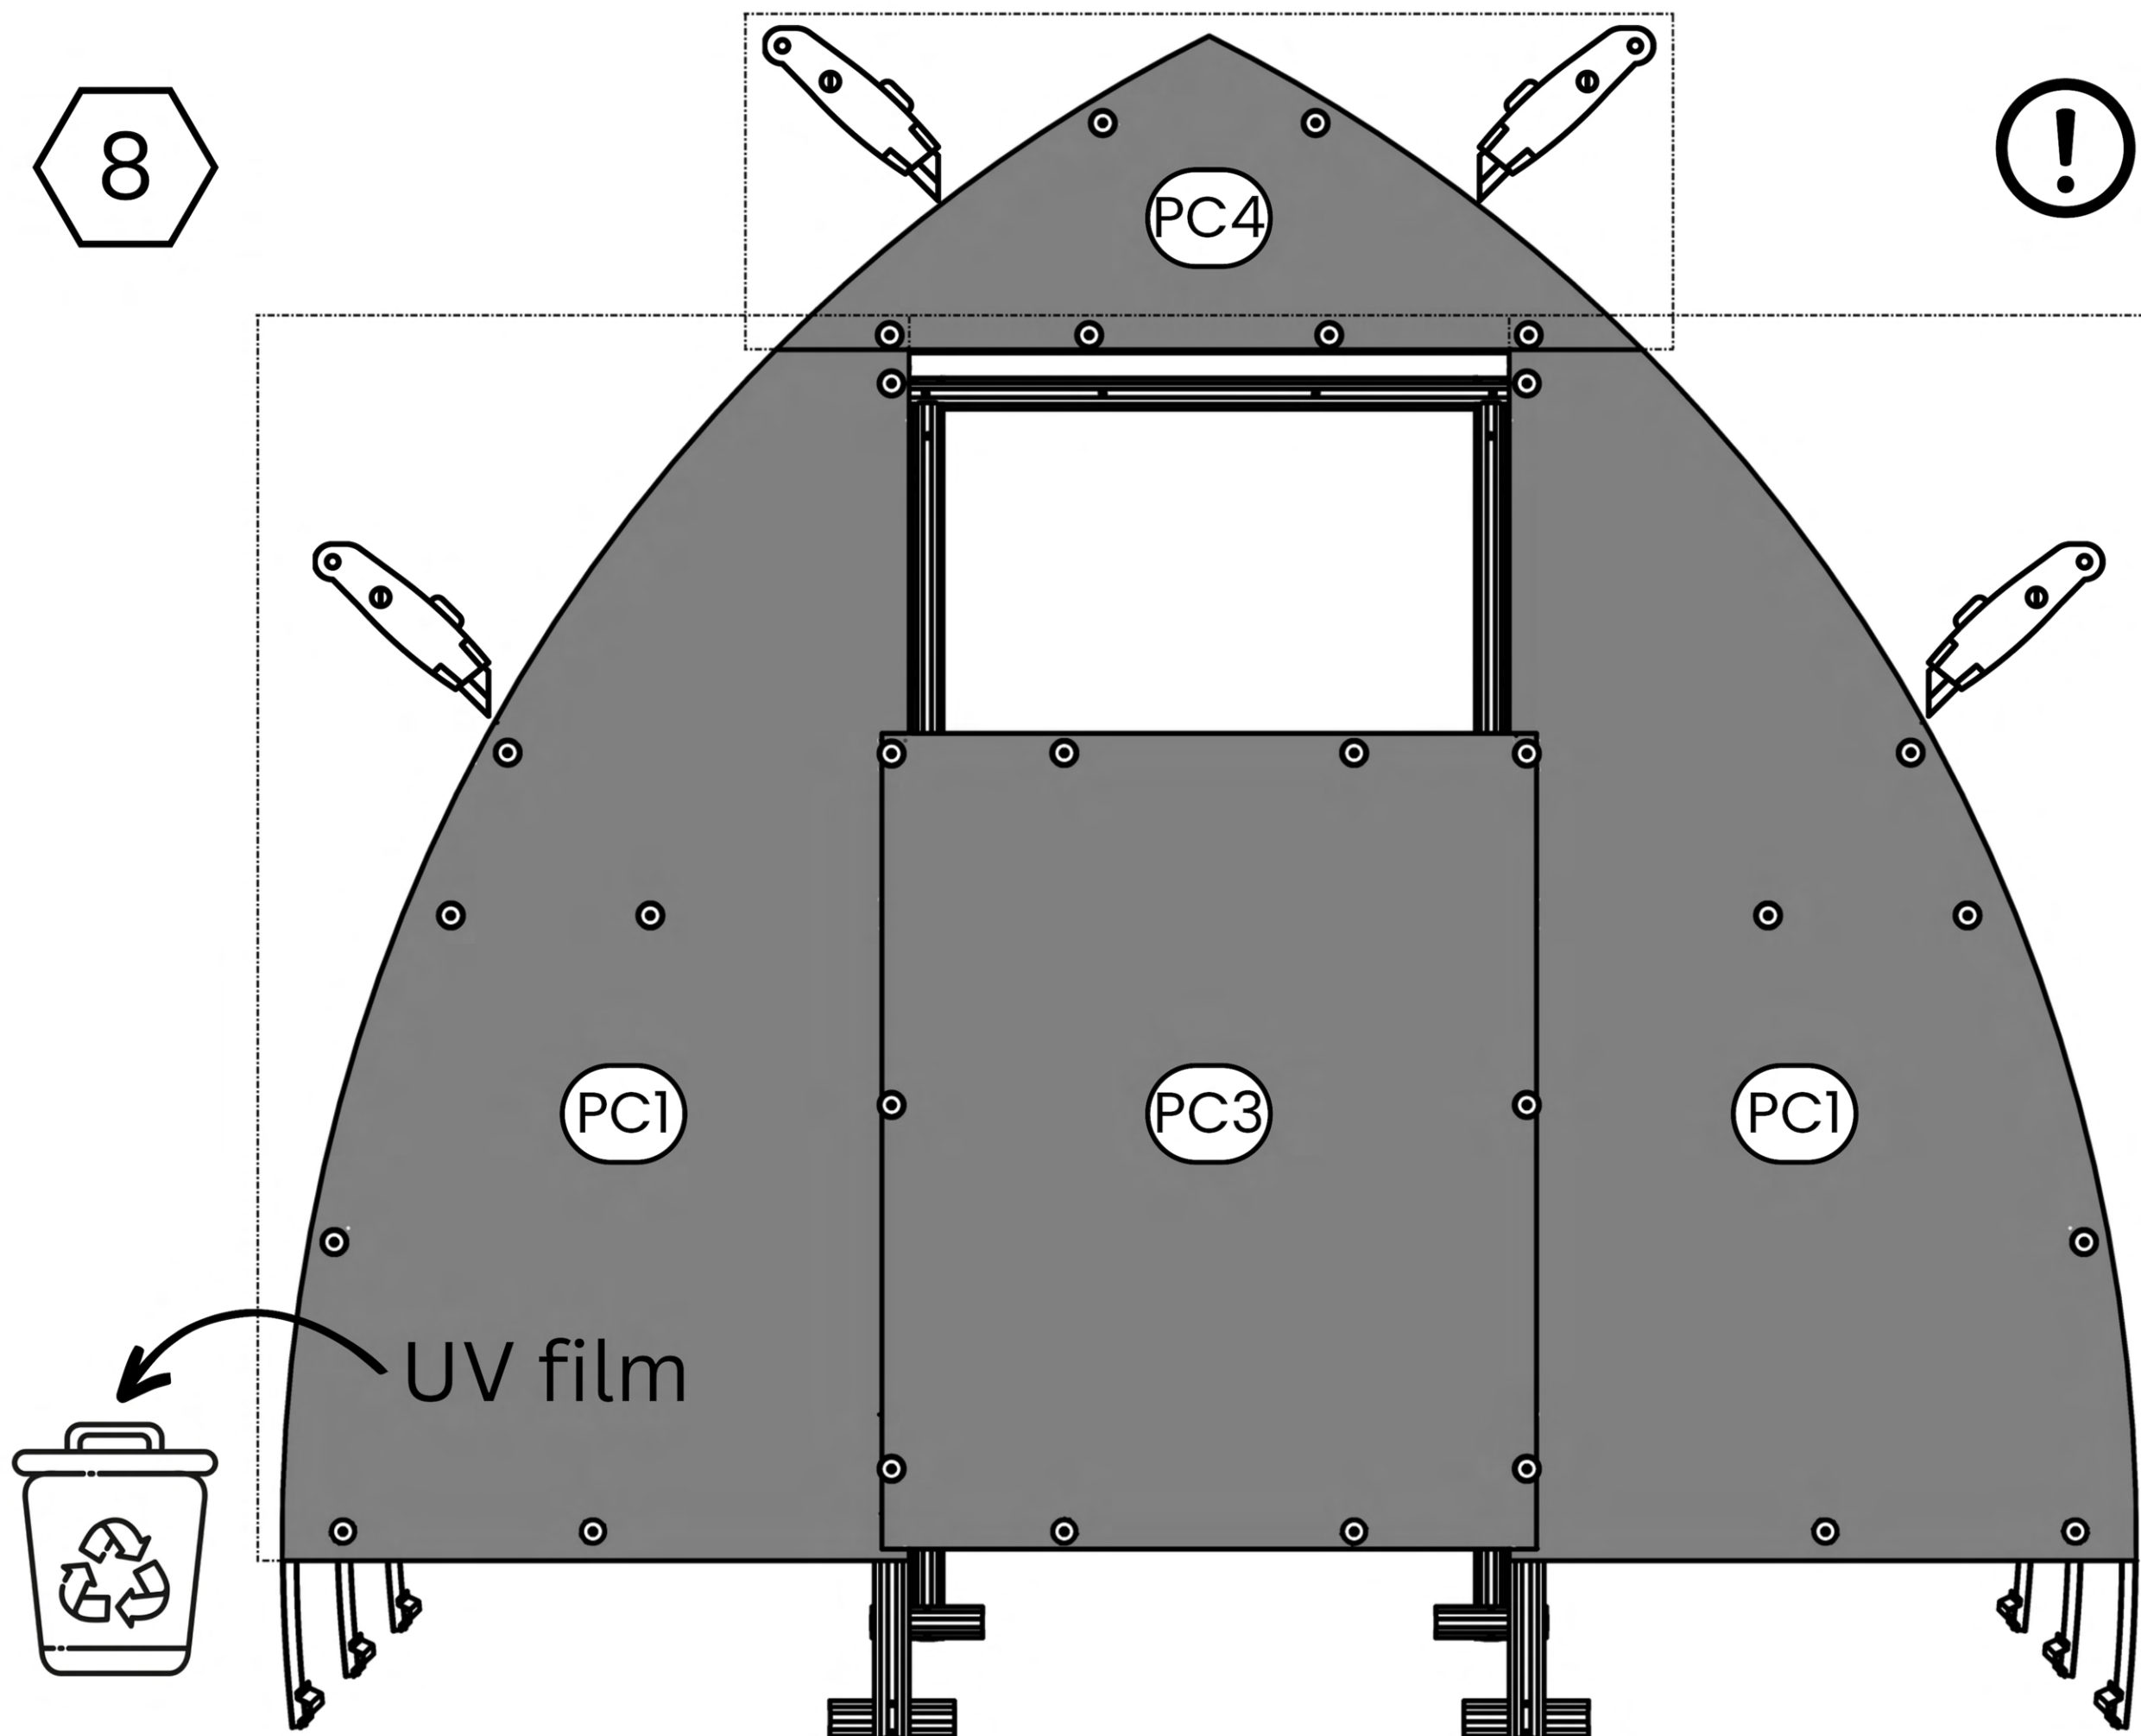

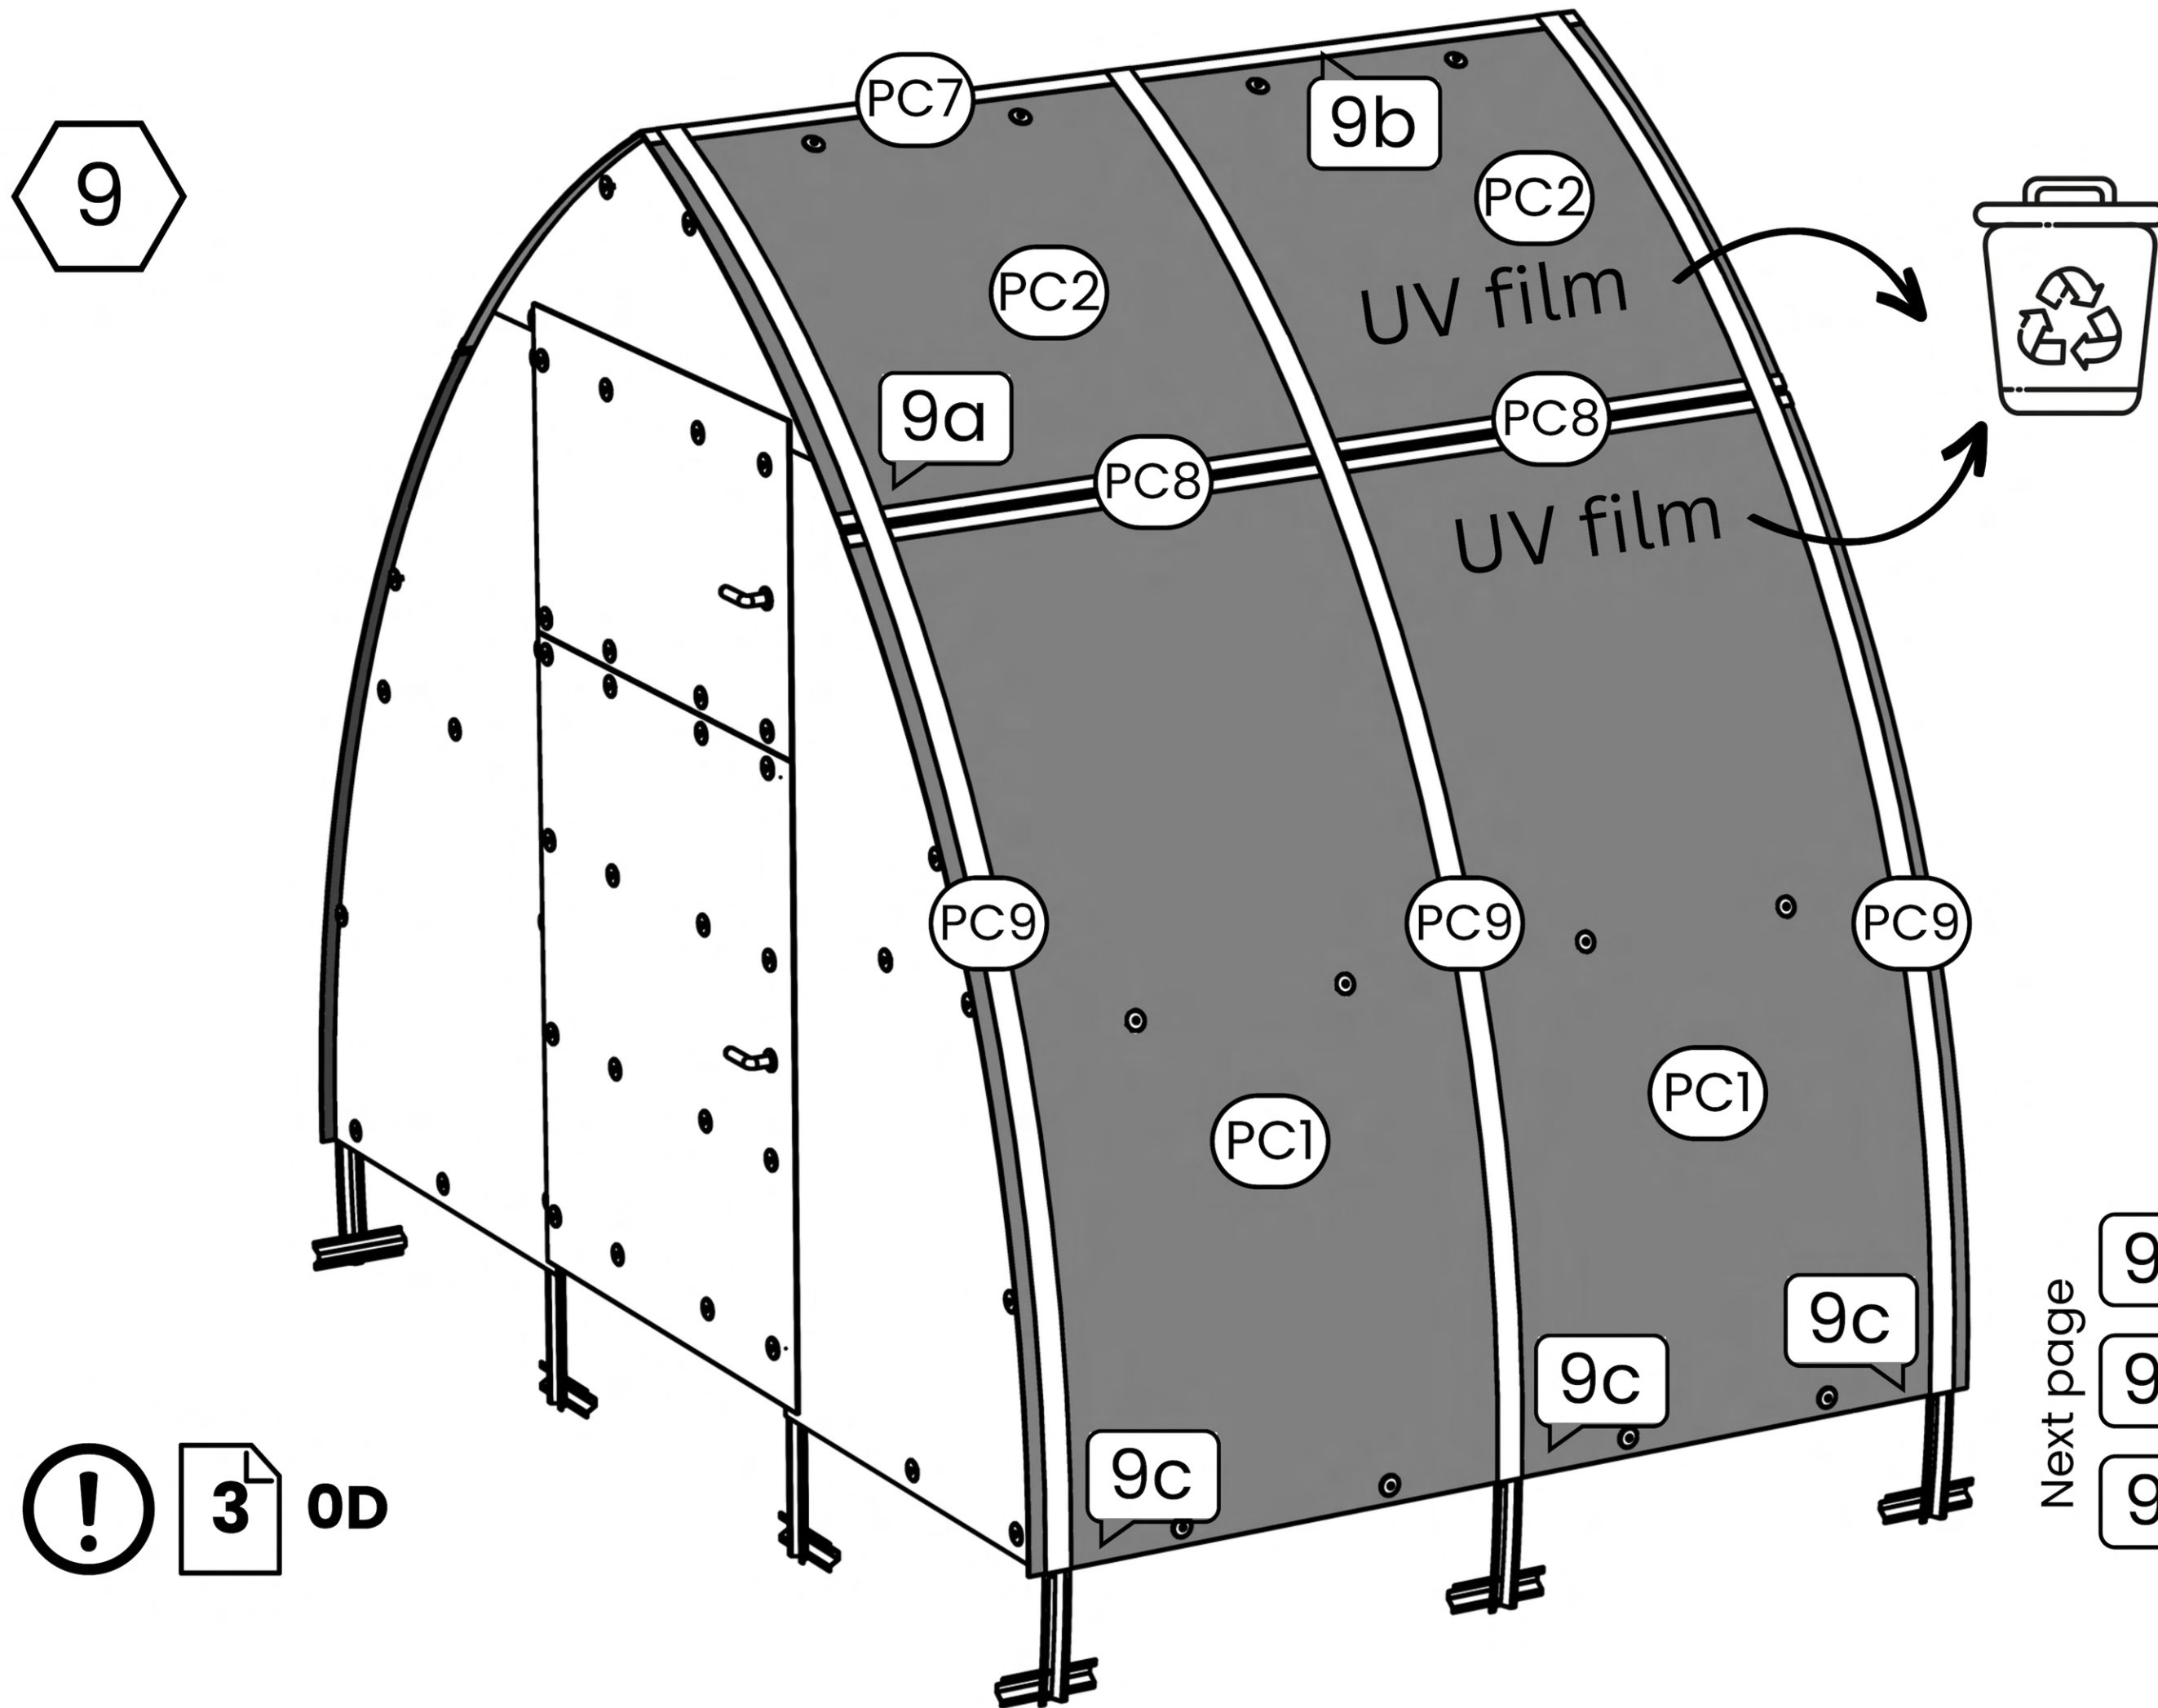

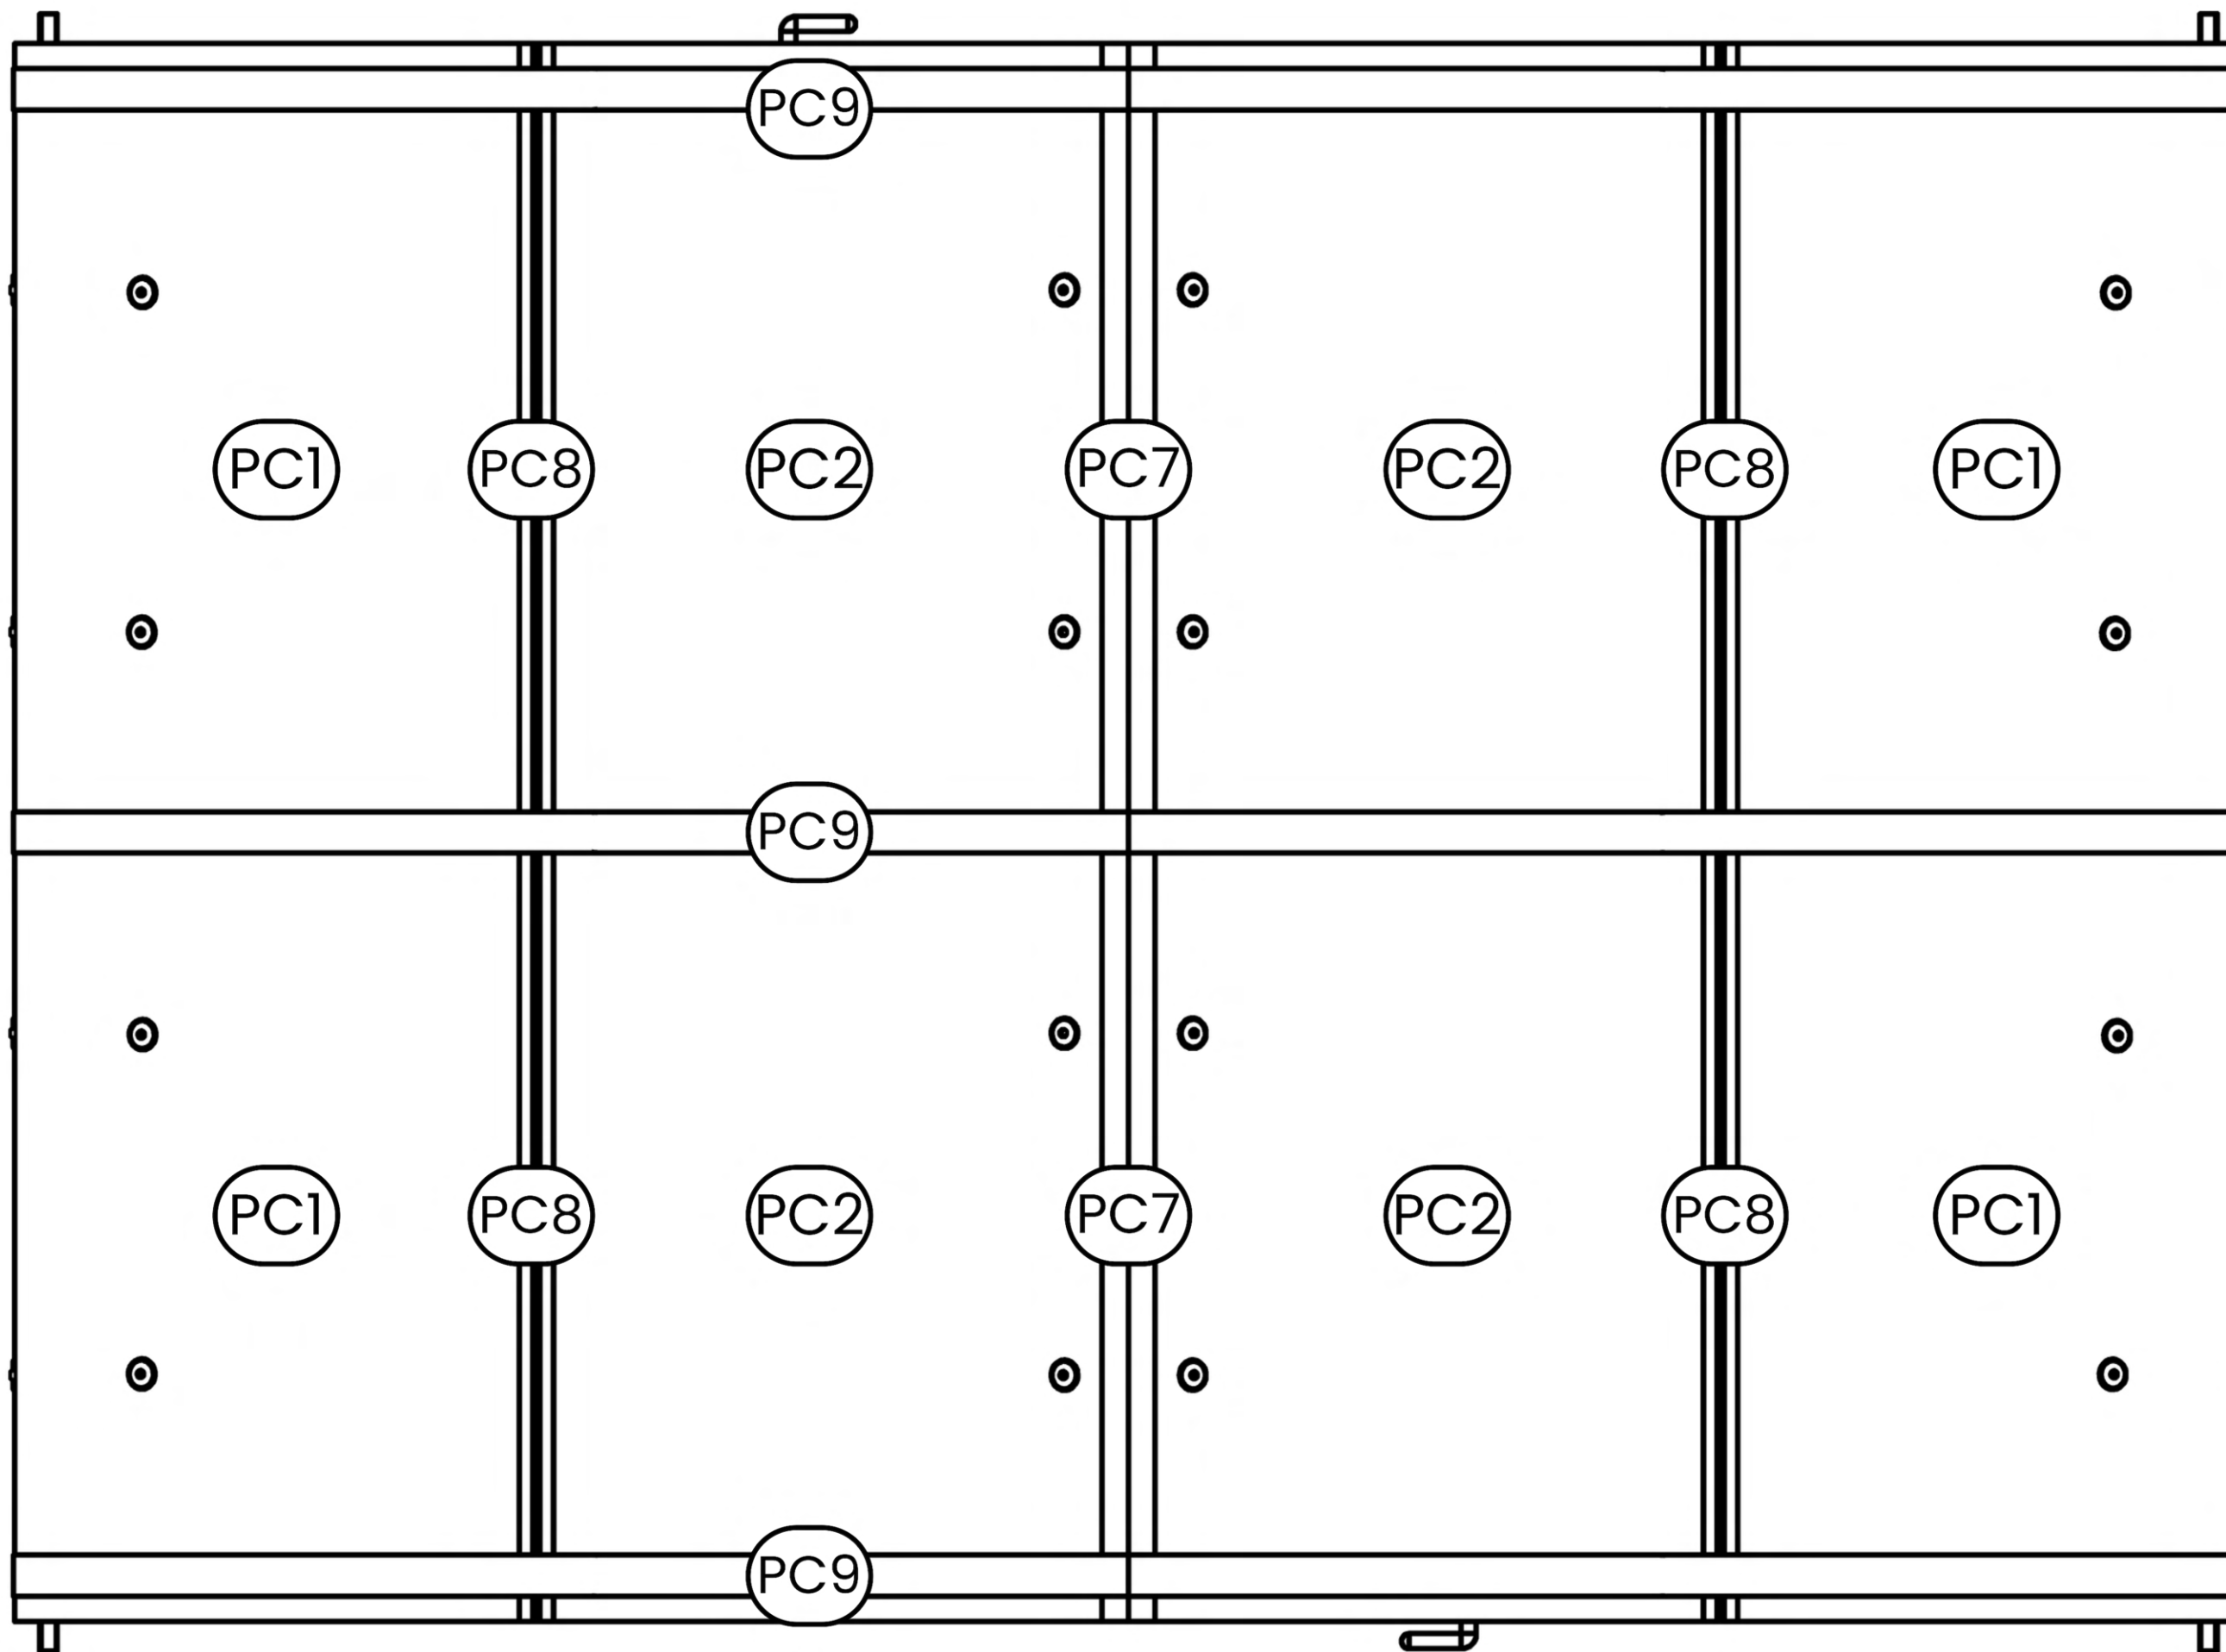


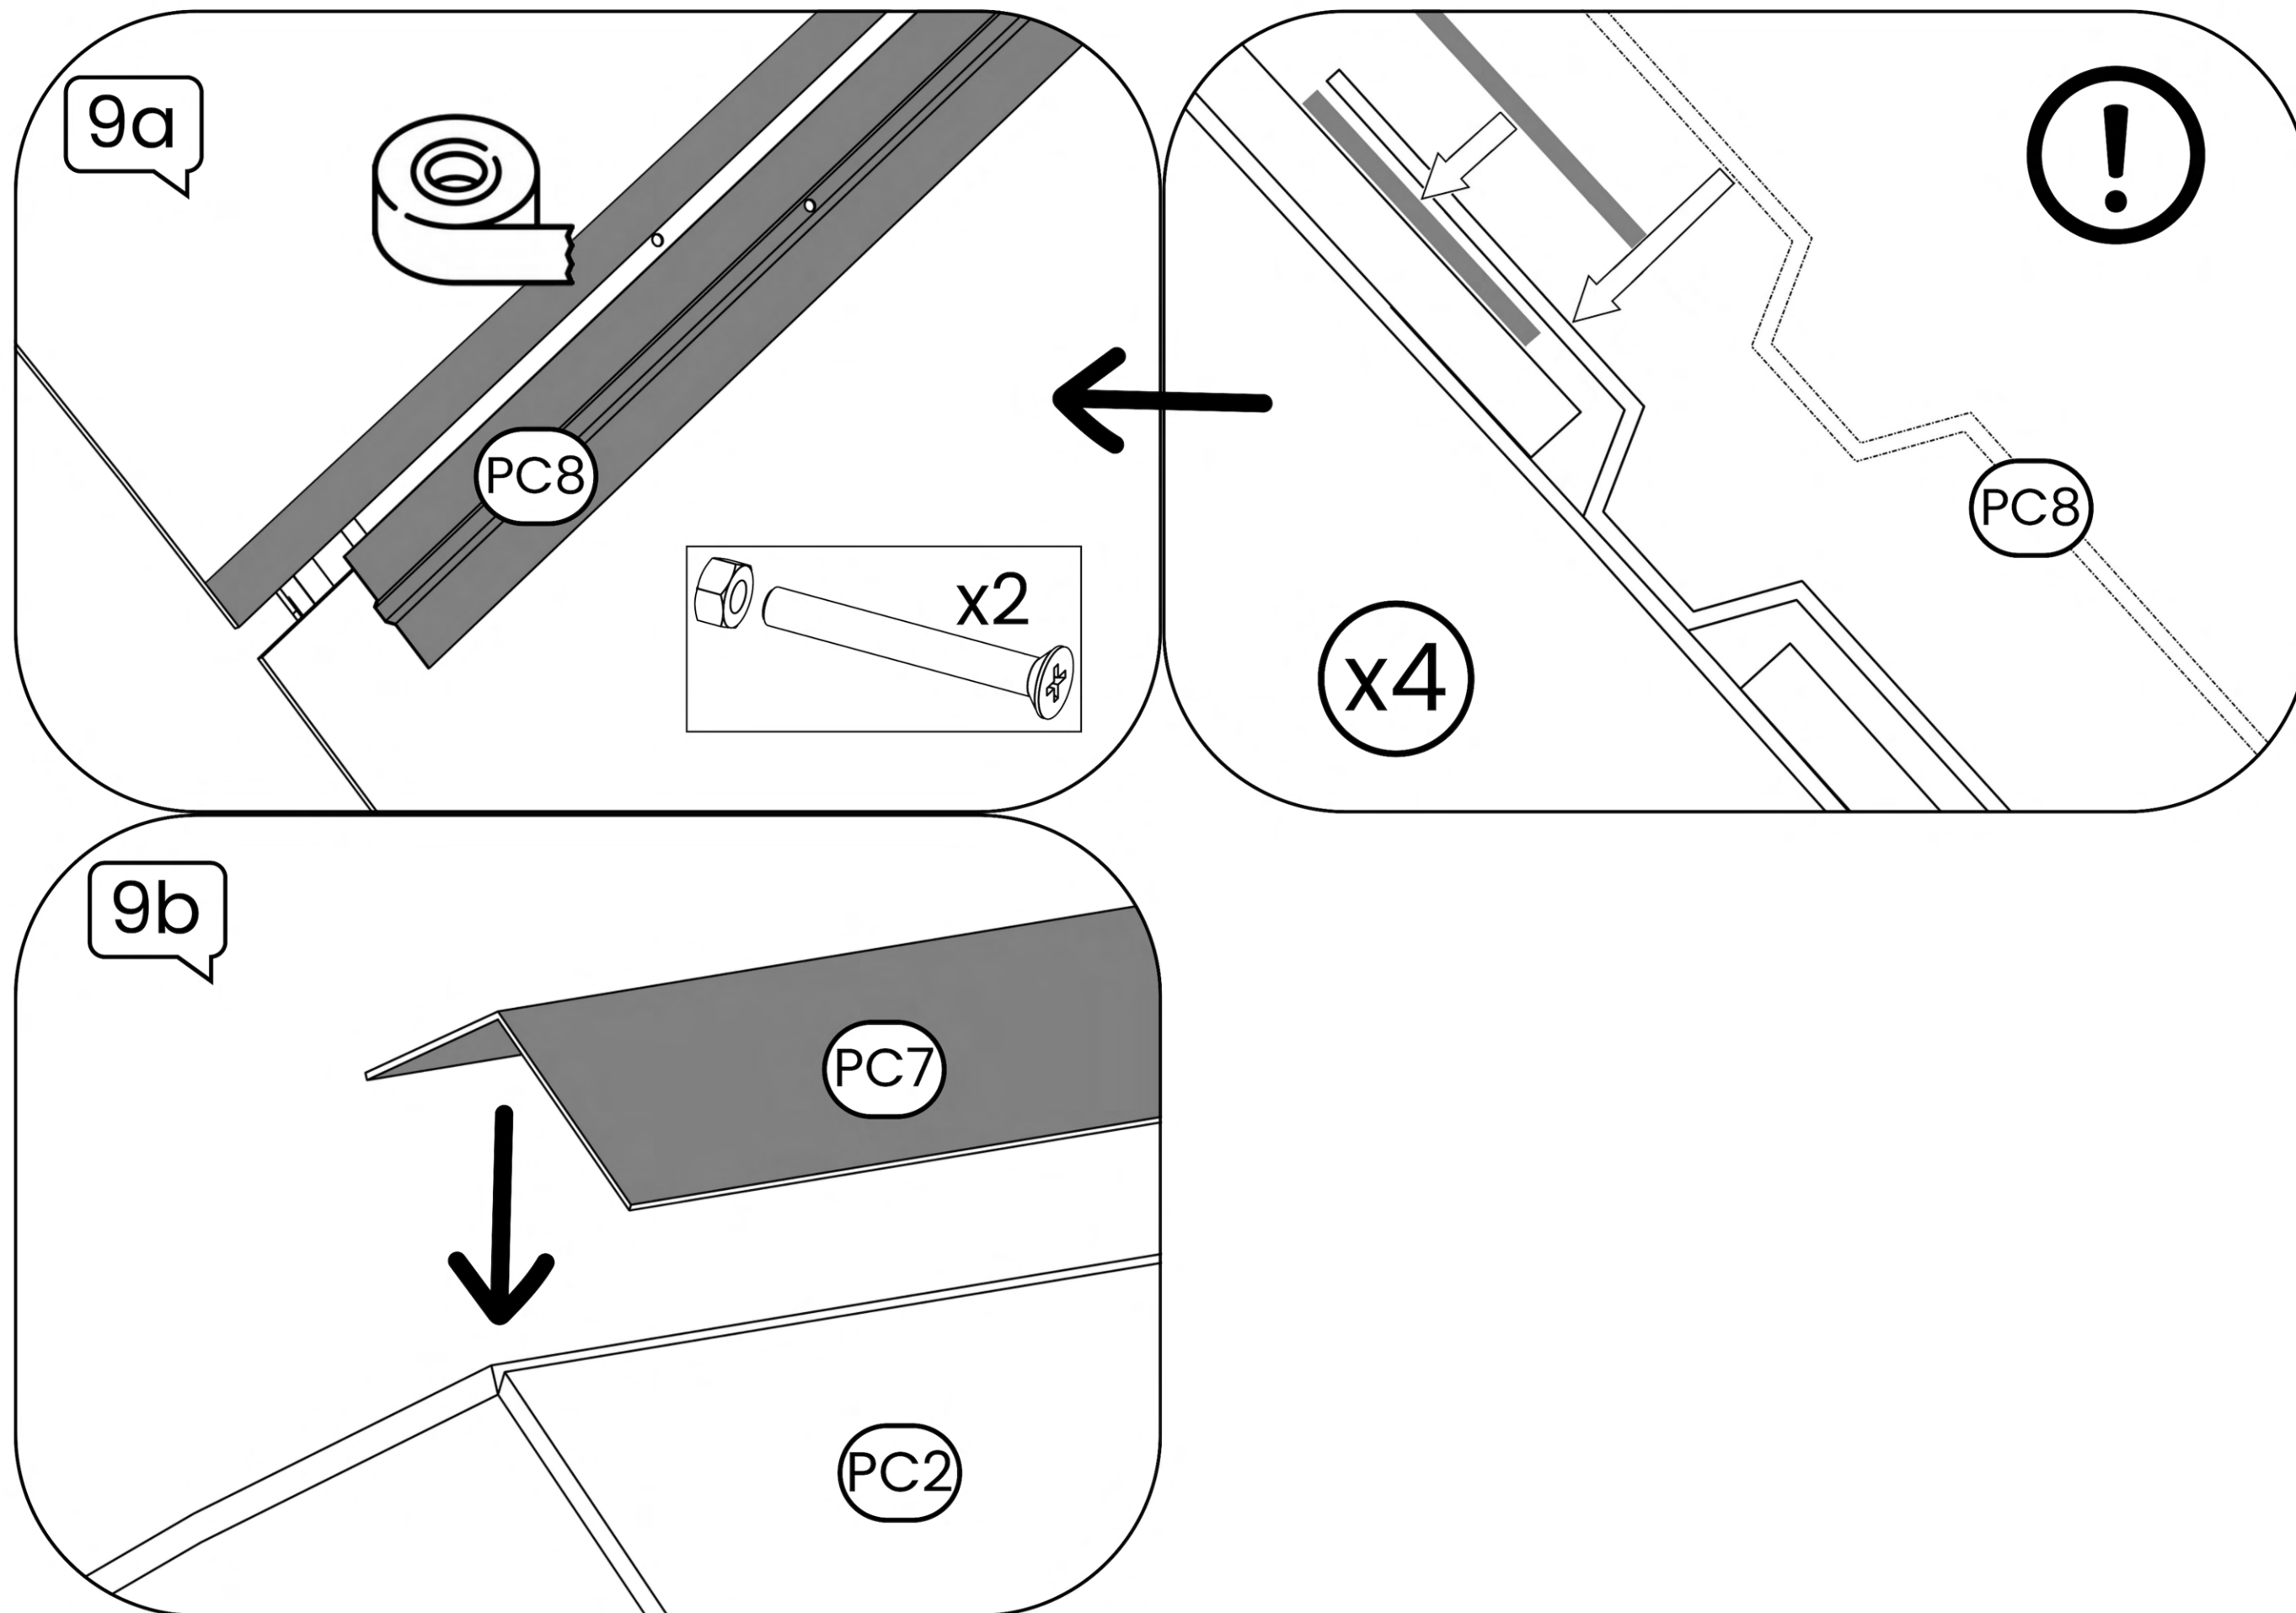



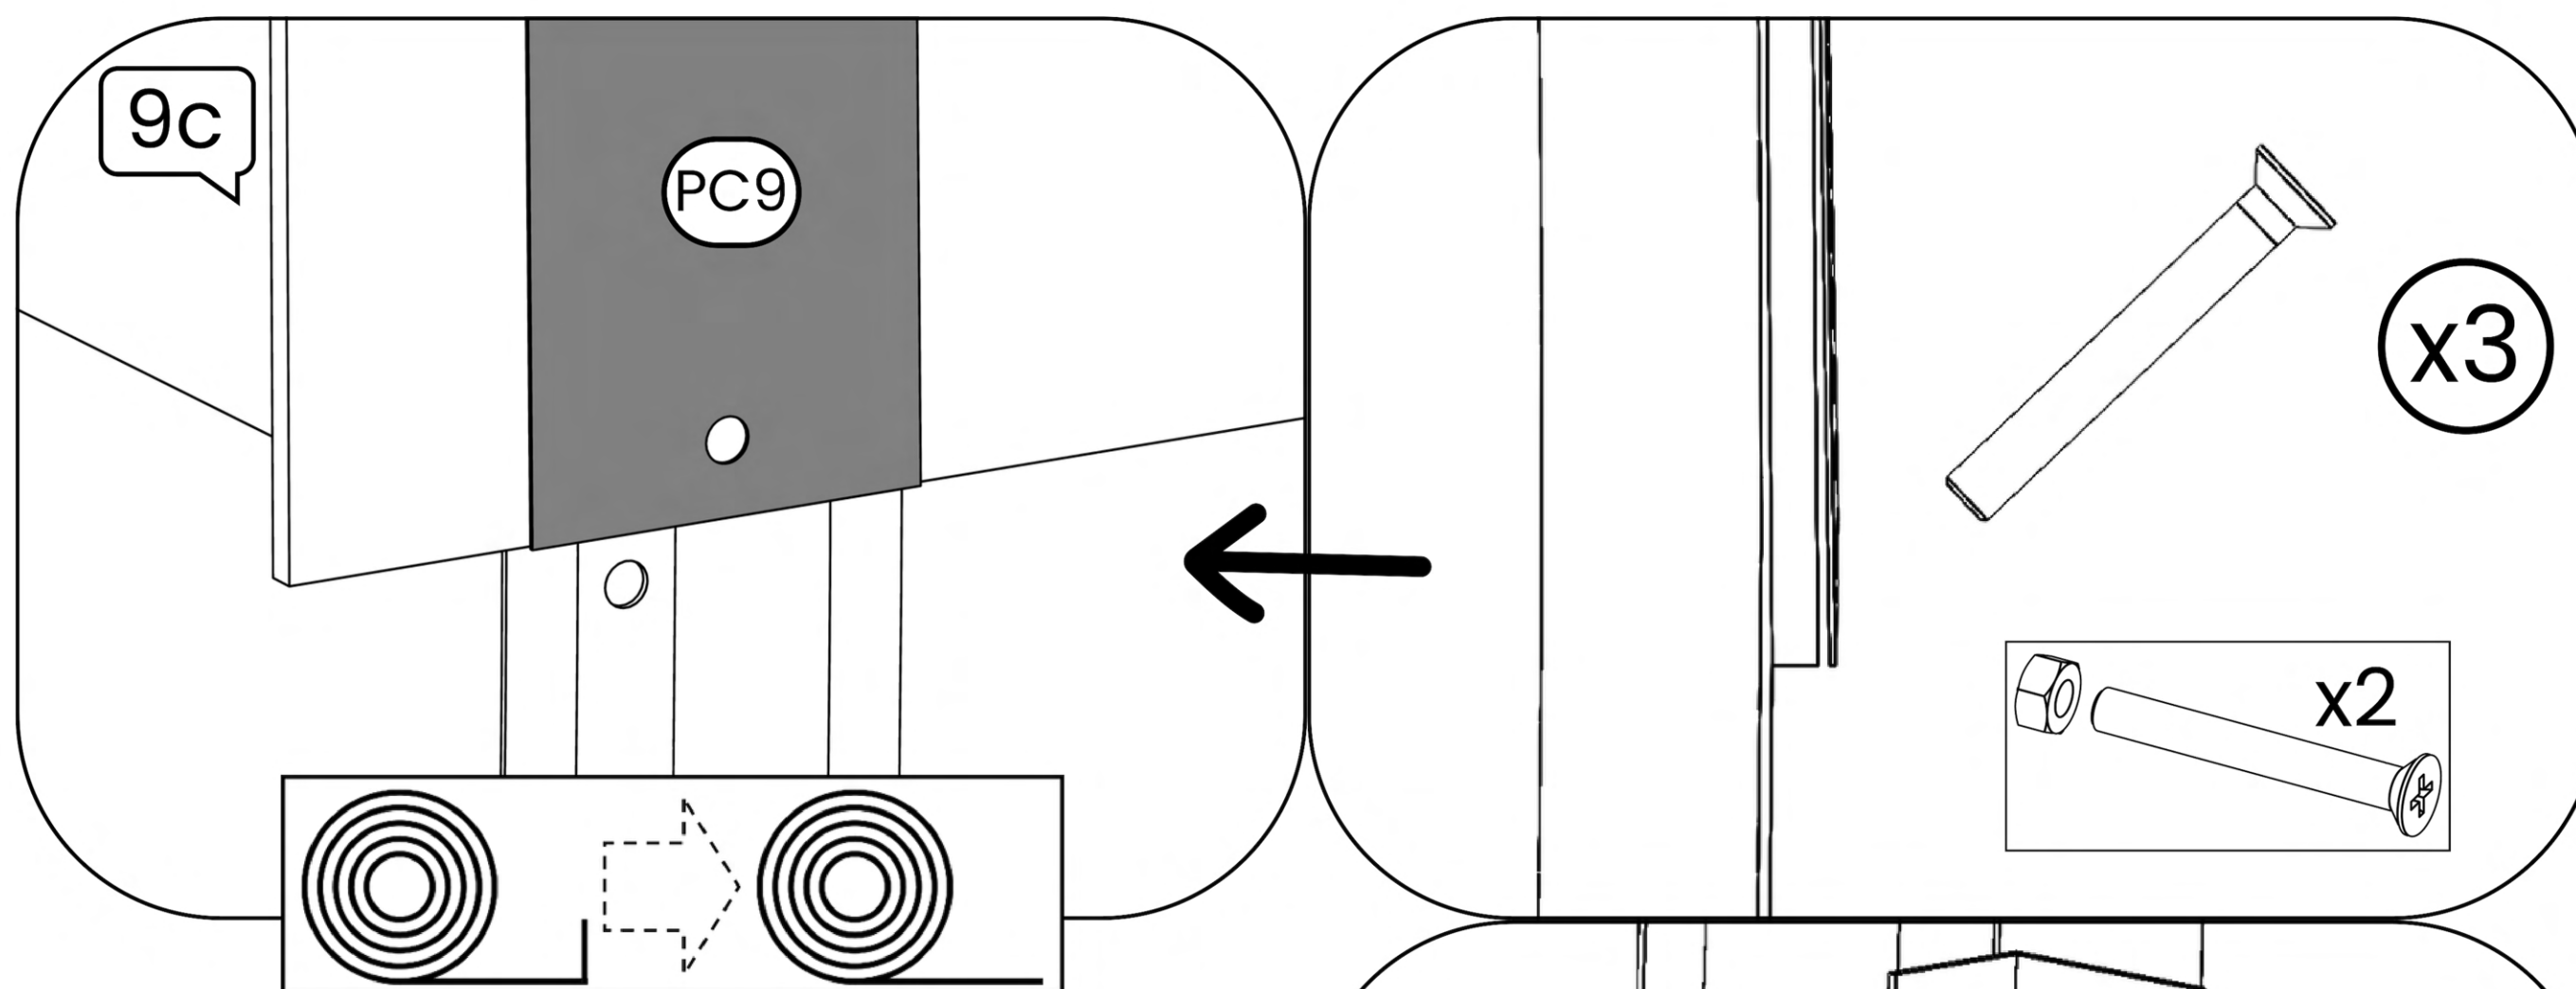


Instruction:

- First, unscrew the **M5x12** screws on both sides of the greenhouse.
- Unroll the band **PC9** and unfold the end of the band with pliers.
- Place the band **PC9** on the greenhouse.
- Secure one end of the band with an **M5x40** screw, but do not tighten it completely.
- Tighten the other end of the band completely with an **M5x40** screw.
- Finish fully tightening the first screw **M5x40**.

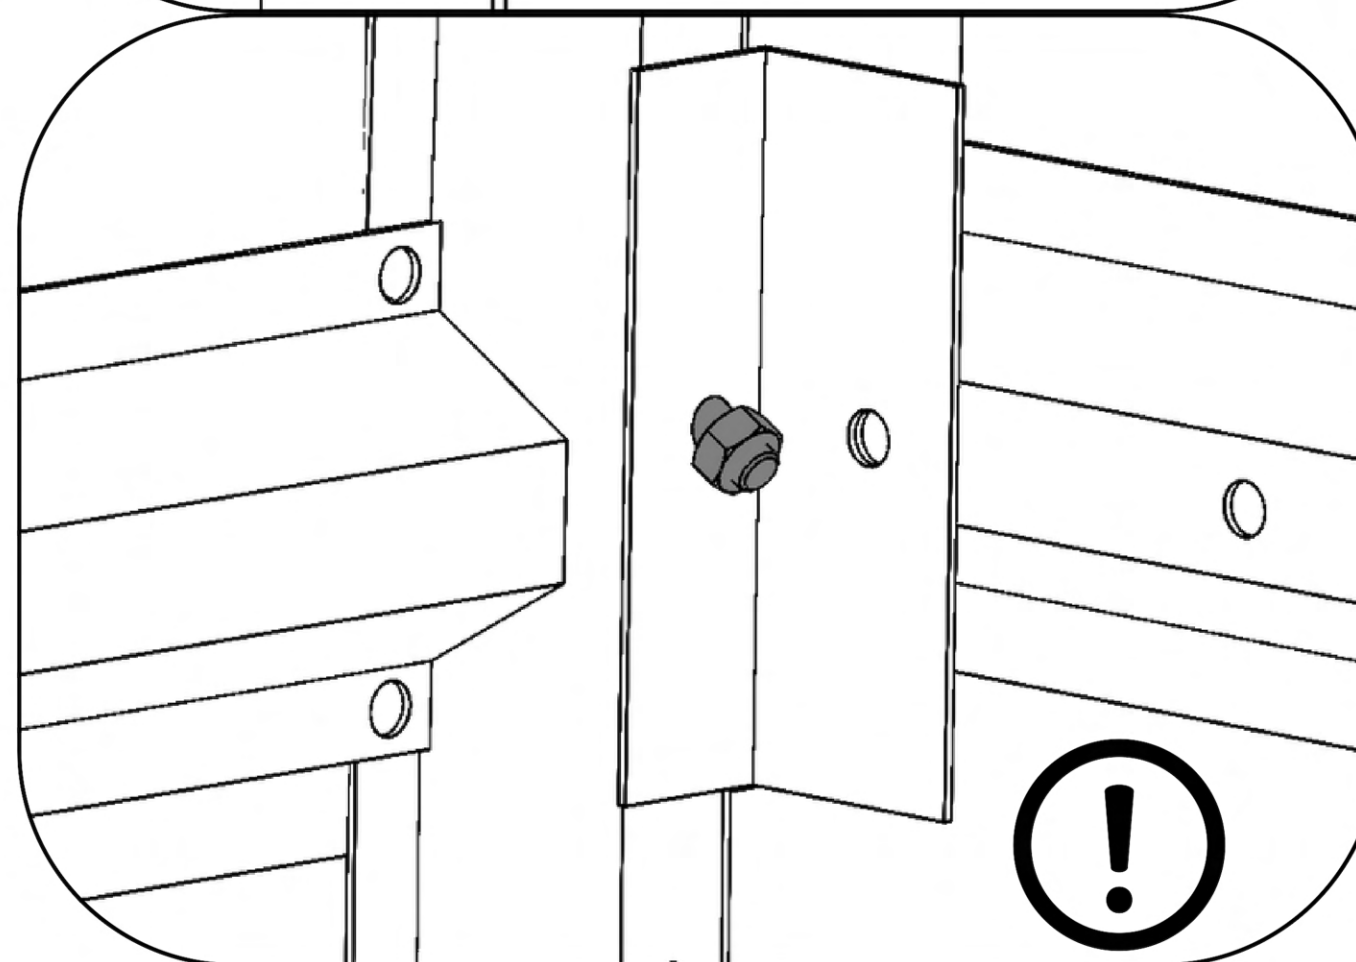

10

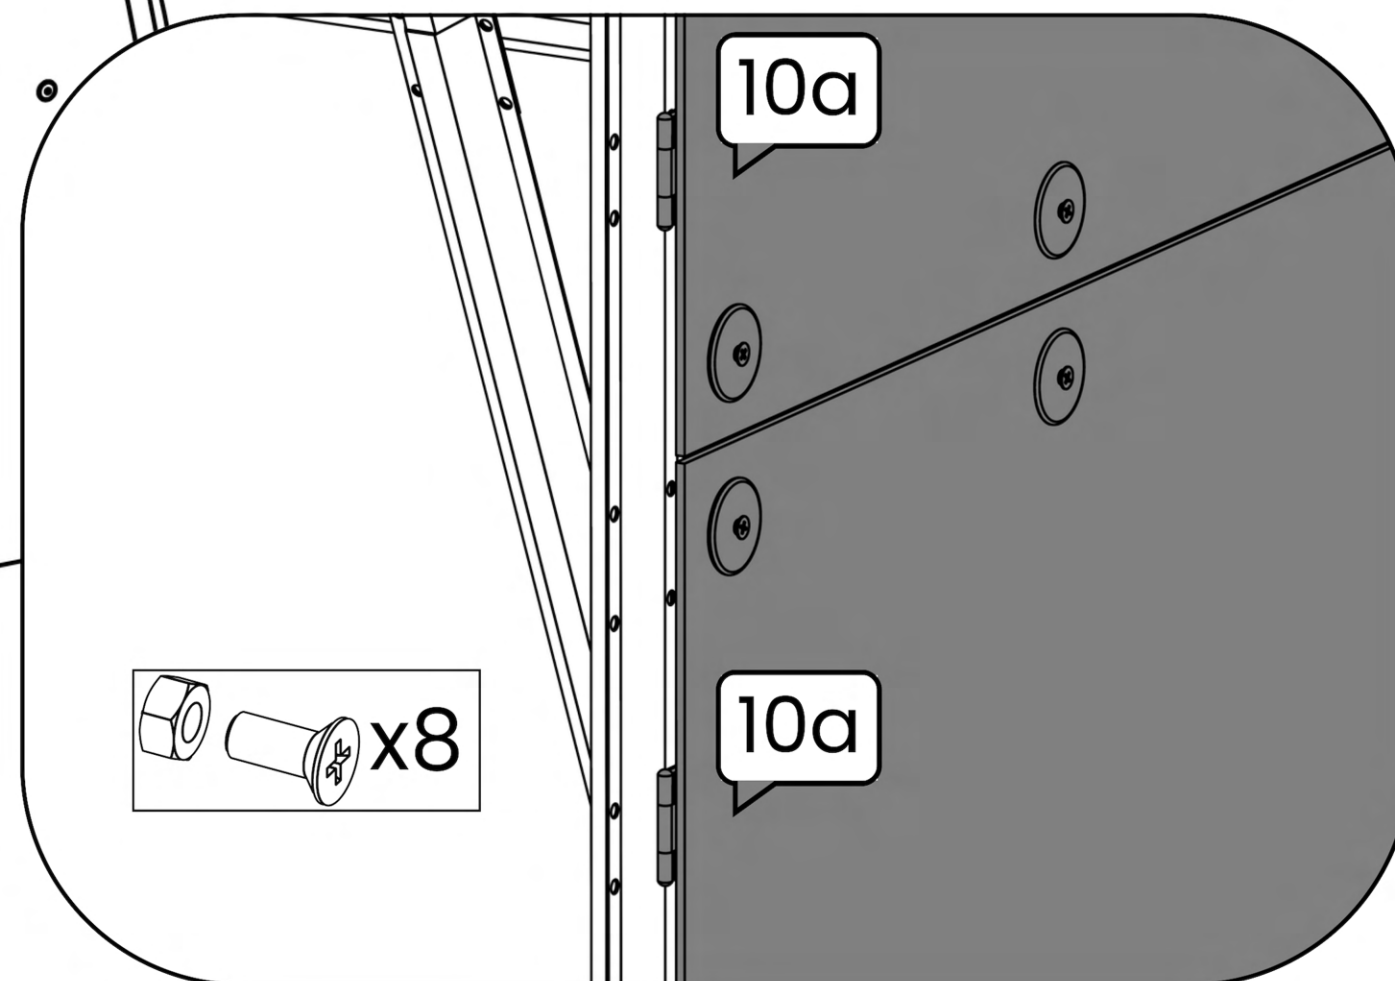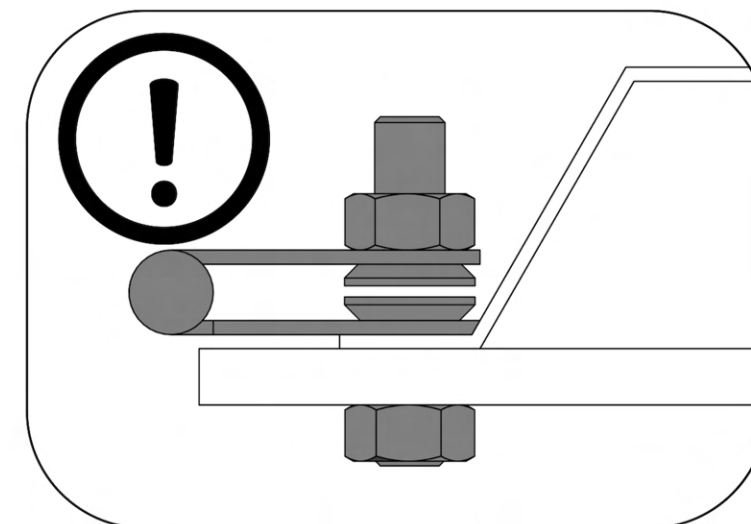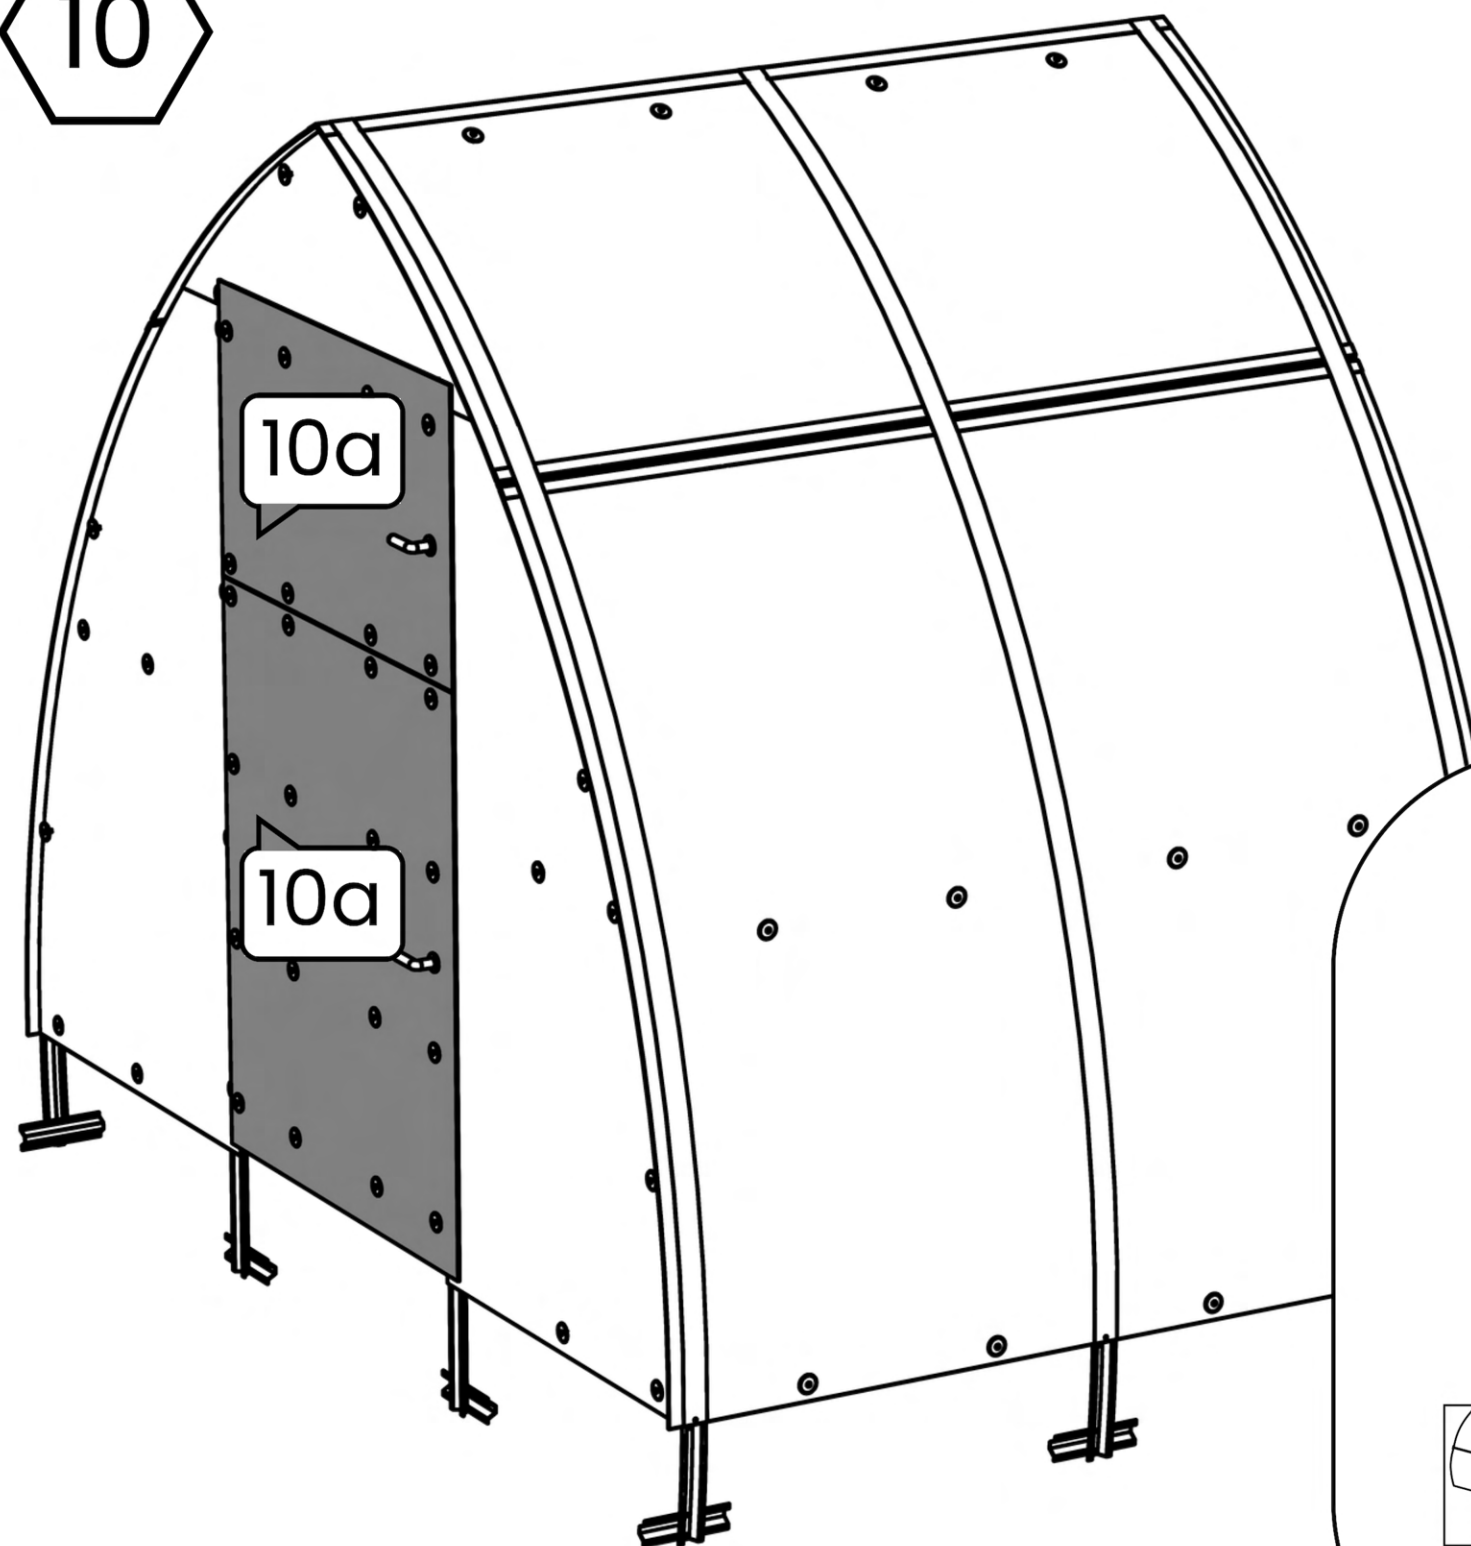

10

